

by (signify

Shine & SilkSpace Definition

 
ID-33 & ID-42

System Overview




These instructions review how to install recessed Shine and SilkSpace Definition fixtures. Please refer to layout drawings supplied by Ledalite in conjunction with these installation instructions. The graphic below shows the components required to install a run of Shine and SilkSpace Definition recessed fixtures in T-Grid and drywall ceilings.

IMPORTANT: Read all instructions including fixture/sensor wiring AND mechanical details before beginning installation.



Standalone Installation Instructions Imperial & Metric Sizes


Preparing fixtures for mounting

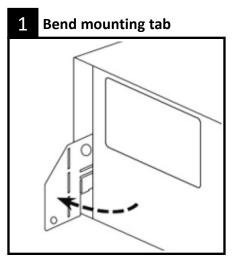

Bend out mounting tab 90° on each corner.


2 Adjust height of tab

Use side cutters to adjust each tab to height of T-Grid.

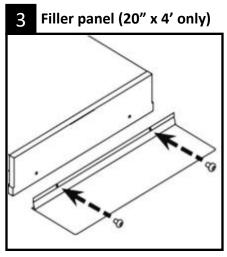


If installing in a 20"x60" T-Grid ceiling, attach filler panels to ends of the housing using supplied screws, as shown above.

Mounting in a T-Grid ceiling

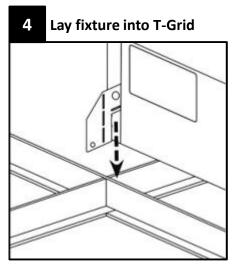


Lay fixture into T-Grid.

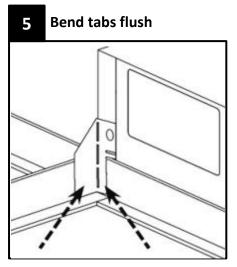


Bend tabs flush against T-Grid in order to clear for ceiling tile.

6 Fasten fixture to T-Grid

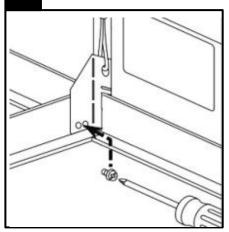


Use #8x1/4" sheet metal screws to fasten fixture to T-Grid and use a hanger wire to tie off appropriately in accordance with local building codes. (Screws and hanger wires supplied by others).

Mounting in a drywall ceiling

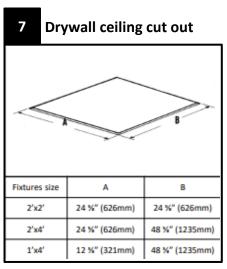

Cut a hole in the drywall according to the dimensions in the table above.

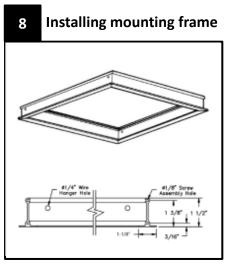


Insert mounting frame into hole and secure as showing in step 9.

9 Mounting options Wood Frame Hanger Wire Wood Frame Frame Dywait Dywait Wood frame and screws supplied by others.

Secure mounting frame by screwing to wood frame or attaching hanger wires.


Making electrical connections & lens installation

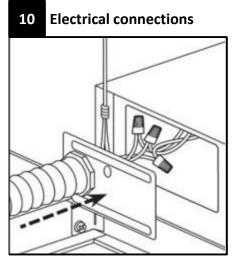

Make all electrical connections to the fixture. For flex whip option, see step 11.

11 Flex Whip (optional)

Optional flex whip is prewired inside fixture. Remove packaging and insert snap-in fitting into wiring cover and complete electrical connections at other end of whip.

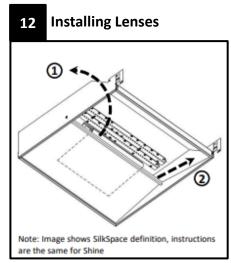

- 1. Remove & recycle cardboard shipping insert holding lenses in place.
- 2. Slide second lens across to enclose in fixture cavity.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interreference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

ļ

ATTENTION: Install in accordance with local and national building and electric codes.



© 2021 Signify Holding. All rights reserved. The information provided herein is subject to change, without notice. Signify does not give any representation or warranty as to the accuracy or completeness of the information included herein and shall not be liable for any action in reliance thereon. The information presented in this document is not intended as any commercial offer and does not form part of any quotation or contract, unless otherwise agreed by Signify. Signify North America Corporation 400 Crossing Blvd, Suite 600 Bridgewater, NJ 08807 Telephone: 855-486-2216 Signify Canada Ltd. 281 Hillmount Road, Markham, ON, Canada L6C 2S3 Telephone: 800-668-9008

All trademarks are owned by Signify Holding or their respective owners