


by **§ignify**

Signify North America Corporation 200 Franklin Square Drive Somerset, NJ 08873 Telephone 855-486-2216

Signify Canada Ltd. 281 Hillmount Road, Markham, ON, Canada L6C 2S3 Telephone 800-668-9008

INSTALLATION INSTRUCTIONS: MODULAR HUB SYSTEM

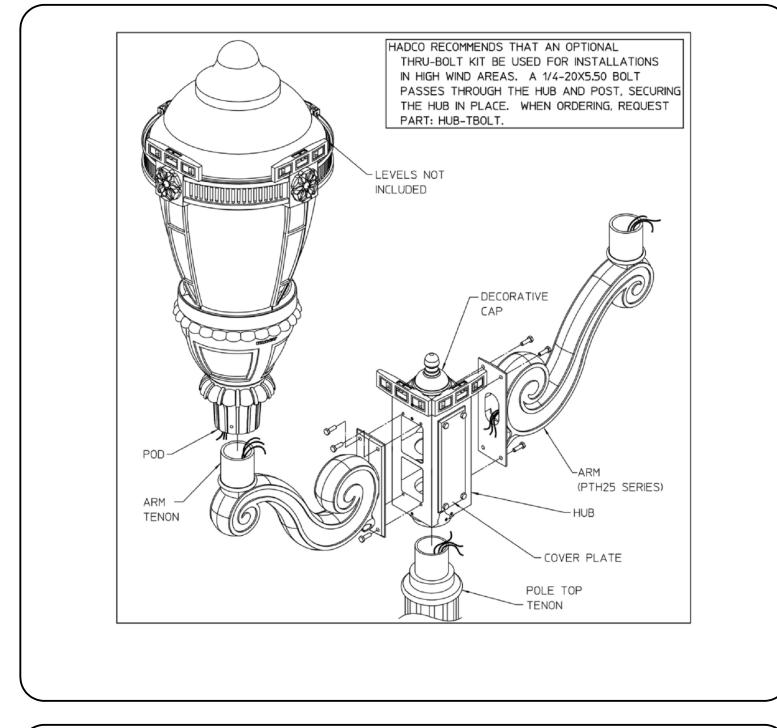

This fixture is intended for installation in accordance with the National Electrical Code and local code specifications. Failure to adhere to these codes and instructions may result in serious injury and/or damage to the ballast and void the warranty. These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency related to installation, operation, maintenance, or mounting situation. Should specific problems occur that are not addressed by these instructions, contact your Sales Representative or distributor for assistance. Retain these instructions for future reference.

There are multiple ways to install this lighting system. Regardless of the approach used, the hub and fixtures must be leveled after assembling fixture and all fasteners must be torqued to the values specified in these instructions.

CAUTION

- 1. The electrical power must be disconnected from the fixture before installing, servicing, or relamping the fixture.
- 2. These directions must be read carefully and adhered to. Failure to do so may result in injury, damage to the fixture, and void the warranty.

TOOLS REQUIRED


TOOL	FASTENER	TORQUE	
1/8" Allen wrench	5/16-18 set screw	80 in.lbs.	
1/2" Socket wrench	5/16-18 hex bolt	132 in.lbs.	
Torque wrench			
Level			


INSTALLATION

STEP 1: MOUNT ARMS/COVER PLATES

NOTE: DO NOT INSTALL LAST COVER/ARM UNTIL WIRES HAVE BEEN CONNECTED.

FOR EACH ARM OR COVER PLATE					
TOOL	FASTENER	QTY	TORQUE		
1/2" socket wrench	5/16-18 hex bolt	4	132in.lbs.		
Torque wrench					
Level					

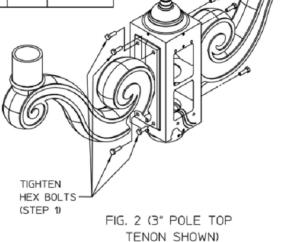

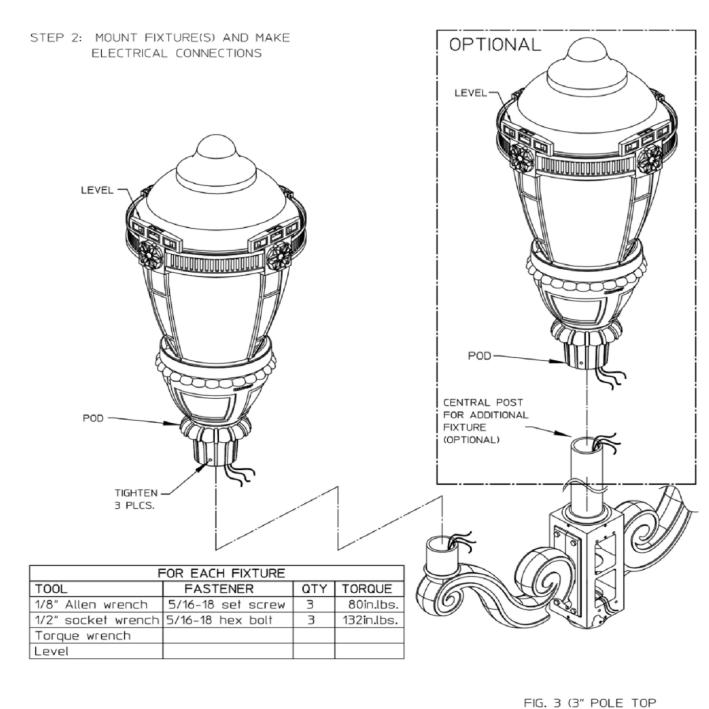

TENON SHOWN)

STEP 3: MOUNT ON AND CLOSE TO I TOOL 1/8" Allen wrench 1/2" socket wrench Torque wrench Level	HUB 10UNT AND CLOSE F FASTENER 5/16-18 set screw	IUB QTY TOR note 80	ECTIONS, RQUE in.lbs. in.lbs.		TIGHTEN TIGHTEN
	G (4" POLE TOP ENON SHOWN)	-TIGHTEN 4 PLCS.		TIGHTEN- 4 PLCS. FIG. 5 (3" P TENON S	TIGHTEN 3 PLCS.
STEP 4: LEVEL HUB TOOL 1/8" Allen wrench 1/2" socket wrench Torque wrench Level	FOR EACH FIXTURE FASTENER 5/16-18 set screw	QTY TOR 3 80	ALL FASTE ROUE in.lbs. in.lbs.	ENERS	
		LEVEL H AND FIX			

1