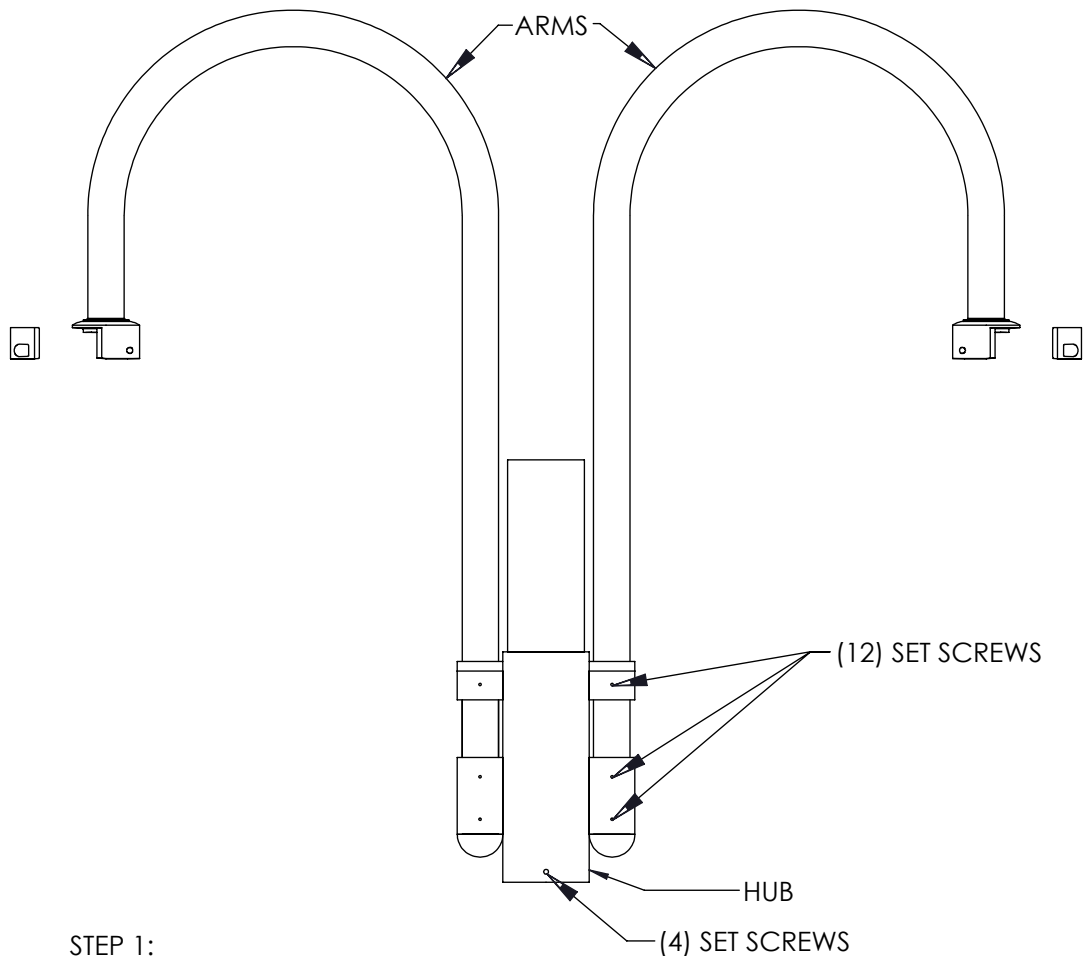


HADCOby **Signify**Signify North America Corporation
200 Franklin Square Drive
Somerset, NJ 08873
Telephone 855-486-2216Signify Canada Ltd.
281 Hillmount Road,
Markham, ON, Canada L6C 2S3
Telephone 800-668-9008**INSTALLATION INSTRUCTIONS:
HFP520 ARM**

STEP 1:
INSTALL ARMS INTO HUB.

STEP 2:
TIGHTEN SET SCREWS TO HOLD ARMS TO HUB..
NOTE: MAKE SURE ARMS ARE VERTICAL AND PARALLEL TO EACH OTHER.

STEP 3:
PROPERLY CONNECT WIRING FROM ARM TO SUPPLY WIRE FROM POLE.

STEP 4:
SLIDE HUB OVER TOP OF POLE.

STEP 5:
TIGHTEN SET SCREWS TO HOLD HUB TO POLE.



This fixture is intended for installation in accordance with the National Electrical Code and local code specifications. Failure to adhere to these codes and instructions may result in serious injury and/or damage to the ballast and void the warranty. These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency related to installation, operation, maintenance, or mounting situation. Should specific problems occur that are not addressed by these instructions, contact your Sales Representative or distributor for assistance. Retain these instructions for future reference.