

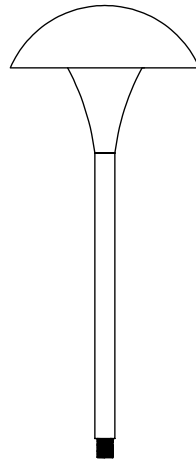


**HABCO**by **Signify**Signify North America Corporation  
200 Franklin Square Drive  
Somerset, NJ 08873  
Telephone 855-486-2216Signify Canada Ltd.  
281 Hillmount Road,  
Markham, ON, Canada L6C 2S3  
Telephone 800-668-9008**INSTALLATION INSTRUCTIONS:  
120V HINGED PATHLIGHTS**

MU5

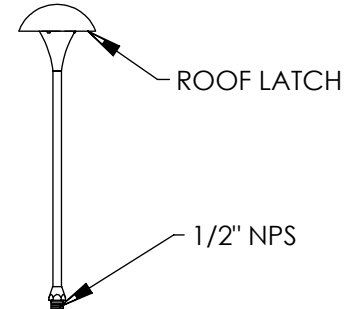

TR5

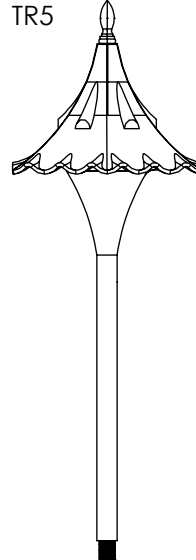

The following lamps may  
be used in these fixtures:

|                       |
|-----------------------|
| 100W A19 Incandescent |
|-----------------------|

|                      |
|----------------------|
| 90W A19 Incandescent |
|----------------------|

|                      |
|----------------------|
| 75W A19 Incandescent |
|----------------------|

|                      |
|----------------------|
| 60W A19 Incandescent |
|----------------------|


|                      |
|----------------------|
| 50W A19 Incandescent |
|----------------------|

**! SAFETY WARNING:**

ALWAYS TURN FIXTURE OFF/DISCONNECT POWER AND ALLOW TO COOL BEFORE PERFORMING ANY MAINTENANCE, INCLUDING RELAMPING AND CLEANING!

**INSTALLATION INSTRUCTIONS**

1. Make sure power is turned OFF before installing or servicing fixture.
2. This fixture must be mounted to a junction box or mounting stake that is UL listed for line voltage and wet locations. Boxes B11, B12, B13, B14, and M0029, or S3 Rocket Perma-Post may be used.
3. Insert fixture wires through 1/2" NPS hole in cover of junction box (or stake cap) & screw fixture into lid or cap.
4. Connect white supply wire to white fixture wire, and black supply wire to black fixture wire using listed connectors.
5. Attach junction box lid to junction box (or stake cap to stake) being careful not to pinch wires.
6. Unlatch roof and swing it up to access socket; roof is hinged to fixture and need not be removed.
7. Install specified lamp. (Not included.) Glass lens may be removed if desired for easier lamp installation/relamping.
8. Replace lens, if removed, and relatch roof.
9. Turn power ON.

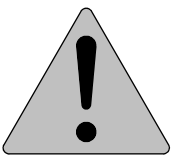

This fixture is intended for installation in accordance with the National Electrical Code and local code specifications. Failure to adhere to these codes and instructions may result in serious injury and/or damage to the ballast and void the warranty. These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency related to installation, operation, maintenance, or mounting situation. Should specific problems occur that are not addressed by these instructions, contact your Sales Representative or distributor for assistance. Retain these instructions for future reference.