
 
 
 











CraneMaster LED Flood


BVP662CR/BVP665CR

  Mounting instructions / 安装说明书





Type 型号	LEDs	Control method 控制方式	Power 功率 (W)	CCT 色温	Lens 透镜	Class	S.Cx X m	kg
BVP662CR 84LED202	84	Fix	100	2700 3000 4000 5700	NB S6 SMB SWB	I	0.129	12.5
BVP662CR 84LED295	84	Fix	150				0.129	12.5
BVP662CR 84LED390	84	Fix	200				0.129	12.5
BVP665CR 168LED295	168	Fix	300				0.256	20
BVP665CR 168LED390	168	Fix	400				0.256	20
BVP662CR 84LED203	84	DALI	100				0.129	12.5
BVP662CR 84LED298	84	DALI	150				0.129	12.5
BVP662CR 84LED390	84	DALI	200				0.129	12.5
BVP665CR 168LED295	168	DALI	300				0.256	20
BVP665CR 168LED390	168	DALI	400				0.256	20
BVP662CR 84LED201	84	I-10V	100				0.129	12.5
BVP662CR 84LED295	84	I-10V	150				0.129	12.5
BVP662CR 84LED390	84	I-10V	200				0.129	12.5
BVP665CR 168LED295	168	I-10V	300				0.256	20
BVP665CR 168LED390	168	I-10V	400				0.256	20

以上为标准产品参数，具体产品参数见产品标签

 The size of the lamp is subject to the actual measurement of the physical object.
灯具尺寸以实物试尺寸为准

Unit: mm
单位: mm

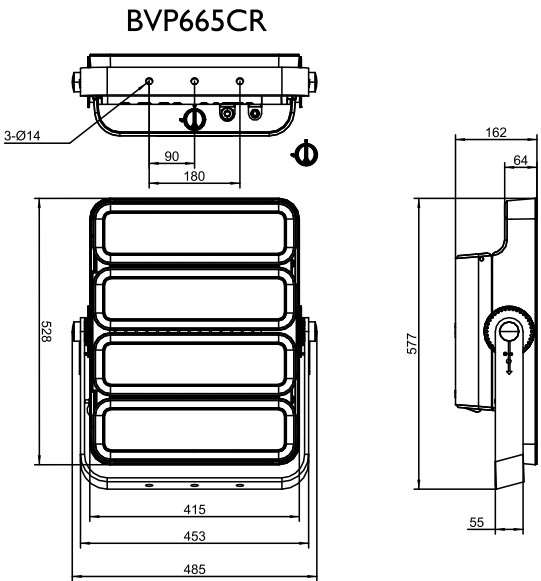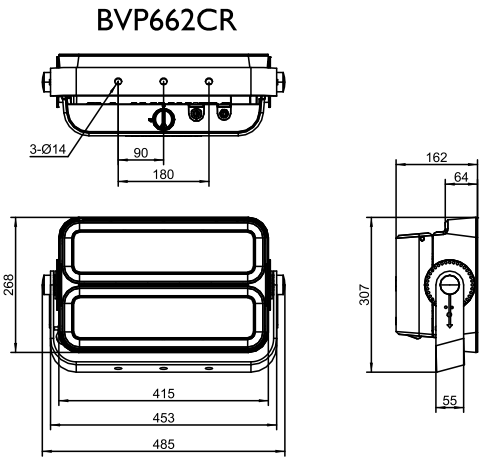

Signify (China) Investment Co., Ltd.
Building No. 9, Lane 888 Tianlin Road,
Minhang District, Shanghai, China
Postalcode: 200233
昕诺飞（中国）投资有限公司
中国上海市闵行区田林路888弄9号楼
邮编：200233



PHILIPS

Philips and the Philips shield emblem are registered trademarks of Koninklijke Philips N.V.

Install instruction

安装说明

Install the luminaire according to the national regulation and make sure it that will not fall off
按国家法规安装灯具并确保灯具不会坠落

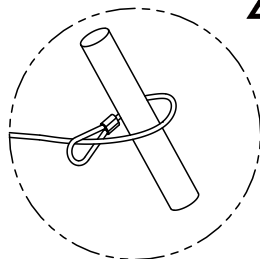
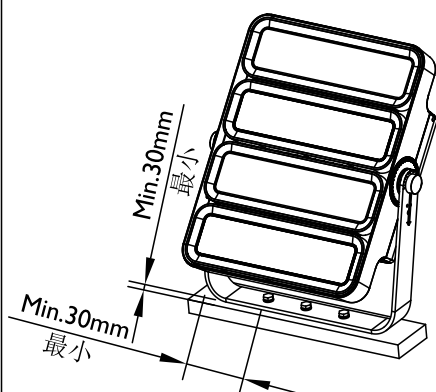


Another end being fixed to safe and reliable devices.
另一端被固定到安全和牢固可靠的装置上。



Installation of Signify safe chain 安装Signify安全链

1. No sharp edge on the interface (bracket or hole) of mounting side.
安装侧接口无锐边(支架或孔)
2. For below status, must replace the safe chain by a new one instantly:
发现下面情况之一, 安全链必须由一根新的安全链替换。
 - a, The safe chain was tightened one time by luminaire falling, 安全链承受过一次灯具坠落负荷绷紧。
 - b, Part of steel wire was broken;
安全链钢丝有部分断裂损坏。
 - c, While replace the luminaire, the safe chain is a falling protector, not allowed to suspend the luminaire by a long time.
安全链是防坠落保护器具, 在替换灯具期间不允许长时间悬挂灯具。

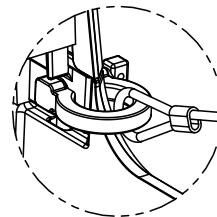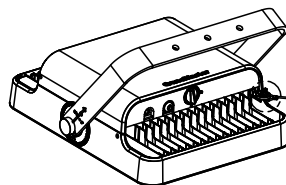

Signify Safety chain (No supplied in the luminaire) is necessary under strong vibration work condition such as Harbour, Industry, Mining and so on.

灯具安装在有振动的环境譬如港口、工业或矿业作业等环境下, Signify安全链是必须要安装的。Signify在灯具中不提供此安全链。




* No Supplied for fixing bolts, nuts and washers by Signify
Signify不提供固定螺栓、垫圈和弹垫




Adjusting angle of luminaire

灯具调整角度

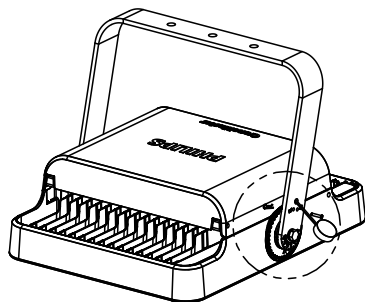


2.Remove the R-shaped card pins on both sides
取出两侧R型卡针

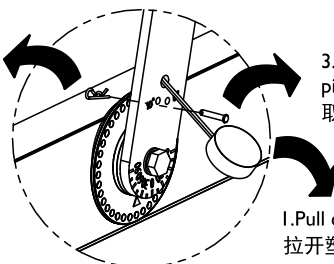

3.Remove the positioning pins on both sides
取出两侧定位销


1.Pull caps out at two sides
拉开塑料耳套

Angle 10° adjustment positioning hole
角度10° 调节定位孔

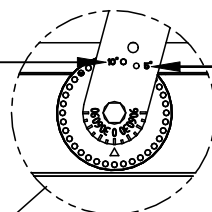


Angle 5° adjustment positioning hole
角度5° 调节定位孔

6.Insert the R-shaped card pins on both sides
插入两侧R型卡针

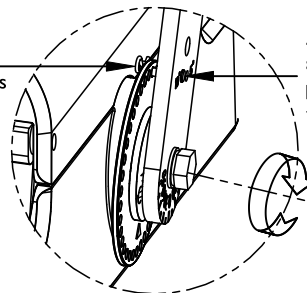


5.Adjust the appropriate angle and insert the positioning pins on both sides
调整合适角度插入两侧定位销

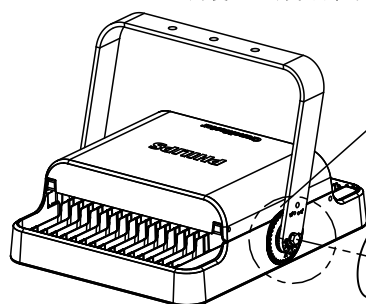

4.Unlock bolts at two sides for adjusting angle
调整角度时先松开两侧螺栓

7.After positioning the angle, tighten the bolts on both sides
角度定位好后旋紧两侧螺栓
M10 (2x) 50N.m

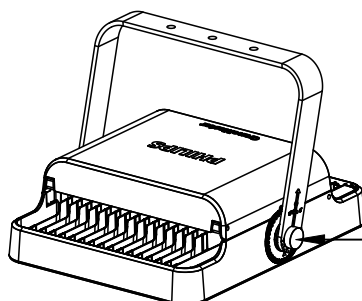

8.Put two caps back on the bolts
将两侧塑料耳套套入螺栓上


3



Recommended




Not recommended

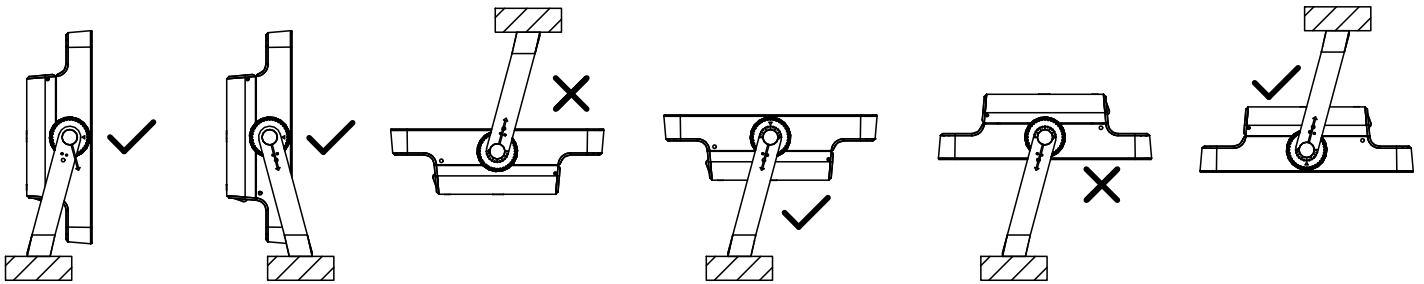

4

Power cable connection 供电电缆连接

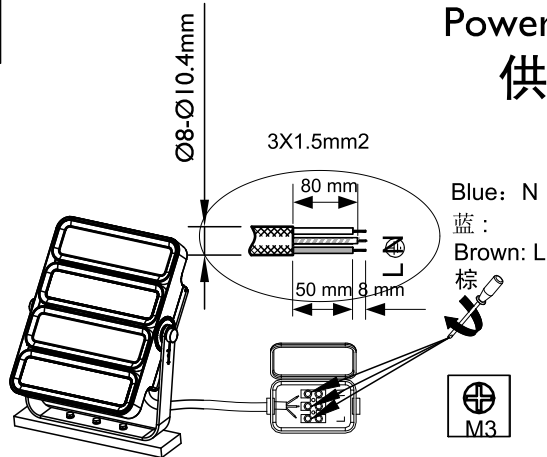


Recommend: Above IP66 Connection
box推荐: IP66以上接线盒




Notice: Connection box is not provided by Signify.
注意: Signify不提供接线盒

Notice: Correct connection for polarities
注意: 正确的极性连接

BVP662CR

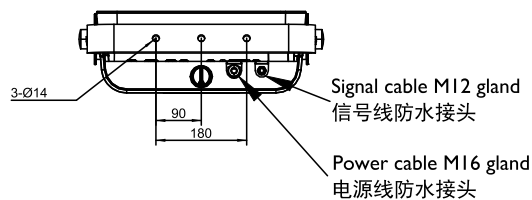


60245IEC57
3 pole 1.5mm2 Multi-core with rubber insulated layer
3芯橡胶护套软线

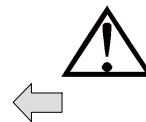


Warning: Water proof is needed for cable connection, if without proper water proof, the water ingress will cause luminaire short circuit or other failures. Water proof connection box is recommend, which is not lower than IP66.

警告: 电缆线防水措施是必须的, 如果没有提供恰当的防水措施, 水进入灯具会引起短路或其它故障。推荐防水接线盒等级不能低于IP66。

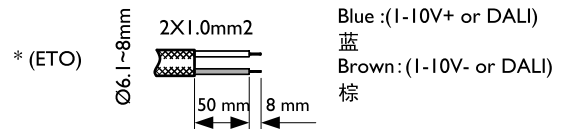

60245IEC57
2 pole 1 mm2 Multi-core with rubber insulated layer
2芯橡胶护套软线


BVP665CR

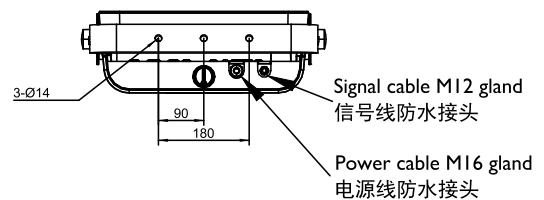


5

Open Gear cover 打开上盖


1. Press the cover
向下按压上盖

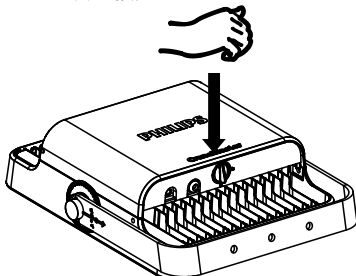

2. unlock the knob
旋开旋钮

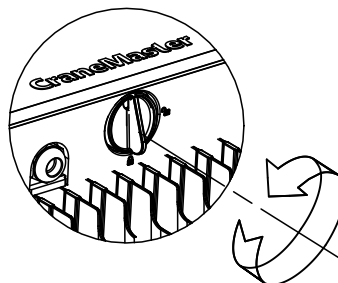


3. Open the cover
打开上盖

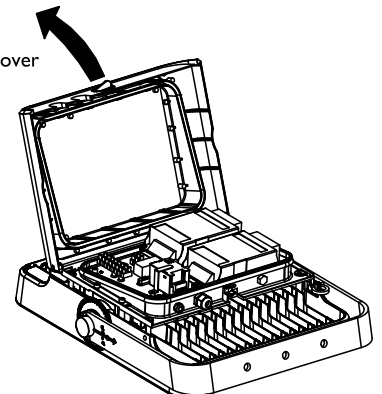


Lock Gear cover 锁紧上盖


1. Close the cover
合上上盖

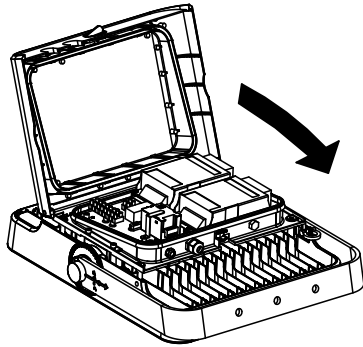

2. Press the cover
手压上盖

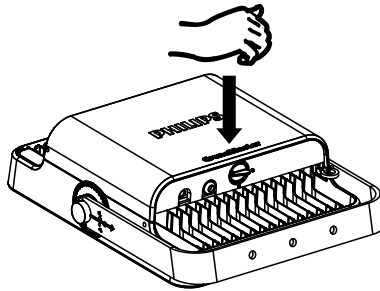

3. Turn the knob
and lock the cover
旋紧旋钮，锁紧上盖。

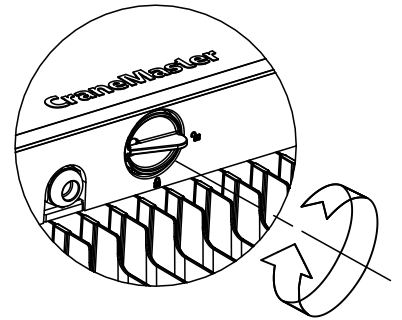



Warning: Put gasket in order then
press down the gear cover and
rotate the knob to locking position.
警告：确认密封带放在恰当的位置后压上盖，然后旋转旋钮锁紧上盖。

Replacement of driver and SPD 替换损坏的驱动和SPD


remove old components
移除损坏的零件



 fix new components
用于替换的新零件

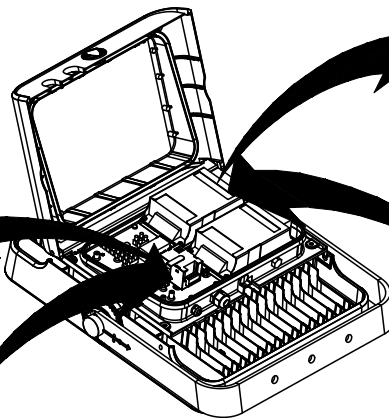

remove old components
移除损坏的零件

 

fix new components
用于替换的新零件

