

BrightStar

BVS21 I/BVS22 I


Mounting instruction/安装说明书

V1.0




Product Type 产品型号	Power 功率	Lumen Output 流明输出	Voltage 电压	CCT 色温	kg
BVS21I LED104	80W	10400lm	220-240V~ 50/60Hz	840 : 4000 K	2.8
BVS21I LED156	120W	15600lm		850 : 5000 K	2.8
BVS21I LED195	150W	19500lm		857 : 5700 K	2.8
BVS22I LED104	80W	10400lm			3.1
BVS22I LED156	120W	15600lm			3.1
BVS22I LED195	150W	19500lm			3.1

BVS22I

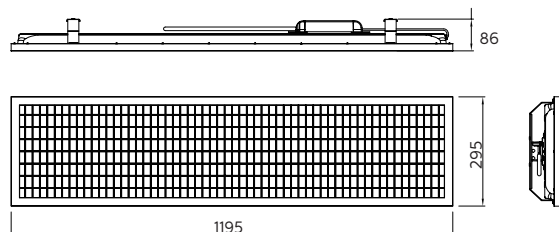


BVS21I

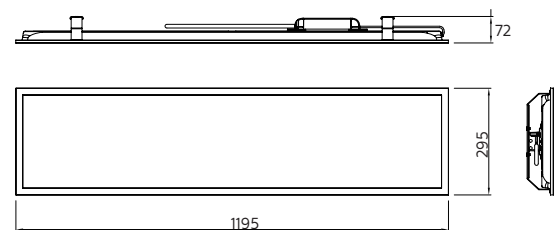


可选附件需另外购买/Optional attachments need to be purchased separately

单灯墙装/吊装可调支架/Single-lamp wall-mounted/suspended adjustable bracket
911401902487 BVS21I Accessory SA/WA type

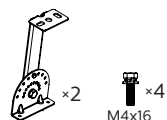

V型可调支架/V-shaped adjustable bracket
911401902486 BVS21I Accessory VA type

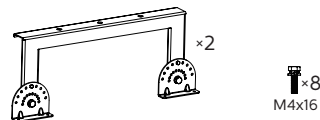

Signify (China) Investment Co., Ltd.
Building No. 9, Lane 888 Tianlin Road,
Minhang District, Shanghai, China
Postal code: 200233
斯诺飞(中国)投资有限公司
地址: 上海市闵行区田林路888弄9号楼
邮编: 200233



PHILIPS

Philips and the Philips shield emblem are registered trademarks of Koninklijke Philips N.V.




单灯墙装/吊装安装方式

Single-lamp wall-mounted/suspended installation method


支架安装方式/Bracket installation method

整灯定位选择支架螺母孔位
For the positioning of the entire lamp,
select the nut hole position of the bracket

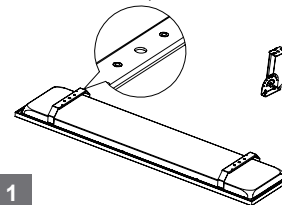

1


支架之间由螺丝固定
支架方向为两侧对称
The brackets are fixed by screws
The direction of the bracket is
symmetrical on both sides

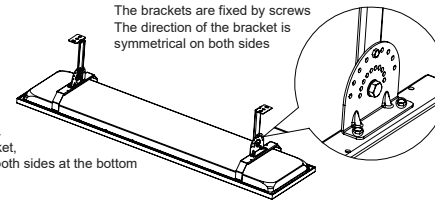

支架定位选择底部两侧圆孔
When positioning the bracket,
select the round holes on both sides at the bottom


角度调节方式/Angle adjustment method

调节角度需将0° 刻度上螺丝拆卸
中间螺钉拧松
To adjust the Angle, the screw on
the 0° scale needs to be removed
Loosen the middle screw

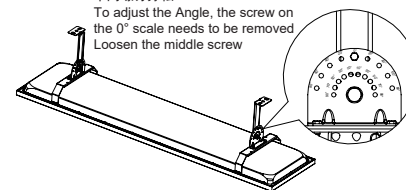


2

将刻度盘调至所需角度并用螺钉固定
(如刻度盘上无所需角度, 直接拧紧中间螺丝即可)
Adjust the dial to the desired Angle and fix it with screws
If there is no required Angle on the dial,
simply tighten the middle screw.

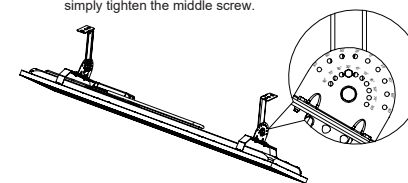


墙装安装方式/Wall-mounted installation method

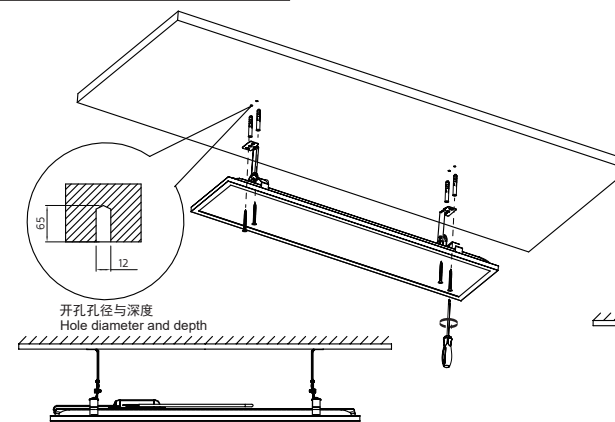


3

 角度0° 示意图
Schematic diagram of Angle 0°




角度调节后示意图
Schematic diagram after Angle adjustment

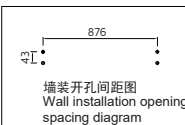


墙装开孔间距图
Wall installation opening
spacing diagram

吊装安装方式/Hoisting and installation method

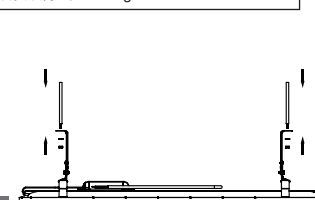

4

 

吊装吊杆间距图
Hoisting boom spacing diagram

吊杆插入中间圆孔固定
The boom is inserted into the middle
circular hole for fixation

