




Introduction to this guide

Thank you for choosing the Signify EasyAir SNM212 MC. This document provides necessary information to design in this product into a luminaire and configure it to suit specific applications. This design-in guide covers sensor functionality, mechanical mounting, wiring details, application notes and frequently asked questions. For sensor specifications, please see the datasheet.

More information or support

For more information or support, please consult your local Signify sales representative or visit:

<https://www.lighting.philips.co.uk/oem-emea/products/connected-lighting/masterconnect>

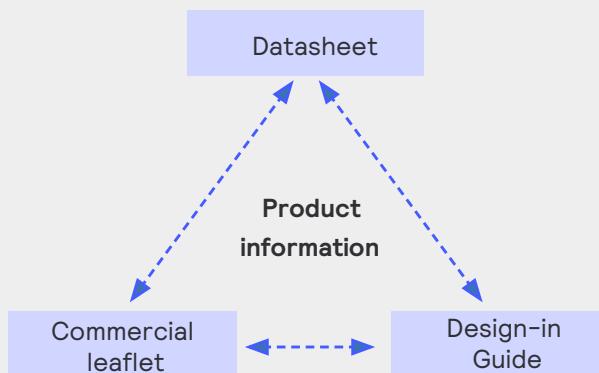

Contents

- 01 **Introduction to this guide**
More Information or support
- 02 **Warnings and instructions**
- 03 **Introduction of EasyAirSNM212 MC**
- 04 **Mechanical design-in**
How to install the sensor
Using the installer code labels
- 05 **Presence detection**
Motion detector
Lens shield
- 07 **Daylight based regulation**
Daylight sensor
Photosensor spatial response
Photosensor spectral response
Daylight regulation and calibration
- 09 **Other**
Torchlight triggering
Wire distance for remote mounting
Luminaire-to-luminaire distance
Recommendations to design-in
 - SNM212 MC with good RF signal
 - SNM212 MC with multiple LED drivers (1:N application)



Disclaimer

Warnings and instructions

- EasyAir SNM212 MC is a mid-bay sensor that must be used with a D4i or SR driver, e.g. a Xitanium SR driver, or with the Xitanium SR Bridge.
- Do not apply mains power directly to the sensor.
- Make sure that the sensor, especially the occupancy detection lens, is not damaged during shipment and handling.
- The application area of EasyAir SNM212 MC is an indoor mid-bay environment, typically production areas, transition areas or warehouses. Such application areas should be normally ventilated.
- The EasyAir SNM212 MC has no protection against aggressive chemicals.
- Make sure that there is no metal close to a side of EasyAir SNM212 MC (<10mm). SNM212 MC can be mounted on a metal surface, but metal objects next to the side of the sensor compromise RF communication.
- External infrared sources can have a negative impact on occupancy detection.
- Ensure that the sensor area defined for occupancy detection is not blocked by any obstacles. Misalignment of sensor might influence occupancy detection and daylight regulation.

Introduction of EasyAir SNM212 MC



Signify EasyAir SNM212 MC

The Signify EasyAir SNM212 MC is a compact sensor for wireless per-luminaire control of mid-bay luminaires. It combines occupancy sensing, daylight harvesting and task tuning in a single package for easy OEM luminaire assembly. EasyAir SNM212 MC operates with the established D4i open standard digital interface to make a simple two-wire connection between sensor and driver, thus eliminating the need for multiple components and auxiliary devices. The result is a cost-effective and easy-to-design-in solution ideal for energy-savings. An intuitive app called Philips MasterConnect allows for quick and easy commissioning via Bluetooth along with configuration during and after installation.


EasyAir SNM212 MC allows luminaires to be grouped with each other for occupancy sharing (i.e., luminaires within a group can be programmed to remain at prescribed light levels so long as occupancy is detected anywhere in the group) and daylight depending light regulation.

The sensor is equipped with an RF antenna for Zigbee and Bluetooth Low Energy communication, a PIR occupancy sensor, a daylight sensor, IR receiver for reset and an indicator LED visible through the lens of the sensor.

Mechanical design-in

How to install the sensor

EasyAir SNM212 MC is intended to be mounted at a 22mm hole in the front side of the luminaire. It is fixed with a nut. The mounting surface must be flat. The recommended torque to tighten the nut is 2.0 Nm; the maximum torque is 5.5 Nm.

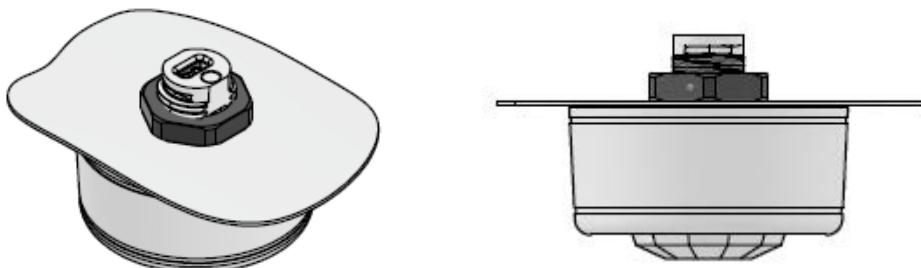

Installing sensor to luminaire

Using the installer code labels


Three labels with the ZigBee Mac address of the sensor are attached to the sensor. The labels can be used to mark the location of lights on a floorplan. The last 4 digits of the ZigBee Mac address are also shown in the MasterConnect app.

1. One label should be placed on the sensor or close to it
2. The second label can be put on the luminaire
3. The third label can be used for the floorplan





Labels with unique Zigbee Mac address

Presence detection

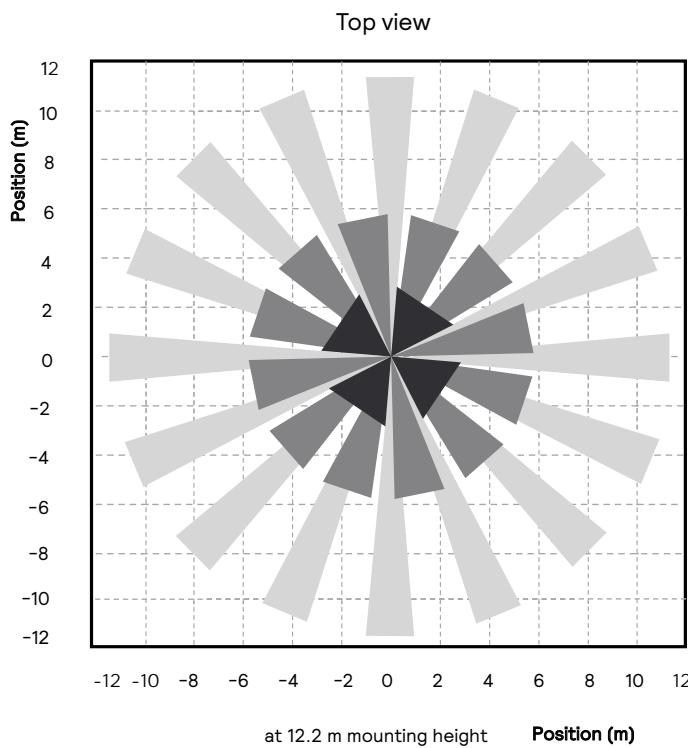

Motion detector

The occupancy sensor is a PIR (Passive Infrared) sensor that detects movement with a circular cross-area up to an angle of 39°. This PIR sensor has 3 concentric rings to help detect movement – the innermost with 4 facets, the middle with 12 facets and the outermost with 16 facets.

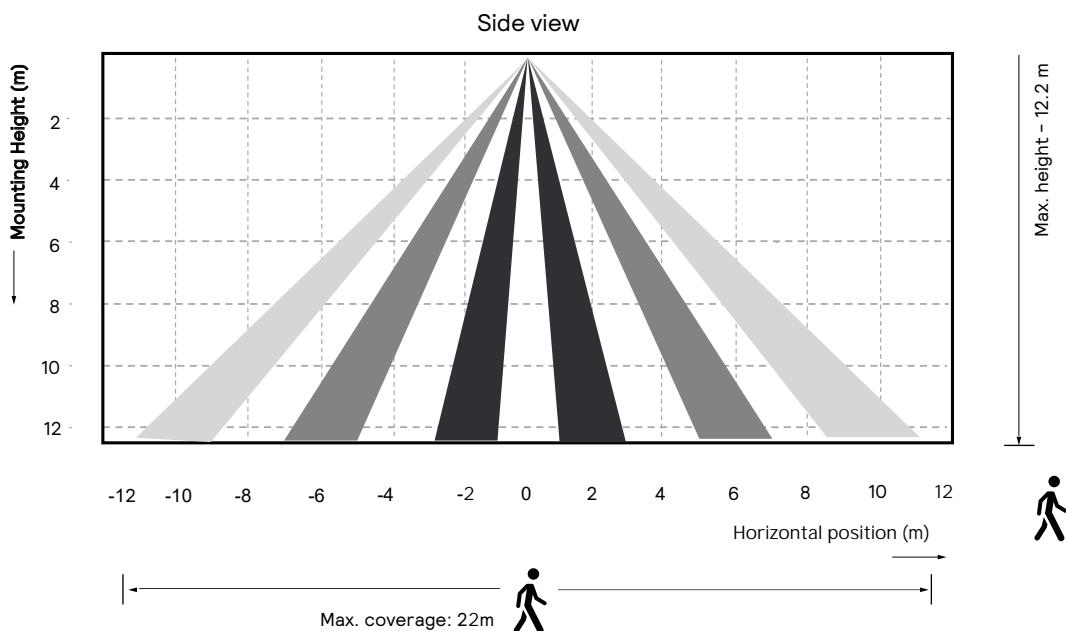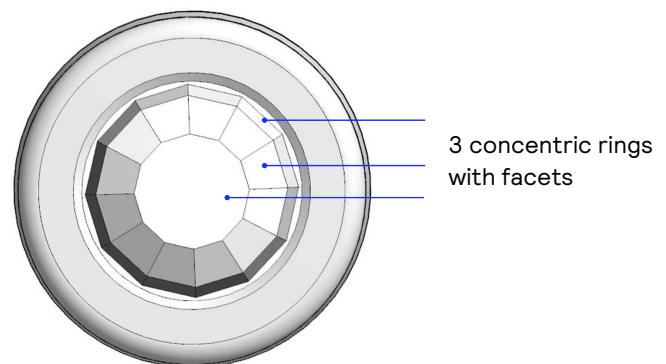

Side coverage pattern of EasyAir SNM212 MC at height of 12.2m

The occupancy coverage is based on NEMA test, an industry standard.

In the side view, it is visible that the coverage ratio of 'diameter at ground level' : 'mounting height' is at maximum 1.6:1. For example, if the mounting height is 12.2m the maximum diameter coverage is 22m.

Disclaimer:

1. In these plots, the white areas are blind spots and the detection is based on subject's motion. An idle subject may not continue to trigger occupancy detection once the hold time expires.
2. As PIR based sensing works on temperature difference between the subject and the ground level, the occupancy detection could vary due to clothing and size of subject.

Presence detection




Light shield for corridor mode



Light shield that restricts the field of view to one side

Lens shield

To restrict the field of view of the occupancy sensor a light shield – included in the box – can be clicked on. The shield needs to be configured for the application need, e.g. corridor mode or one-side view. A utility knife is recommended to cut out the parts for the opening.

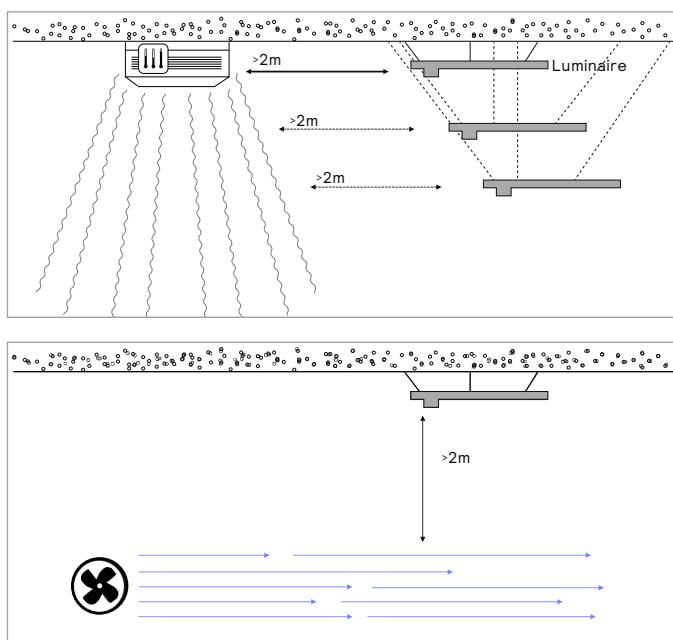

Required distances to air vents



Warning:

To avoid false triggers, place heat radiating devices outside of the monitoring cone and avoid drafts (e.g. from ventilators or heating systems).
EasyAir SNM212 MC with motion detector enabled must be mounted more than 2 meters away from air vents in all directions, see figures on the left.

Daylight based regulation


Daylight sensor

The light sensor measures the total amount of light with an opening angle of 55°, calculated from normal. The following aspects should be observed during installation:


- Minimum distance from the window – refer below graph
- Sensor should not be mounted lower than the top of the window
- Prevent light reflections from outside entering the sensor (for example sunlight reflection from a car/truck bonnet) as this will lead to incorrect light regulation.

As a guideline the formula $0.8 \times H$ can be used to calculate the minimum horizontal distance between the window and sensor whereby H is the height measured from the bottom of the window to the sensor.

Photosensor spatial response

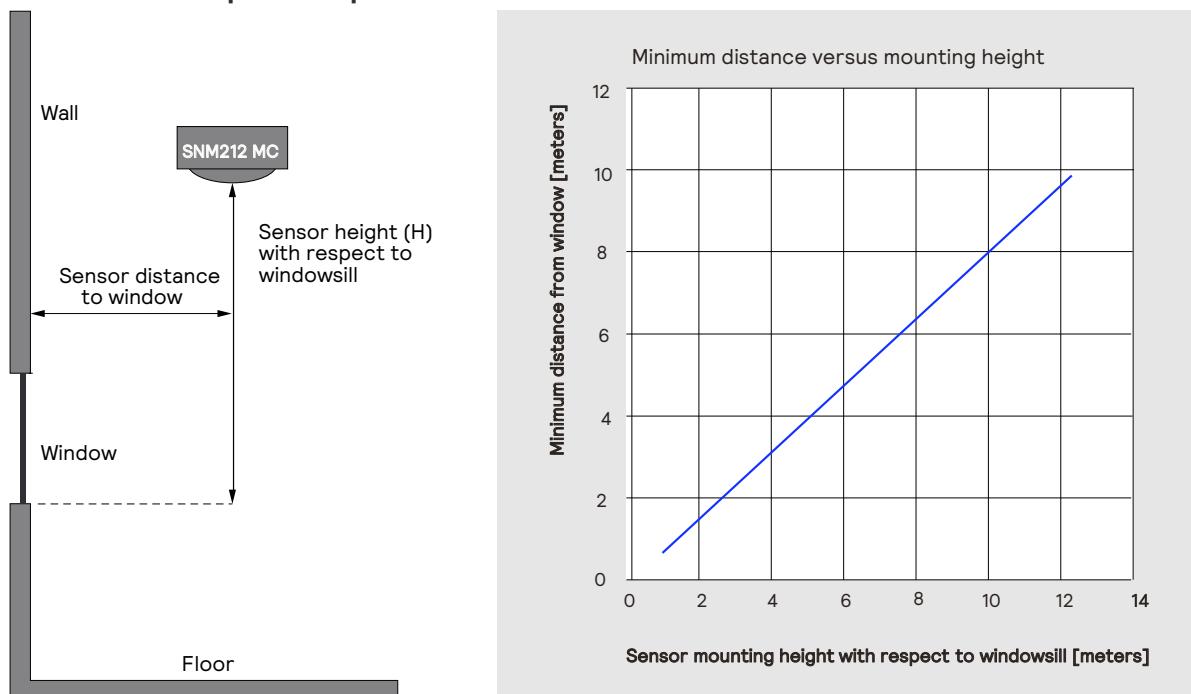

Photosensor spectral response

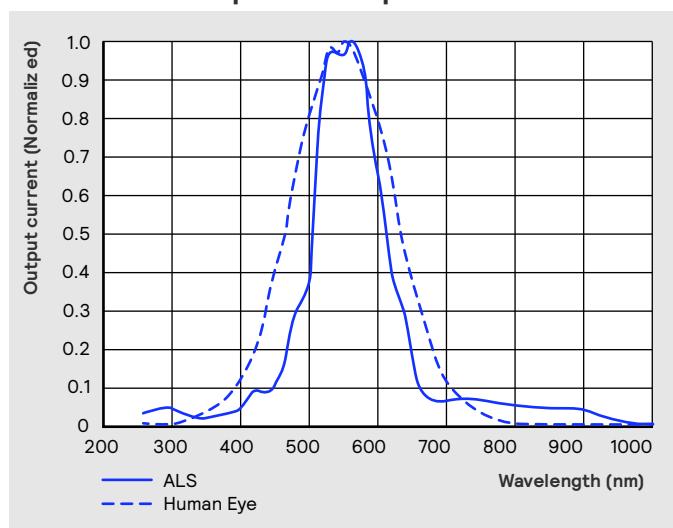

Daylight regulation and calibration

When daylight-based light regulation is enabled, the light output of a luminaire is dimmed in the presence of daylight to save energy. For full control of light levels in the working area it is recommended to calibrate the lighting system:

1. Set the luminaires' light output according to the lighting design floor plan. Illumination of the working area must be uniform. Luminaire light output can be controlled by the operating current of the luminaires and via the Eco-On level in the MasterConnect app. The lux level in the working area can be verified by a measurement performed in the absence of daylight. Make sure to have daylight regulation temporary disabled during this measurement.
2. Enable daylight regulation in the MasterConnect app and press "Calibrate daylight sensor". During the process keep the smartphone in Bluetooth range of the installation and don't walk below the sensor. The luminaires first switch off, then go to maximum light level and finally start to regulate.

Keep in mind that the lux level in the working area is kept constant only approximately in the presence of daylight. The sensor doesn't read lux levels in the working area directly but can only measure the amount of light that is reflected towards it. How much light is captured by the sensor depends on the angle of incidence of incoming daylight, on the surface properties of floor and objects in its field of view and if and how a light shield is used. The daylight sensor of SNM212 MC has an opening angle of 110°. It collects light reflections from the area right below the sensor as well as from areas further away and from illuminated walls and objects nearby the sensor. Therefore, it is recommended to properly evaluate light levels during daylight regulation. If needed deviations from the target lux level can be compensated by adjustments of the Eco-on setting. Note that changing the Eco-on setting in this case will also impact the light levels in time without daylight present.

If calibration is done in a not fully dark environment, the lux level in the working area is regulated to a value that would be obtained in the dark given the Eco-on setting.

Furthermore, please note that every change of the eco-on level or light shield does require another calibration cycle to ensure proper daylight regulation functionality.



Warning:

Make sure no objects are blocking the sensor's view and no surface reflection changes occur in the sensor's view during calibration. For example, do not position a forklift truck in the sensor view area during calibration.

Other

Torchlight triggering

When commissioning lights with the Philips MasterConnect app, SNM212 MC devices can be selected for grouping using a torchlight. See also the MasterConnect installer manual at https://www.lighting.philips.com/prof/led-electronics/masterconnect-system/masterconnect-sensors/LP_CF_9218075_EU/family.

Direct the light of the torch towards the sensor and move it over the sensor. The sensor is triggered by a sudden change from relatively low light level to a higher light level.



A torch with well defined light cone needs to be used. For applications higher than 6m a strong (military) torch is necessary. It is recommended to keep ambient light in the room low during commissioning with torchlight triggering.

Wire distance for remote mounting

In case of remote mounting of the sensor it is recommended to keep the wire distance from sensor to Xitanium SR/D4i LED driver driver less than 2 m and meet the wire gauge requirement to guarantee the performance.

Luminaire-to-luminaire distance


If multiple luminaires with EasyAir SNM212 MC are used in the same area, the arrangement should avoid that sensors are placed close to each other to minimize a sensor from “seeing” the light variation of neighbouring luminaires and reacting.

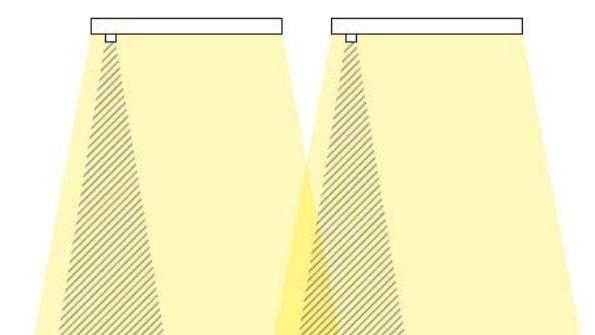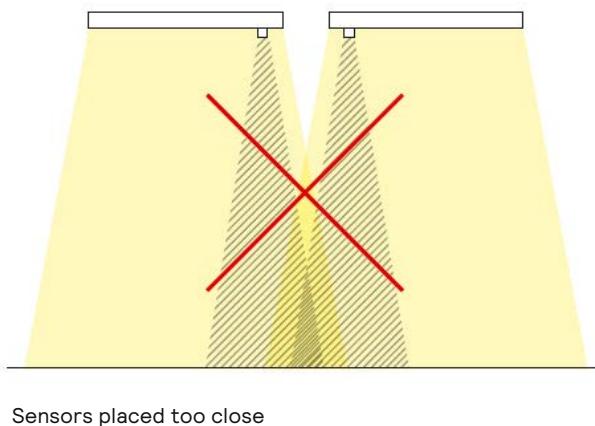

Other

Mounting outside of light cone

EasyAir SNM212 MC is mounted to the front side of the luminaire. Make sure that the sensor is placed outside of the light cone of the luminaire. Otherwise, luminaire light can tunnel through the sensor housing and impact the sensing, especially daylight regulation.

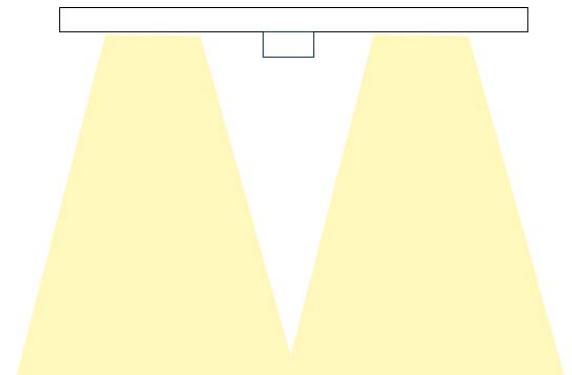

Sensor outside of light cone(s)

Recommendations to design-in SNM212 MC with good RF signal

It is recommended to keep the EasyAir SNM212 MC antenna at a distance >100mm from nearest metal sidewall to avoid a drop of RF signals. It is assumed that other side walls are further away.

SNM212 MC is designed for mounting on metal surfaces, but at the sides of the sensor metal objects can impact radio performance.



Transmission signal loss [dB] with distance to metal side wall [mm]. Closer the metal wall, higher the signal loss.

SNM212 MC with multiple LED drivers (1:N application)

When multiple Xitanium SR/D4i drivers are used in a single luminaire, they can be controlled with a single sensor.

It is also possible to use one sensor to control multiple luminaires that need to be operated at the same level. In this case DALI drivers need to be connected to the sensor via an SR-bridge.

If a single sensor is connected to drivers in different luminaires without an SR bridge, the total cable length must not exceed 15m. 2-4 of the drivers must have SR power supply enabled, but not more. The sensor cable must be clearly separated from mains cables to avoid interferences.

EasyAir SNM212 MC sends commands to all connected drivers (using DALI broadcast command); it does not have capabilities for addressing individual drivers. The light commands are sent as broadcast commands, so occupancy-/daylight-based lighting control and task tuning operate the same on all connected drivers. The readout of energy information from the driver will not function.

EasyAir SNM212 MC

MasterConnect

Disclaimer

©2026 Signify Holding B.V. All rights reserved.

Note that the information provided in this document is subject to change.

This document is not an official testing certificate and cannot be used or construed as a document authorizing or otherwise supporting an official release of a luminaire. The user of this document remains at all times liable and responsible for any and all required testing and approbation prior to the manufacture and sale of any luminaire.

The recommendations and other advice contained in this document, are provided solely for informational purposes for internal evaluation by the user of this document. Signify does not make and hereby expressly disclaims any warranties or assurances whatsoever as to the accuracy, completeness, reliability, content and/or quality of any recommendations and other advice contained in this document, whether express or implied including, without limitation, any warranties of satisfactory quality, fitness for a particular purpose or noninfringement. Signify has not investigated, and is under no obligation or duty to investigate, whether the recommendations and other advice contained in this document are, or may be, in conflict with existing patents or any other intellectual property rights. The recommendations and other advice contained herein are provided by Signify on an "as is" basis, at the user's sole risk and expense.

Specifically mentioned products, materials and/or tools from third parties are only indicative and reference to these products, materials and/or tools does not necessarily mean they are endorsed by Signify. Signify gives no warranties regarding these and assumes no legal liability or responsibility for any loss or damage resulting from the use of the information thereto given here.

01/2026
Data subject to change