

**PHILIPS**

Xtanium

LED Xtreme SR drivers



**Design-in Guide**

# Reliable and flexible Xtreme SR technology

for demanding connected LED applications

November 2025

# Contents

## Introduction to this guide

Applications	3
Information and support	3
Design-In support	3
Document overview	3

## Warning and instructions

Safety warnings and installation instructions	4
Disposal	4

## Xitanium LED Xtreme SR drivers

Xitanium LED Xtreme SR drivers and Certified Products	5
Xitanium LED Xtreme driver versions	5
Configurability interface (tooling)	5
SimpleSet	5
Sensor Ready Interface (DA+/DA-)	6
Compatibility with regular DALI and D4i devices	6
Compatibility with outdoor CMS systems	6
Auxiliary Power Supply	6
Concise feature overview	7
Energy data	8
Luminaire data	8
Use in hazardous areas	9
Driver naming	9

## Mechanical Design-In

Dimensions	10
------------	----

## Thermal Design-In

Introduction	11
Driver case temperature ( $t_c$ point)	11
How to measure $t_c$ point temperature	11
Relation between $t_c$ and ambient temperature	12
ThermalGuard	12
Driver Temperature Limit (DTL)	13
LED Module Temperature Protection (MTP)	14
MTP behavior setting	14

## Electrical Design-In

Xitanium driver operating window	15
How to select an appropriate driver	16
Programming the output current	16
Connectors	17
Mains operating conditions	17
Low and high mains voltage	17
Output open-load and short-circuit conditions	17
Excessive low mains voltage (MainsGuard)	18
Excessive high mains voltage	18
Power grids	19
Power Factor (PF)	19
DC emergency operation (DCemDim) and fusing	19
Inrush current	20
IntelliStart	20
How to determine the number of drivers per MCB	21
How to determine the number of drivers on a melting fuse	22
Surge immunity	22
Touch current	23
Electro-Magnetic Compatibility (EMC)	24
Remote mounting and EMC	24
Electrical insulation	24
EMC performance precautions	25

Sensor Ready interface (DA+/DA-)	26
Built-in SR bus Power Supply Unit (SR PSU)	26
Luminaire control devices	26
Rules for building an SR system	27
Digital SR communication	28
Standby power consumption	28
Auxiliary Power Supply (+24V)	28

## Driver configuration

Introduction	29
More information on using MultiOne	29

## Control features

Adjustable Output Current (AOC)	30
Adjustable Light Output (ALO)	30
LED Module Temperature Protection (MTP)	30
Driver Temperature Limit (DTL)	30
Constant Light Output (CLO)	31
End Of Life (EOL)	31
Adjustable Start-up Time (AST)	31
DC emergency dimming operation (DCemDim)	31
Dynadimmer	32
Dynadimmer working principle	32
Dynadimmer attention points	33
SR Power Supply Unit (SR PSU)	35
Last gasp	35
Heartbeat	35

## Appendix: FlexTune CCT control

Output current dependencies	45
OEM Write Protection (OWP)	46

## Compliance and Approval

System disposal	47
-----------------	----

## Disclaimer

# Introduction to this guide



Xitanium LED Xtreme SR drivers

Thank you for choosing Philips Xitanium SR LED Xtreme drivers. In this guide you will find the information needed to integrate these drivers into a LED luminaire or LED system.

This edition describes the configurable Xitanium LED Xtreme SR drivers. We advise you to consult our websites for the latest up-to-date information.

## Applications

Philips Xitanium LED Xtreme SR drivers reduce complexity and cost of wireless connected lighting systems in outdoor and industrial applications. If you use Philips LED Xtreme SR drivers in combination with Philips Sensors and Philips LED modules then specific design-in guides are available from the below mentioned technology websites for further support.

## Information and support

Please consult your local Signify office or visit:  
[www.philips.com/oem](http://www.philips.com/oem)  
[www.philips.com/multione](http://www.philips.com/multione)

## Design-in support


Dedicated design-in support from Signify is available on request. For this service please contact your Signify representative.

## Document overview

In order to provide information in the best possible way, Signify's philosophy on product documentation is the following.

- Commercial leaflet contains product family information & system combinations
- Datasheet contains the product-specific specifications
- Design-in guide describes how the product must be used
- Driver certificates list up-to-date compliance with relevant product standards

All these documents can be found on the download page of the OEM website [www.philips.com/oem](http://www.philips.com/oem). If you require any further information or support please consult your local Signify representative.

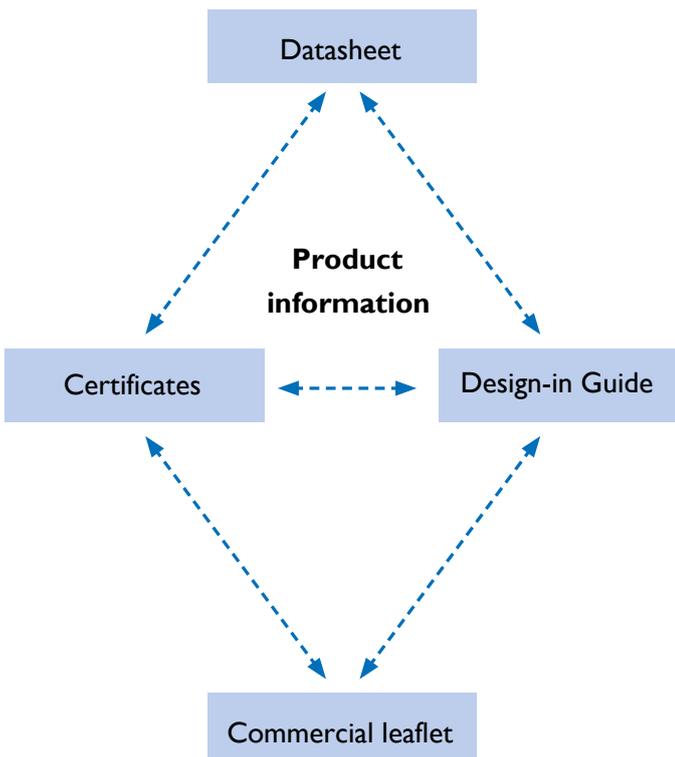

# Warnings and instructions



## Safety warnings:

- Avoid touching live parts!
- Do not use drivers with damaged housing and/or connectors!
- Do not service the driver when the mains voltage is connected; this includes connecting or disconnecting the LED module!



## Safety warnings and installation instructions, to be taken into account during design-in and manufacturing

- Do not use damaged products
- Do not use the SR interface of Xitanium LED Xtreme SR drivers in wired luminaire-to-luminaire or in wired DALI network applications. Inter- and extra-luminaire use is not supported. All SR and auxiliary supply wiring must remain within the luminaire (**intra-luminaire use**).  
Note: this does **not** apply to Xitanium LED SR *FlexTune* drivers.
- The SR PSU must be disabled in case Xitanium LED SR *FlexTune* drivers are used:
  - in wired luminaire-to-luminaire DALI applications (**inter-luminaire use**)
  - in Touch and Dim applications
- Do not connect mains voltage to the SR interface; immediate driver failure will result (*exception: Xitanium SR FlexTune drivers*).
- The luminaire manufacturer is responsible for its own luminaire design and compliance with all relevant safety standards including minimum required IP rating to protect the driver.
- The Xitanium LED SR drivers are suitable for built-in use only and must be protected against ingress of and exposure to including but not limited to water, dust, insects or any other chemical agent - be it in the gaseous, vapor, liquid or solid form- which can be expected to have an adverse effect on the driver (e.g. use in wet/corrosive/dusty environments). It is the responsibility of both luminaire manufacturer and installer to prevent ingress and exposure. Any suggestion from Signify with reference to minimum required luminaire IP rating serves only as a non-binding guidance; a different IP rating may be required under certain application conditions to protect the driver. Common sense needs to be used in order to define the proper luminaire IP rating for the application.
- Do not service the driver when mains voltage is connected; this includes connecting or disconnecting the LED module. The driver generates an output voltage of the driver that may be lethal. Connecting a LED module to an energized driver may damage both the LED module and driver.
- No components are allowed between the LED driver and the LED module(s) other than connectors and wiring intended to connect the Xitanium driver to the LED module.
- Adequate earth and/or equipotential connections must be provided whenever possible or applicable.
- Signify Design-in support is available; please contact your Signify sales representative.

## Disposal

Please, inform yourself about the local waste disposal, separation and collection system for electrical and electronic products and packaging. Please act according to your local rules and do not dispose of your packaging and old product with your normal household waste. The correct disposal of your product will help prevent potential negative consequences for the environment and human health.

# Xitanium LED Xtreme SR drivers

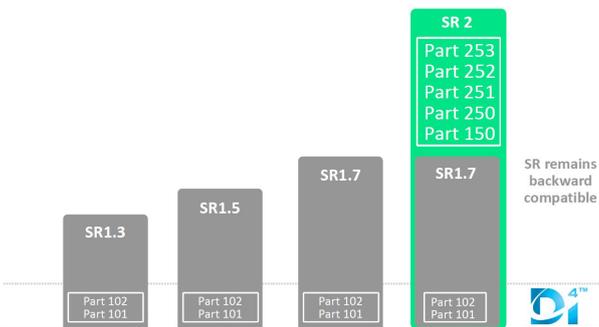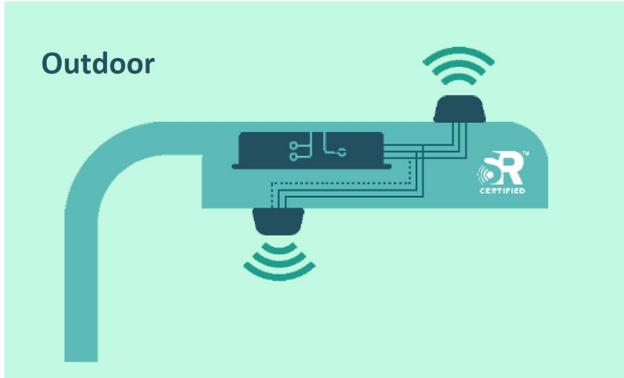

Evolution of Sensor Ready (SR) intra-luminaire digital protocol for Xitanium SR Xtreme drivers.

## Xitanium LED Xtreme SR drivers and Certified Products

Our Xitanium SR drivers offer great benefits for Lighting Management Systems. To ensure full component interoperability, Signify provides SR Certification. The performance of third-party SR luminaire controllers is tested and certified on our SR drivers to eliminate any interfacing problems. This means you can offer connected lighting solutions without having to worry about software capabilities and system investments.

We have a growing list of SR Certified Products that are compatible with our Philips Xitanium SR LED drivers. They cover a wide range of connected lighting solutions from trusted providers of controller and connectivity modules, building management systems and city management systems.

In order to support the development of SR Certified Components, Signify has launched the SR Partner Program. SR partners will receive all required details of the Xitanium SR driver interface for electrical and DALI data exchange protocols. Signify also provides test and verification services. Successfully tested products can be recognized via the SR Certified logo:



Currently, our Xitanium LED Xtreme SR drivers have been transitioned from SR specification v1.3 to v2.1 and will continue to evolve. Current SR driver types are now compliant with the new DALI standard for intelligent IoT-ready luminaires, called D4i. These drivers can be recognized by the D4i logo on their type plates. Philips driver compliance per D4i can be looked up in the driver datasheet at [www.philips.com/oem](http://www.philips.com/oem) or [www.digitalilluminationinterface.org/products](http://www.digitalilluminationinterface.org/products).

## Xitanium LED Xtreme SR driver versions

The Xitanium LED Xtreme SR drivers described in this guide are available in multiple power and current ratings which enable the most popular light output levels for outdoor and industrial applications. It is always highly recommended to check our latest Xitanium LED Xtreme SR driver leaflet for the most up-to-date overview of our range. This leaflet can be downloaded at [www.philips.com/oem](http://www.philips.com/oem).

Detailed technical specifications can be found in the Xitanium driver datasheets at [www.philips.com/oem](http://www.philips.com/oem).

## Configurability Interface (tooling)

The Xitanium LED Xtreme SR drivers are configurable. A tailored package of features and parameters in these drivers can be set via a specific tool. This tool is the MultiOne Configurator. There are two types of interfacing technology used to communicate with this tool:

- DA interface (wired)
- SimpleSet (wireless, based on Near Field Communication NFC)

## SimpleSet

Philips SimpleSet new wireless programming technology allows luminaire manufacturers to quickly and easily program Xitanium LED Xtreme SR drivers in any stage during of the manufacturing process without a connection to mains power, offering great flexibility. As a result, orders can be met faster while reducing cost and inventory.

For more information, please visit [www.philips.com/multione](http://www.philips.com/multione).

---

### **Sensor Ready Interface (DA+/DA-)**

Xitanium LED Xtreme SR drivers reduce complexity and cost of luminaires used in wireless connected lighting systems. They feature a digital SR interface to enable direct connection to any suitable luminaire-based CMS (City Management System) controller or sensor. Functionality integrated into the SR driver eliminates the need for auxiliary luminaire components such as power supplies and relay boxes used in many typical outdoor lighting controllers (OLC) today. The result is a simpler, less expensive luminaire that enables turning every luminaire into a wireless node and a more reliable DC powered controller. The simple two-wire SR interface is -dependent on driver type- compliant with DALI Parts 207 or 209 and D4i DALI Parts 250/251/252/253.

### **Compatibility with regular DALI and D4i devices**

SR Certified Products are designed to fully benefit from the SR driver capability. DALI-2 control devices can also be used together with Xitanium SR drivers, albeit with limited functionality compared to an SR Certified control device. Full functionality will be achieved using D4i control devices combined with D4i Xitanium SR drivers.

### **Compatibility with outdoor CMS systems**

In the outdoor segment, the preferred option is to apply the SR driver in combination with the SR interface for both the CMS nodes and potentially additional controllers. The Xitanium SR drivers can be used in combination with a DALI compliant device. However, a full system verification is advised to avoid high customer dissatisfaction and significant costs to repair. SR drivers which are D4i-certified are fully compatible with D4i-certified CMS systems.

### **Auxiliary Power Supply**

Next to the switchable SR PSU, the Xitanium LED Xtreme SR drivers are equipped with a permanently-enabled auxiliary 24VDC power supply (+24VDC) which is short-circuit proof and intended to power auxiliary luminaire devices that need more power than the SR PSU can deliver. This supply is compliant per DALI Part 150. More details about the auxiliary supply can be found in section Electrical design-in.

### **Tunable color temperature (FlexTune)**

Xitanium SR FlexTune Xtreme LED drivers offer unparalleled flexibility for your next lighting project that utilizes correlated color temperature (CCT) tuning capability. These drivers are equipped with our Sensor Ready (SR) interface, have two separately controllable outputs and offers a means for digital control of the driver including CCT tuning and all the benefits of a wireless connected system. These drivers can be used with different Philips Fortimo LED modules as part of the FlexTune system. Alternatively, they may also be used with non-Signify modules by appropriately configuring the driver settings as described in this document. Per DALI Part 209, Xitanium SR FlexTune LED drivers support precise CCT control and light output while maintaining compliance with TLA requirements across the full range of operation.

Xitanium SR FlexTune LED Xtreme drivers are D4i-certified and compatible with the requirements outlined in DALI Part 209 (Device Type 8), and can directly accept CCT and dim commands from an external sensor or network controller (RGB excluded). This simplification offers an elegant system architecture to minimize complexity and maximize value to create the right digital foundation for your next connected lighting project.

Alternatively, the two driver output channels of the SR FlexTune LED Xtreme driver can be controlled independently per DALI Part 207 (2x Device Type 6) in case CCT control is not required.

More details about FlexTune can be found in the Appendix at p.36.

---

### Adjustable Output Current (AOC)

Flexibility in luminaire design is ensured by the Adjustable Output Current feature (AOC). This feature enables operation of various LED configurations from different LED manufacturers whilst also ensuring the solution remains “future-proof” for new LED generations. The output current can be configured with the Philips MultiOne software and the SimpleSet interface. More information about AOC and how to set the output current can be found in the section Electrical design-in.

### LED Module Temperature Protection (MTP)

Adjustable limitation of thermal stress on the LED module is made possible by the Module Temperature Protection (MTP) feature combined with an NTC resistor integrated in the LED module. More details about MTP and the NTC resistor can be found in the Section Thermal design-in.

### Driver Temperature Limit (DTL)

Adjustable limitation of thermal stress on the driver is made possible by the DTL feature on select drivers by means of an NTC resistor integrated in the driver. Depending on luminaire design, DTL can also be used as alternative for MTP. More details about DTL can be found in the section Thermal design-in.

### Dimming interface

Interfacing with the Xitanium LED Xtreme SR drivers can be done via the SR interface. Alternatively, the integrated Dynadimmer feature can be used for autonomous dimming.

### Amplitude Modulation (AM) dimming

Philips Xitanium LED Xtreme SR drivers dim the output to the LEDs by means of continuous Amplitude Modulation (AM) dimming of the DC output current. No Pulse Width Modulation (PWM) is applied across any part of the entire output current range. AM dimming guarantees the most smooth and flicker-free operation over the entire dimming range.

### Temporal Light Artifacts (flicker & stroboscopic effects)

A small inherent ripple is superimposed on the DC output current of Philips LED Xtreme SR drivers. This ripple consists of a low-frequency LF component (double the mains grid frequency) and a high-frequency HF component. This ripple current has such a low amplitude that Temporal Light Artifacts (flicker & stroboscopic effects) with camera systems other than possibly those for high-speed slow-motion HD recording is not expected. The ripple value of both LF and HF components are specified in the driver datasheet. The typical values for TLA parameters short term flicker value ( $P_{st}^{LM}$ ) and Stroboscopic Visibility Measure (SVM) can be looked up in the driver datasheet.



### Hot-wiring and output sharing

**Warning:** Philips LED Xtreme SR drivers do not support hot-wiring. In order to prevent damage to LEDs no connection or disconnection should be made to the driver output when mains voltage is present. Please ensure that power is turned off before doing so. Connecting multiple driver outputs in parallel or in series as well as the sharing of multiple LED+ or LED- connections in one wire is not supported either. Outputs of individual drivers must be kept fully separated.

### DC mains operation

Xitanium LED Xtreme SR drivers support operation in a DC power grid (e.g. central emergency system). The driver behavior once switched to DC input voltage can be programmed via MultiOne software. More details about DC input voltage suitability can be found in the driver datasheet.

---

### **Constant Light Output (CLO)**

Traditional light sources suffer from depreciation in light output over time. This applies to LED light sources as well. The CLO feature enables LED solutions to deliver a constant lumen output throughout the life of the LED module. Based on the type of LEDs used, heat sinking and driver output current, a correction of the lumen depreciation can be entered into the driver. The driver then counts the number of operating hours and will correct the output current based on this input.

Since a CLO curve is not generic, the OEM needs to determine the appropriate CLO curve. This can be used to differentiate on e.g. lumen output or power consumption over lifetime.

The CLO feature can be programmed with the Philips MultiOne configurator tool. More information can be found on [www.philips.com/multione](http://www.philips.com/multione).

### **OEM Write Protection (OWP)**

OWP allows the OEM to protect their driver setting over the lifetime of the driver by using a password. Drivers equipped with OWP will show this in the feature list if read out by the tool MultiOne. Specific features and also the OWP feature itself can be enabled and protected with that password to prevent unauthorized changes. The password management is under the responsibility of the company which is setting it.

### **Driver diagnostics & maintenance**

Xitanium LED Xtreme SR drivers offer a Diagnostics & Maintenance feature. The purpose of this feature is to gather information and help diagnose the history of the driver and connected LED module for maintenance purposes. This feature consists mainly of counters which keep track of specific variables like the number of startups of the driver, operating hours, temperature of driver and LED modules, current and voltages etc. The Diagnostics & Maintenance feature stores applicable parameters in the non-volatile memory bank specified in DALI Part 253 and the SR Certified specification.

More information on the diagnostics see instruction manual of MultiOne Engineering at: [www.philips.com/multione](http://www.philips.com/multione).

### **Energy data**

Xitanium SR Xtreme drivers have built-in energy measurement capability and can report energy and actual power consumption data. The metered data accuracy is equal to the accuracy as prescribed in EN50470-1 and EN50470-3 but its accuracy is not certified as such. Accuracy of the power measurement is the higher of following two values across the entire driver operating window: 0.5W or +/-1% of measured input power. The energy data feature stores energy reporting data in the nonvolatile memory bank provision specified in DALI-2 Part 252 and the SR Certified specification.

### **Luminaire data**

Xitanium LED Xtreme SR drivers are equipped with the Luminaire Info feature. This feature supports the extraction of luminaire data as input for system asset management and enables the OEM to issue a unique Global Trade Identification Number (GTIN). This feature is implemented in compliance with DALI Part 251.


### Use in hazardous areas



**Warning:** the use of lighting control gear in hazardous areas is bound to very strict safety regulations. Xitanium LED Xtreme SR drivers are **not** certified per standard IEC/EN 60079 and latest EU directive ATEX for use in hazardous areas in which there is risk of explosion. Therefore, Xitanium LED Xtreme SR drivers do **not** directly support application in luminaires and lighting systems in such environments.

### Driver naming

Xitanium LED Xtreme SR drivers are part of a specific naming system. See the example below.

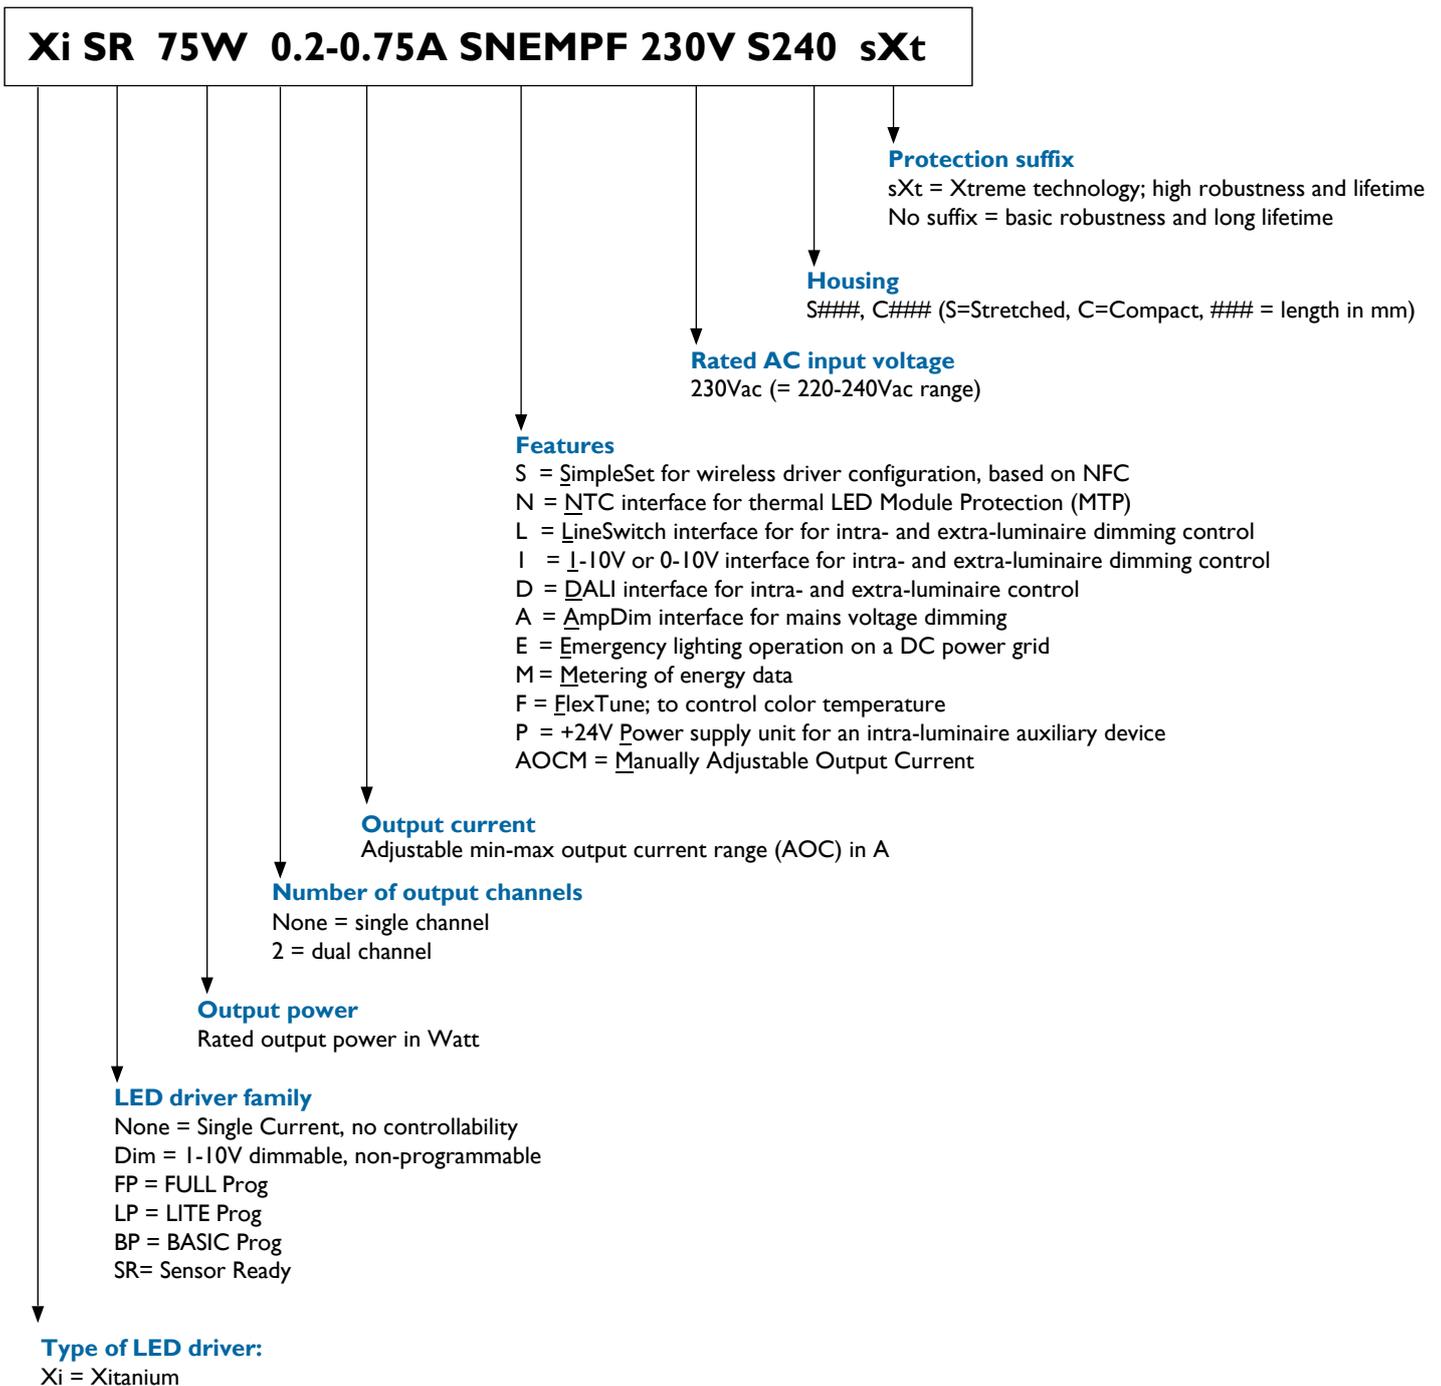

---

# Mechanical Design-in

## Dimensions

Xitanium LED Xtreme SR drivers are available in different housing dimensions. The specific dimensions can be found in the driver datasheet. 3D CAD files are available to verify fit and can be found at [www.philips.com/oem](http://www.philips.com/oem).

It is recommended to build in drivers such that the driver housing and the driver input and output connectors are not affected by potential water ingress in the luminaire (e.g. due to luminaire sealing malfunction or condensation).

It is highly recommended to mount the driver by using all available mounting feet in order to achieve maximum mechanical robustness against shocks and vibration. The recommended mounting torque is 1.5Nm for drivers with plastic mounting feet. This value should not be exceeded in order to prevent deformation of the mounting feet.



**Note:** The use of rivets is not recommended since mounting torque cannot be controlled. Damage to the mounting feet and loose mounting may result.

Mounting screw dimensions should be based on the specified fixing hole diameter in the driver datasheet. Oversized and undersized screws should not be used in order to prevent damage to the mounting feet or loose mounting.

Allow for sufficient free space around the driver SimpleSet antenna if the driver is to be configured after mounting in the luminaire. The minimum recommended space is depending on the type of SimpleSet configuration tool. Using SimpleSet tool LCN9620, the minimum recommended distance is 19 mm (+/-1mm).

Depending on the application and the use in development, factory or field, another configuration tool can be selected. Please go to [www.philips.com/multione](http://www.philips.com/multione) to find the correct type. Every published interface tool is officially approved for use with the MultiOne software. The tool type number can be found by checking the LCN label on the tool itself.



**Note:** the use of an unapproved tool may result in impaired driver-tool communication and configuration malfunctioning.

---

# Thermal Design-In

## Introduction

This section describes the following aspects of the thermal design-in of the Xitanium LED Xtreme SR drivers:

- The LED driver and the relationship between the  $t_c$  point temperature and lifetime of the LED driver.
- The LED driver and its non-adjustable response to driver overheating (ThermalGuard).
- The LED driver and configurable Driver Temperature Limit (DTL) to maximize driver and possibly LED module lifetime in the application.
- Module Temperature Protection (MTP) function to safeguard the specified LED module lumen maintenance and lifetime.

In order to facilitate thermal design-in of a LED driver, the critical thermal management points of the LED driver are set out in this section. Please familiarize yourself with the following key aspects to achieve optimal thermal design-in of the driver.

### 1: Driver case temperature point ( $t_c$ point)

The driver case point temperature ( $t_c$ ) is the only reference for the temperatures of the critical internal driver components. The location of the  $t_c$  point is identified on the driver type plate and is marked by a \* or  $\circ$  symbol. Please use **only** the  $t_c$  point as reference to define thermal suitability of a driver in the application. Its temperature can be measured using a thermocouple that is firmly glued to the  $t_c$  point surface on the driver housing. For a representative measurement the temperature of the  $t_c$  point must be stable before any reliable data can be obtained (typically > 3 hours or when the temperature difference is less than 1°C within one hour).

### 2: Driver $t_{c\_life}$ value

The specified full driver lifetime and corresponding failure rate will apply as long as the  $t_c$  point temperature remains between the lower  $t_{a\_min}$  and upper  $t_{c\_life}$  limits.

### 3: Driver $t_{c\_max}$ value

The driver supports running at a higher temperature than the specified  $t_{c\_life}$  temperature, up to the  $t_{c\_max}$  temperature. Keep in mind that doing so will be at the expense of the driver lifetime and failure rate. A graphical representation thereof can be found in the driver datasheet. Running the driver above the specified  $t_{c\_max}$  temperature is **not** supported and will negatively affect driver lifetime and void driver warranty. The **cbm** way to verify whether either  $t_{c\_life}$  or  $t_{c\_max}$  is exceeded in the application is by using a thermocouple.

### 4: Driver minimum ambient temperature ( $t_{a\_min}$ )

This lower limit value as specified in the driver datasheet stipulates the minimum **luminaire** ambient temperature at which the driver can be used, e.g. in frozen storage warehouses or (sub)arctic areas. Using the driver below its specified minimum  $t_{a\_min}$  value is not supported and will negatively affect driver performance and lifetime. Driver warranty will then be void.

### 5: Driver maximum ambient temperature ( $t_{a\_max}$ )

Typically, the driver  $t_c$  point will reach its specified  $t_{c\_max}$  value at the specified driver ambient  $t_{a\_max}$  temperature **inside** the luminaire. However, if the driver is not running at full output power then the actual  $t_c$  point temperature may be lower than the  $t_{c\_max}$  value. In that case a higher driver  $t_a$  is supported up to the point when the specified  $t_{c\_max}$  value is reached.



## 6: Driver temperature readout in MultiOne Diagnostics

The "Driver temperature" readout via the Diagnostics function in MultiOne software represents the temperature of a driver-internal thermal sensor. Please do *not* use this readout to define thermal suitability of a driver for a given luminaire; this temperature readout does not represent the  $t_c$  point temperature and does not correspond 1:1 with the  $t_c$  point temperature. It is therefore not suitable as a reference for thermal design-in.

The thermal design-in of the driver inside the luminaire also influences the relation between the driver  $t_a$  temperature and  $t_c$  temperature. E.g. mounting the driver on an effective heatsink or placing it further away from LED modules will lower the  $t_c$  value at a given  $t_a$ . The  $t_c$  point temperature is always leading with respect to  $t_{c\_life}$  or  $t_{c\_max}$ .


In general, lowering the overall driver temperature will increase the driver lifetime since the temperature of critical components inside the driver will be lower. However, applying only local heatsinking of the driver -e.g. to lower the  $t_c$  point temperature or any other surface hotspot- will not necessarily lower the temperature of critical components. Do not apply local heatsinking to improve intended thermal driver performance and/or to artificially lower the temperature of the  $t_c$  point.

### ThermalGuard

In a thermally well-designed luminaire the specified  $t_{c\_max}$  value will not be exceeded. However, under extremely hot atmospheric conditions the driver may occasionally overheat. In that case the driver will automatically start to reduce the output current as an emergency measure to reduce driver overheating. The result of the output current reduction will be a mitigation of the excess decrease of driver lifetime as a result of thermal overstress. Once the  $t_c$  point temperature starts dropping below a certain value the driver will automatically increase the output current up to the pre-set output current. If the output current reduction is not sufficient to counteract the  $t_c$  point temperature increase then the output current may either stabilize at a lower value or, depending on driver type, even be reduced to zero in extreme cases. This thermal driver protection feature is called ThermalGuard and its goal is to get the driver back in normal operating thermal conditions in which the specified driver lifetime can be met. Each driver type has its own specific factory default overheating behavior and it can be found as a ThermalGuard graph in the driver datasheet.



**Warning:** the ThermalGuard feature is designed as a non-configurable emergency measure to protect the driver. It is *not intended* for structural activation to compensate for a poor thermal design of a luminaire. Structural activation will lead to premature driver and will void warranty.

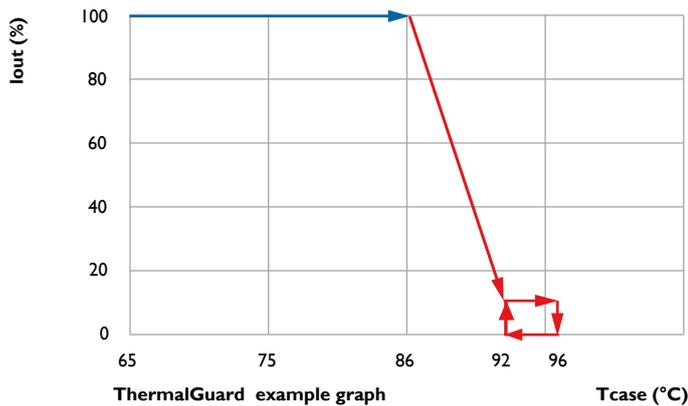



Shown on the left is an example graph of the ThermalGuard feature. In this example, the output current is reduced from  $t_c$  point temperature of 86°C onwards down to 10% at 92°C. Between 92°C and 96°C the output current will remain at 10%. If the output current reduction is sufficient to decrease the  $t_c$  point temperature then the output current will be increased accordingly up to the pre-set 100% level.

If the unlikely case when output current reduction is not sufficient to offset the  $t_c$  point temperature increase then the output current is eventually reduced to zero at 96°C and the driver output will be switched off. Normal operation will not resume until the  $t_c$  point temperature has cooled down to 92°C. A power cycle is not required to resume driver operation. The 4°C hysteresis will prevent the luminaire from blinking on and off.

**Note:** the ThermalGuard feature is **non-configurable**.

### Driver Temperature Limit (DTL)

Depending on commercial or application needs it may be required to optimize driver lifetime. This can be achieved by safeguarding that the maximum driver case point temperature in the application is not exceeding a predefined limit. A configurable feature called DTL (Driver Temperature Limit) enables this by offering an adjustable  $t_c$  point temperature threshold at which the output current is reduced (start dim value) and optionally be switched off (shutdown value). DTL configuration can be done by MultiOne software. By factory default, the DTL feature is configured per the specified ThermalGuard graph for a driver as specified in the driver datasheet.

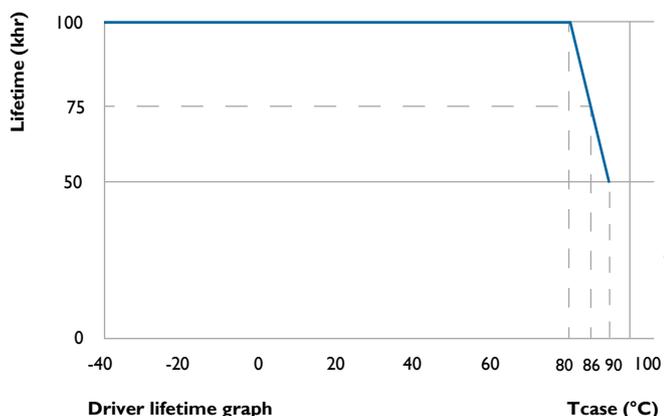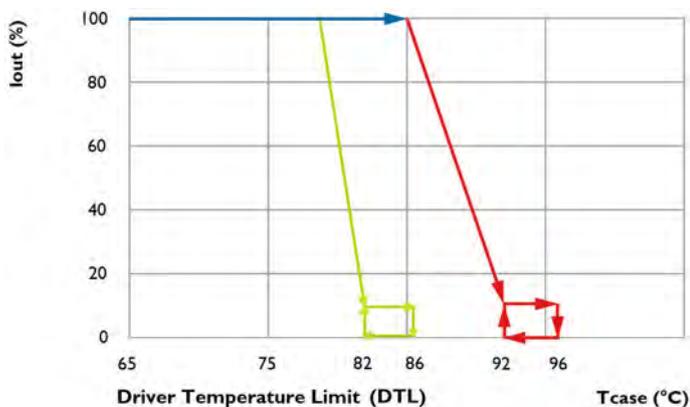

Shown on the left is an example DTL and driver lifetime example graph. The green line represents the output current as function of the  $t_c$  point temperature with DTL activated through a custom profile based on the requirement that the driver lifetime be at least 75khrs. The red line represent ThermalGuard behavior. In this example, the output current is reduced from  $t_c$  point temperature of 80°C onwards (start dim value) and the  $t_c$  point will not exceed 86°C (shutdown value) whereas it would have been allowed to reach up to 96°C without this specific DTL profile.

**Warning:** thermal luminaire properties will influence the DTL activation points. Therefore, the configured DTL start dim and shutdown values must be verified **case-by-case** per driver-luminaire combination to ensure that the driver does dim and shut down at the correct  $t_c$  point temperature in relation to the configured MultiOne start dim and shutdown values. Otherwise, DTL will act either at a too low or too high  $t_c$  point temperature!

The DTL feature can also be applied as a substitute for Module Temperature Protection (MTP) in order to protect the LED module against overheating and to maintain a certain lumen maintenance. The advantage of using DTL for this purpose is that the additional NTC on the LED module plus required wiring can be omitted. However, DTL can only be used as such if the thermal relation between the driver  $t_c$  point and LED module  $t_c$  point temperature is well-defined. Therefore a meticulous thermal investigation of the driver - LED module driver application is required to prevent DTL from being activated at a too low or too high LED module temperature.

---

### LED Module Temperature Protection (MTP)

This feature helps to protect the LED module when operated during abnormal thermal application conditions. The thermal design of a LED module should be designed in such a way that the temperature of the LED module  $t_c(\text{life})$  or  $t_c(\text{max})$  is not exceeded under normal application conditions. The utilization of an NTC (Negative Temperature Coefficient resistor) serves the purpose to help achieve the useful lifetime of the LED module if external thermal influences result in the temperature for lifetime  $t_c(\text{life})$  being exceeded. If this occurs then the light output will be reduced to keep the temperature of the LED module below a predefined critical temperature.

Xitanium Xtreme SR drivers are by default configured for the following three standard NTC types:

1. 10 kilo Ohm NTC - Murata, p/n NCPI8XH103J03R or NCU18XH103J60R
2. 15 kilo Ohm NTC - Vishay, p/n NTCS0805E3153GMT (previous p/n: 2381 615 54153)
3. 15 kilo Ohm NTC - Murata, p/n NCPI5XW153E03RC (+ separate 390 ohms resistor in series with the NTC)

Other NTC types are supported as long as they fall within a 5,000 ... 25,000 Ohm resistance range. The applicable values for  $R(25^\circ\text{C})$  and  $\beta$  however need to be specified separately during MTP configuration in MultiOne for intended MTP behavior.

#### MTP behavior setting

It is possible to set the temperature at which the MTP feature is activated, defined by "MTP warn" and the slope, defined by "MTP max". Using the MultiOne Configurator software, these settings can be changed.




**Note:** Please take into account when verifying MTP performance in the application that MTP behavior will correspond with the configured MTP profile only when the driver  $t_c$  point has reached at least its specified  $t_c(\text{life})$  temperature. At lower  $t_c$  point temperatures the MTP may become active up to  $10^\circ\text{C}$  below the configured start dim temperature.



**Warning:** follow the instructions below for reliable MTP behavior and to prevent damage to the driver NTC interface.

- Do not combine the NTC ground connection with the LED - connection. These two connections must be kept separate.
- The length of each wire between the NTC driver interface and the NTC on the LED module is not allowed to exceed 60cm.
- Do not use shielded wiring for MTP.
- It is neither allowed to connect multiple MTP inputs from multiple drivers in parallel nor to have multiple MTP interfaces share a common connection. Always keep multiple MTP interfaces fully separated from each other.

# Electrical Design-In

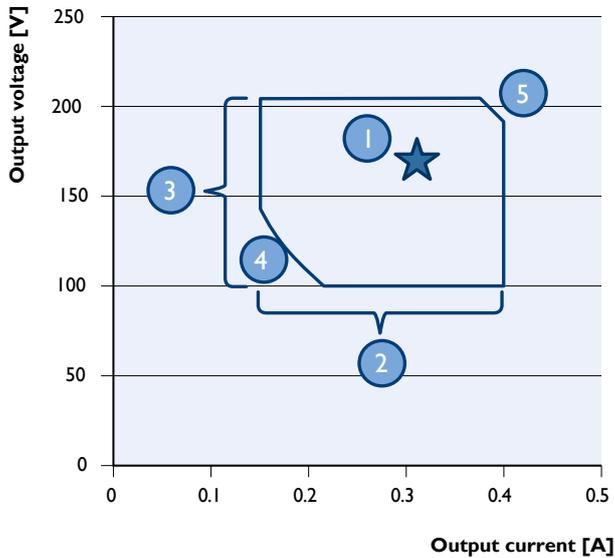

Example Operating Window of a Xitanium driver

1. Required set point for the LED solution
2. Current can be set to needs within range (incl. dimming)
3. Driver adapts to required LED module voltage  $V_f$ , given it fits range
4. Driver minimum power limit
5. Driver maximum power limit

## Xitanium driver operating window

LED technology is rapidly evolving. The use of more efficient LEDs in a next generation means the same light output can be achieved with lower currents. At the same time, LEDs can be driven at different currents levels based on the application requirement. Typically, LED drivers are available in discrete current levels, e. g. 350 mA, 700 or 1050 mA. It is often necessary to replace a driver when more efficient LEDs or different LED modules become available.

One of the key features of the Xitanium LED Xtreme SR drivers is the adjustable output current (AOC) feature, offering flexibility and future-proof luminaire design. The Xitanium drivers can operate in a certain “operating window”. This window is defined by the maximum and minimum voltage and current that the driver can deliver. An example of an operating window is shown on the left. The area indicates the possible current/voltage combinations. The current selected will depend on the type and manufacturer of the LEDs or the specific LED configuration of the PCB design. The voltage is the sum of the LEDs used (total  $V_f$  string) and dependent on LED drive current and temperature. The operating window of every driver can be found in the driver datasheet.

The output current of these drivers can be set in two ways:

1. SimpleSet: output current can be set using the Philips MultiOne software and SimpleSet interface.
2. SR interface: output current can be set using the USB2DALI interface LCN8600.



**Warning:** the forward voltage  $V_f$  of the connected LED module **must** remain within the specified driver operating window voltage boundaries under all application conditions. Otherwise, reliable luminaire operation cannot be guaranteed.

---

### How to select an appropriate driver

Depending on application requirements, several drivers may fit a specific application. The following steps will help in selecting the appropriate driver(s). For a complete overview of suitable driver(s) for your application, please use the Easy Design-in Tool (EDIT) at [www.easydesignintool.philips.com](http://www.easydesignintool.philips.com) as starting point.

1. Determine the required driver current ( $I_{drive}$ ) and voltage ( $V_f$ )
2. Calculate the required power ( $P_{drive}$ ) where  $P_{drive} = V_f \times I_{drive}$  (W)
3. Select the datasheets from the website mentioned above based on the driver having a higher power than required.
4. Does the required current fit the current range of the driver? The current range of the driver can be seen in the name itself. For example, for driver Xi SR 75W 0.2 – 0.7A SNEMP S240 sXt, the minimum programmable driver current is 0.2A and maximum is 0.7A.
5. Does the required LED voltage fit the voltage range of the driver? The exact value can be found in the datasheet.
6. Does the required power fit the power range of the driver? In the naming of the driver, you can see the maximum possible output power. For example, for driver Xi SR 150W SNEMP S240 sXt, the maximum output power is 150W.
7. Choose the preferred dimming method. Please refer to the section Driver naming to verify dimming options.

### Programming the output current

The Xitanium LED Xtreme SR drivers offer an extensive range of controls, enabling customizable luminaire design and performance. It is possible to control light output levels, preset dimming protocols and set system specifications in the factory and even in the complete installations.

This can be done with the Philips MultiOne configurator. The MultiOne configurator is a versatile tool that unlocks the full potential of all programmable drivers from Philips, ensuring that the driver performance matches the needs of the lighting solution. It offers unprecedented flexibility, before, during and after the product installation.

Programming of new Xitanium LED Xtreme SR drivers can be done either by using the SimpleSet or the DA interface.

For more information on MultiOne please refer to the section Driver Configuration or visit: [www.philips.com/multione](http://www.philips.com/multione). This site contains detailed information on how to install the software and how to program the driver.

## Connectors

Philips Xitanium LED Xtreme SR drivers are equipped with push-in type connectors. Connectivity specifications (wiring connection diagram, supported wire cross section range in mm<sup>2</sup>, strip length range in mm and wire type) can be found in the driver datasheet.



### Notes:

-For currents between 1.0 and 1.5A (rms/DC) per connector, a minimum cross section of 0.75mm<sup>2</sup> is recommended.

-In certain luminaire wiring scenarios two wires may have to be connected to one connector terminal. In that case, the pairing has to be done outside the driver, resulting in only one wire going into the connector terminal. Two wires into one connector terminal are not supported.

The reliability of twin-wire ferrules (or wire end stop), accepting the wires intended to use, should be checked with the supplier of these ferrules.

## Mains operating conditions

Xitanium LED Xtreme SR drivers are designed for operation and performance by power sources or grids providing a clean and symmetric sinusoidal voltage wave form. They do not support operation on power sources including but not limited to having e.g. a square-wave voltage form or a "modified sine wave".

Xitanium LED Xtreme SR drivers are able to withstand high and low mains voltages for a limited period of time. This includes under- and overvoltage due to malfunction such as a loose neutral wire in the grid.

### Low and high mains voltage

Xitanium LED Xtreme SR drivers are designed to be operated at mains under- and overvoltage per IEC requirements for performance and operational safety with respect to specified rated input voltage range.

The applicable lower limit for driver performance is lowest rated voltage -8% while -10% applies for driver operational safety. For drivers equipped with MainsGuard a lower limit applies for operational safety.

The applicable upper limit for driver performance is highest rated voltage +6 % while +10 % applies to driver operational safety.

The actual limit values can be found in the driver datasheet. For optimal luminaire performance it is always recommended to operate drivers within the specified voltage **performance** range.

### Output open-load and short-circuit conditions

Xitanium SR LED Xtreme drivers can withstand output open-load and short-circuit conditions. These are to be considered abnormal driver conditions. Consequently, it is not recommended to use drivers as such. Neither is it recommended to switch the driver output by means of e.g. relays ("hot switching") to connect or disconnect LED modules.

### Excessive low mains voltage (MainsGuard)

Previously, LED Xtreme drivers would turn off the output in case of excessive low mains voltage. Depending on the exact driver type a shutdown would occur between 150 ... 180VAC.

This shutdown functionality was intended to prevent overcurrent conditions in the mains grid. Without shutdown the driver input current would increase proportionally with decreasing mains voltage since the driver is designed to maintain full light output of the luminaire and thus output power. This would exacerbate the overcurrent condition further. Consequently, mains cables and relays may be overloaded and melting fuses and/or MCBs may trip.


In order to prevent overcurrent conditions, a shutdown mechanism had been implemented in the driver. However, the main disadvantage of this shutdown is total loss of lighting.

Xitanium LED Xtreme SR drivers have a feature incorporated to protect luminaire and mains grid against overcurrent conditions without loss of lighting. This smart feature is called MainsGuard. Its function is to proportionally decrease input current as function of decreasing mains voltage and to keep doing so all the way down to a much lower mains voltage before the driver output is ultimately shut down. A small hysteresis of 5 ... 10Vac against on/off nuisance cycling is implemented before the driver output becomes automatically active again once the mains voltage starts to recover (no mains power cycle required).

A general graphical representation of MainsGuard can be seen in the illustration on the left. Exact values can be found in the MainsGuard graph in the driver datasheet.

Main benefits of MainsGuard are:

- Light will remain on, even at excessive low mains voltage
- Luminaire and grid are protected against undervoltage and overcurrent
- No current overloading of MCBs, fuses and relays

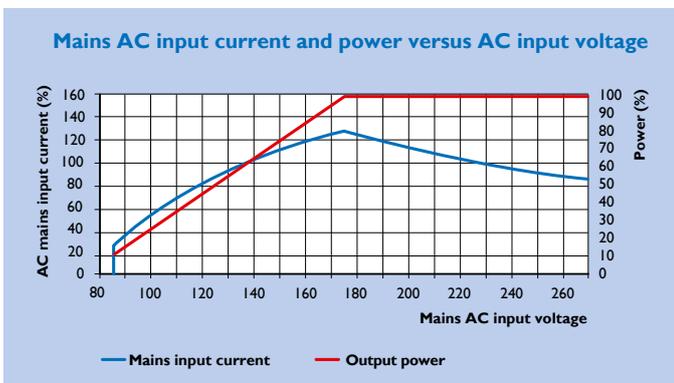

Illustrative graph of the MainsGuard feature. Shown values are example values. Please refer to the driver datasheet for exact values.



**Note:** the voltage levels at which output power is reduced and the output is eventually shut down and re-activated are fixed and cannot be modified.



**Warning:** the MainsGuard feature is designed as an emergency measure to protect the driver. It is **not** intended for structural activation to compensate for poor grid conditions.

### Excessive high mains voltage

An excessive high mains voltage will stress the driver and will have an adverse effect on the lifetime. Xitanium LED Xtreme SR drivers will survive an input overvoltage of 264 ... 320Vac for a period of max. 48 hours and 320 ... 350Vac for a period of max. 2 hours.

A loose neutral condition has to be avoided as this may reduce the lifetime dramatically. Immediate driver failure may occur if the driver is connected to 400Vac as a result of a connection error in a 3-phase 230/400Vac grid.

### Power grids

Xitanium Xtreme LED SR drivers are suitable for direct connection to TN, TT and IT grids. Depending on driver type, a luminaire-based fuse in the driver neutral connection may be required in case both feeding phases are “hot”.



**Note:** certain restrictions apply for use in IT grids. Direct connection of Xitanium LED Xtreme SR drivers is only permitted in delta connection with a phase-to-phase voltage of 230Vac. In case the drivers are connected in star connection in a 230V/400Vac IT grid, the use of a separate 1:1 insulation transformer with sufficient power rating is required to power the drivers. The secondary output of the transformer must be connected to earth.

### Power Factor (PF)

Xitanium Xtreme LED SR drivers have a high power factor (PF) which is inherently capacitive. Its capacitive nature cannot be compensated for. The output power dependent PF graph can be found in the driver datasheet. By design, the driver will maintain a high power factor also under dimming conditions.

### DC emergency operation (DCemDim) and fusing

Depending on driver type, the driver may be certified acc. IEC 61347-2-13 Part J for operation on a DC input voltage. As a result, the driver enables application in emergency luminaires in compliance with IEC 60598-2-22 *excluding high-risk task areas*. These drivers support operation both a flat DC input voltage as well as operation on rectified sinewave "joker" input voltage.

Xitanium LED Xtreme SR drivers are equipped with the DC Emergency Dim feature named DCemDim. This feature allows a pre-defined dim level of the driver output between 10 and 60% to which the driver will switch over automatically once connected to a DC (emergency) input voltage.

The mains input of DC-rated drivers is not polarity-sensitive for DC input voltage and the driver is fully CISPR15 EMC-compliant when operated on a DC grid. Specific DC input voltage values can be found in the driver datasheet.

Depending on driver type, EL marking may apply. For those drivers the corresponding Emergency Output Factor EOF<sub>x</sub> range can be found in the driver datasheet.

Xitanium LED Xtreme SR drivers are equipped with an internal fuse rated for AC & DC voltage operation. Therefore, an external DC voltage rated fuse is not required when the driver is connected to DC input voltage.

More on setting parameters of DCemDim can be found in the section for Controllability. Specific DC input requirements can be found in the driver datasheet.



### Notes:

- The allowed DC input voltage range for safety and performance are listed in the driver datasheet. Values outside the performance range will have an adverse effect on the driver performance and reliability.
- During DC input voltage operation the output power of the driver cannot be set higher than at 60% of the output power at AC input voltage operation.

### Inrush current

The term inrush current refers to the briefly occurring high input current which flows into the driver during the moment of connection to mains; see the illustration on the left. Typically, the amplitude is much greater than the steady-state input current. The cumulative inrush current of a given combined number of drivers may cause a Miniature Circuit Breaker (MCB) to trip. In such a case, either one or a combination of the following measures need to be taken to prevent nuisance tripping:


- Replace existing MCB for a less sensitive type (e.g. exchange B type for C type).
- Distribute the group of drivers over multiple MCB groups or phases.
- Power up drivers sequentially instead of simultaneously.

Inrush parameters are driver-specific and can be found in the driver datasheet.




#### Notes:

- The amplitude and pulse width time of the inrush current are not in any way affected by the driver feature Adjustable Startup Time (AST, see section Control Features).
- The use of an external inrush limiting device (e.g. EBN-OS or Camtec ESB) or a zero-voltage switching relay (e.g. Finder 77 series) may enable a larger amount of drivers to be connected to a MCB or fuse. Signify has not tested the compatibility or effectiveness of such third-party devices in the actual application. It is the responsibility of both luminaire manufacturer and installer to ensure compliance with national electrical codes when either device is used in the application.

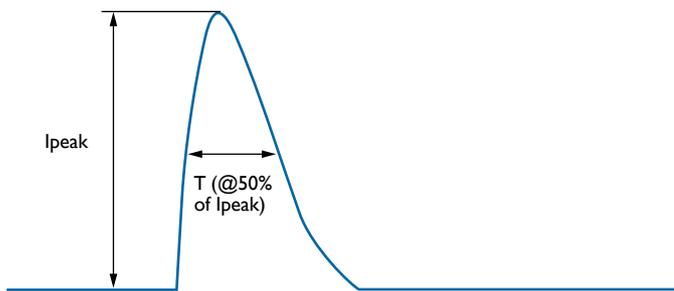

Graphical representation of inrush current

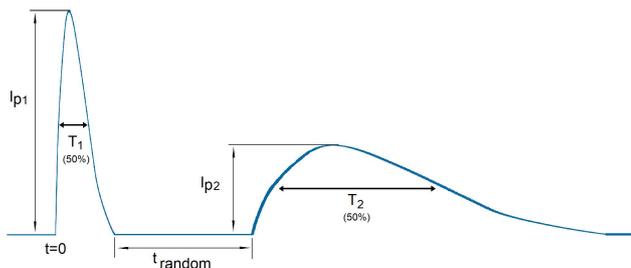

Initial inrush current

Subsequent inrush current

Graphical representation of inrush current of a driver equipped with IntelliStart

### IntelliStart

Select Xitanium SR driver types are equipped with a new feature named IntelliStart. This feature allows for a larger amount of drivers to be connected to an MCB or fuse compared to drivers without this feature.

A driver equipped with IntelliStart exhibits, when powered up at  $t=0$ , two consecutive inrush current peaks (see illustration on the left):

- An initial inrush current immediately at power-on at  $t=0$  with a relatively high amplitude  $I_{p1}$  but narrow width  $T_1$ .
- At a random moment in time later during the zero crossing of mains voltage, a delayed subsequent peak with lower current amplitude  $I_{p2}$  and larger width  $T_2$ .

The random occurrence of the delayed subsequent peak  $I_{p2}$  of each driver in a group of drivers prevents MCBs or fuses from nuisance tripping. As a result, it is not the aggregate inrush current of a group of drivers but the aggregate steady-state input of that group which defines how many drivers can be connected to a MCB or fuse without tripping.



**Note:** For drivers equipped with IntelliStart, the following fusing calculations on the next page do not apply and the maximum indicated amount of drivers per MCB (whatever type) as specified in the datasheet must be followed instead.

MCB type	Rating (A)	Relative number of LED drivers (%)
B	4	25
B	6	40
B	10	63
B	13	81
B	16	100 (reference)
B	20	125
B	25	156
B	32	200
B	40	250
C	4	42
C	6	63
C	10	104
C	13	135
C	16	170
C	20	208
C	25	260
C	32	340
C	40	415
D	4	80
D	6	130
D	10	210
D	13	280
D	16	350
D	20	470
D	25	550
D	32	700
D	40	940
L, I	16	108
L, I	10	65
G, U, II	16	212
G, U, II	10	127
K, III	16	254
K, III	10	154

The max. recommended amount of drivers in the table above is based on inrush current and only serves as guidance. The actual maximum amount in the application may differ; it is dependent on steady-state current, MCB brand/type and inherent MCB tolerances.

### How to Determine the Number of Drivers per MCB

The maximum recommended amount of drivers connected to a Miniature Circuit Breaker (MCB) *from inrush current perspective* can be calculated with the help of the conversion table shown on the left. In this table the stated amount for a 16A B type MCB is used as reference (100%). The maximum recommended amount of drivers for different types of MCB can be calculated by this formula:

$$\text{Max. amount of drivers} = \text{reference} \times \text{relative number in \%}$$

This table only applies for drivers without the IntelliStart feature.

#### Example:

If the datasheet states a max. amount of 20 drivers on a 16A B type then for a 13A C type the max. amount is  $20 \times 135\% = 27$  drivers.

**Note:** Keep in mind that in case a D type MCB is used that the steady-state current loading may be the limiting factor instead!

### How to determine the number of drivers on a melting fuse

The maximum recommended amount of drivers on a melting fuse is defined either by the aggregate inrush current or the aggregate steady-state input current.

The amount of drivers can be calculated, using the specified values in the datasheet of the maximum input current and inrush current ( $I_{\text{peak}}$  and  $T_{\text{width}}$ ) as well as the melting integral  $I^2t$  value of the applied fuse as specified by the fuse manufacturer.

The melting integral value  $I^2t$  of the aggregate inrush current must be 50% below the specified melting integral value  $I^2t$  of the fuse in order to prevent melting of the fuse when the drivers are connected to mains voltage simultaneously. And the aggregate steady-state input current loading shall remain below 80% of the fuse rating to prevent overheating of the fuse.

The following formula can be applied to calculate the  $I^2t$  value of the driver inrush current:

$$I^2t = (I_{\text{peak}})^2 \times (0.8 \times T_{\text{width}})$$

#### Example:

A group of drivers is connected to a 16A gG melting fuse with a melting integral value of  $350A^2s$ . Specified driver inrush current peak and width is 65A and  $330\mu s$ . Steady-state input current is 0.8A per driver.

**Question:** what is the recommended maximum amount of drivers in this group connected to this fuse from inrush current and steady-state input current perspective?

**Answer:** the corresponding  $I^2t$  value of the inrush current is  $(65)^2 \times (0.8 \times 330 \times 10^{-6}) = 1.12A^2s$  per driver. The aggregate value of the driver inrush current must remain below  $0.5 \times 350A^2s = 175A^2s$ . This translates in a maximum of  $\sqrt{(175A^2s/1.12A^2s)} = 12$  drivers.

The steady-state input current per driver is 0.8A. Taking into account a max. allowed steady-state current loading of  $16A \times 80\% = 12.8A$ , this would allow for max.  $12.8A / 0.8A = 16$  drivers.

Therefore, the maximum recommended amount of drivers is = 12 drivers.

In this example, the maximum recommended number of drivers is defined thus by inrush current.



#### Notes:

- Specified maximum number of drivers is based on simultaneous switch-on, e.g. by a central switch or relay.
- For multiple MCBs in one cabinet the de-rating of the MCB manufacturer for steady-state load needs to be followed. If the actual de-rating is unknown then it is recommended to use a steady-state current de-rating of 0.8 by default. No de-rating is needed in respect to inrush current as this is not part of the thermal properties of the MCB cabinet.
- The maximum number of drivers that can be connected to one 30mA Residential Current Device (RCD) is typically 30. However, the actual maximum amount depends on RCD brand and type so the actual number may vary and will have to be defined on-site.

#### Surge immunity

Xitanium LED Xtreme SR drivers have elevated differential-mode and common-mode surge immunity levels which by far surpass the requirements as defined by IEC. By design, the high immunity levels do not only safeguard reliable driver operation in the field but also provide high immunity for the connected LED modules, thus enabling a high surge immunity on system level. The driver immunity levels can be found in the driver datasheet. In order to achieve these high immunity levels the driver EQUI terminal must be connected to the metal parts of the luminaire and LED module heatsink in all cases (Insulation Class I: also to earth). Doing so will guarantee the specified surge immunity levels and will protect the driver and LED module against surge damage. Depending on the local conditions, additional protection against excessive high surge voltages may be required by adding an external Surge Protection Device in the luminaire and/or at installation level (column/distribution cabinet).



**Warning:** the SR (DA+/DA-) interface and +24V auxiliary power supplies have limited surge immunity. Therefore, it is not allowed for the SR bus and auxiliary supply lines to leave the luminaire as in inter-luminaire use, e.g. to a remote-mounted controller or to another luminaire. Failure to observe this may result in damage to the driver and/or controller.

A luminaire may have a means for extending the SR control lines for the purpose of configuring the driver(s) at street level (extra-luminaire use). Such a provision is allowed acc. Zhaga Book 18 as long as following conditions are met:

- The means for extending the SR lines are clearly labelled for this purpose
- The configuration device can only be connected to the control lines after opening the pole of the street lighting luminaire.

Please do note that the specification in Zhaga Book 18 is **not** designed for this particular use case and that such a provision is discouraged both by Zhaga and Philips. It is the full responsibility of the luminaire manufacturer that, in case the configuration device is not connected, the luminaire operates in a safe and stable manner with extended SR control lines. Special attention must be paid to electrical insulation and surge immunity. Third parties like Citel offer specific surge protection devices (e.g. p/n MLPCHI-230L-V/DLn) to protect both driver and controller. The effectiveness of such a device has not been tested by Philips.

---

### Touch current

Xitanium LED Xtreme SR drivers are designed to meet touch current requirements for Insulation Class II applications per lighting control gear standard IEC 61347-1 in order to enable an easy design-in in Insulation Class II luminaires per IEC60598-1. The specified peak values can be found in the driver datasheet and refer to single-driver only level.

The insulation of the wiring to and from the drivers needs to be in compliance with IEC60598. Taking into account the double insulation of the driver between mains input and LED output, the (supplementary) output wiring insulation rating needs to be based on the specified maximum output voltage of the driver. See the driver datasheet for the specific value of this voltage.



**Note:** In a luminaire, the cumulative touch current may be higher since the LED module may introduce additional touch current. Precautions may be required on the luminaire level if multiple drivers are used in a single luminaire. Do **not** leave the EQUI terminal disconnected to lower the luminaire touch current; impaired EMC performance and reduced system surge immunity will result.

## Electro-Magnetic Compatibility (EMC)

Electromagnetic compatibility (EMC) is the ability of a device or system to operate satisfactorily in its electromagnetic environment without causing unacceptable interference with other systems or being too susceptible for external emissions from other systems. Xitanium LED Xtreme SR drivers meet EMC requirements per CISPR15 for conducted and radiated emissions. This test is conducted with a reference setup that includes a driver and an LED module + heat sink combination mounted on a metal plate and verified in Insulation Class I and II configurations.

## Remote mounting and EMC

Xitanium LED Xtreme SR drivers are designed for built-in use only and do not support remote mounting.

Signify has successfully performed CISPR15 EMC compliance tests on systems with a standard LED output cable length of 60cm as reference. For longer CISPR15-compliant cable lengths please check the driver datasheet for the maximum specified length.

If a longer distance beyond the maximum specified distance is required then the EMC performance needs to be verified separately. The use of shielded LED output wires is not recommended.



**Warning:** due to EMC reasons, remote mounting of a SR controller is not supported. The driver, controller and control wiring must remain within the same common driver enclosure (intra-luminaire use). Failure to observe this may result in damage to the driver and/or controller and EMC non-compliance. See p.22 for more details.



**Warning:** the length of the two NTC wires between driver and LED module is not allowed to exceed 60cm; otherwise reliable operation of the MTP feature is not guaranteed.



**Warning:** For optimal EMC performance and surge immunity the driver EQUI terminal must be connected to the luminaire chassis and, in case of Class I, to protective earth as well. This can be achieved by use of a wire to an earthing terminal or via the luminaire chassis which is connected to the mains input connector.


Doing so for Insulation Class II luminaires is in safety compliance with IEC61347-1, IEC60598-1 and IEC61140 regarding the relation between the driver EQUI terminal and live parts with respect to:

- Maximum allowable touch current
- Minimum required insulation resistance
- Minimum required creepage distances & clearances
- Minimum required electric strength

The purpose of the driver EQUI terminal is purely for functional performance reasons by establishing equipotential bonding; the EQUI terminal does **not** have a safety function.

## Electrical insulation

Driver insulation classifications between the several inputs and output can be found in the driver datasheet. Insulation classifications of Xitanium LED Xtreme SR drivers are optimized for design-in in Insulation Class II luminaires by offering double or reinforced insulation between live and accessible parts. The insulation between the EQUI terminal and the mains input is classified as double for all Xitanium LED Xtreme SR drivers.

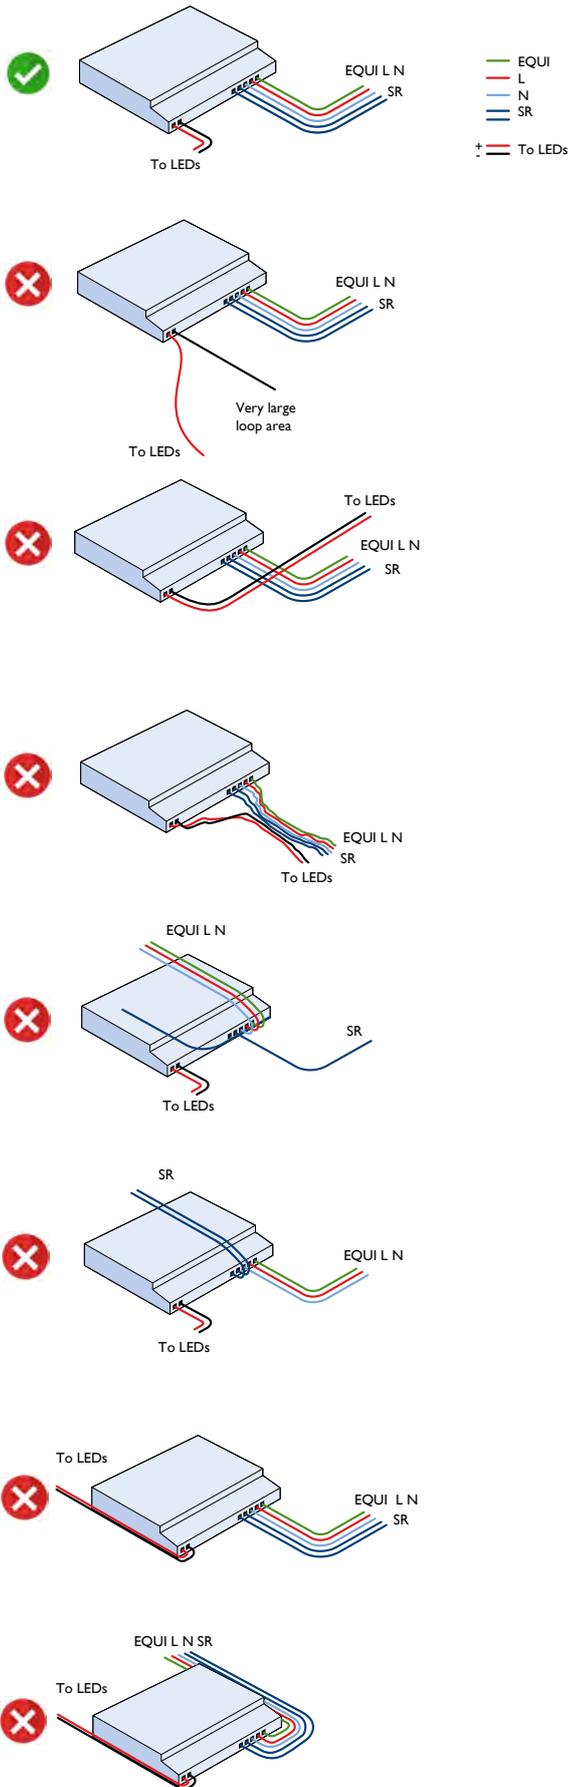

## EMC performance precautions

The following practical precautions need to be taken into account in a lighting system for optimal EMC performance:

- **Keep the SR bus and +24V auxiliary supply wires within the luminaire; do not connect these wires from one luminaire to the next or to remotely mounted controllers. See p.22 for more details.**
- Minimize the loop area of the LED output wires going from the driver to the LED module by keeping the output wires close together (bundling).
- Minimize the parasitic capacitive coupling of the LED output wiring towards earth by keeping the wiring length as short as possible.
- Keep the length of the incoming mains wire inside the luminaire as short as possible.
- Keep mains wires, SR control wires and LED output wires separate. Do not bundle or cross the wires.
- Do not route any wiring over and/or along the driver enclosure to avoid any noise coupling/crosstalk with internal driver circuitry



**Insulation Class I application:** ground the luminaire chassis and other large internal metal luminaire parts (driver mounting plate, reflector, canopy, heat sink etc.) to Protective Earth. **Always** connect the driver equipotential connector (EQUI) to Protective Earth.



**Insulation Class II application:** use equipotential bonding wires between all large metal luminaire parts (driver mounting plate, canopy, heat sink etc.) Do not keep large metal parts electrically insulated. **Always** connect the driver equipotential connector (EQUI) for equipotential bonding.

- Keep the equipotential wires as short as possible to maximize their effectiveness and use, as much as possible, large metal areas (chassis, mounting plates, brackets) for earthing purposes instead. Establish a reliable electrical connection by using a toothed washer and screw(s) fastened with adequate mounting torque.

Adhering to these rules will help to achieve EMC compliance. For further questions and/or design-in support please contact your local Signify representative.

### Sensor Ready interface (DA+/DA-)

The simple two-wire SR interface supports these key functions:

- Switchable built-in SR bus Power Supply Unit (SR PSU) to provide power to the connected controller (DALI Part 250)
- Memory Bank I Extension to store luminaire data (DALI Part 251)
- Two-way digital communication between the SR driver(s) and luminaire controller(s), using standard DALI protocol via a polarized SR bus:
  - Standard DALI dimming and on/off switching
  - Actual power consumption and energy data, utilizing the power monitoring integrated in the driver (DALI Part 252)
  - Diagnostic and Maintenance information (DALI Part 253)

See [www.digitalilluminationinterface.org/d4i/](http://www.digitalilluminationinterface.org/d4i/) for more info.



**Warning:** although communication via the SR (DA+/DA-) interface is based on DALI protocol, the interface itself is not an inter-luminaire or extra-luminaire DALI interface! The SR bus is polarized and supports **intra-luminaire use only**. See p.22 for more details.

### Built-in SR bus Power Supply Unit (SR PSU)


- Xitanium Xtreme SR drivers have the ability to supply the SR bus with a built-in SR PSU. This PSU can be disabled and enabled. By factory default, the SR PSU is enabled and ready for use with an external control device. The SR PSU is compliant per DALI Part 250.
- The SR PSU is capable of delivering a minimum current of 52mA (ISR) to the SR bus and the connected device(s).
- The SR PSU will never supply more than 60mA (ISR\_MAX).
- The SR bus voltage is depending on the controller load and the amount of SR PSUs connected in parallel. See the graph on the left for the typical VI curve for one SR PSU.
- When the internal SR PSU is switched OFF, the SR driver will extract a maximum of 2mA from the SR bus (like standard DALI gear).



**Warning:** Given the limited surge immunity of the SR bus and auxiliary supply, inter-luminaire use of Xitanium Xtreme SR drivers is **not** supported. Xitanium FULL Prog drivers with DALI interface should be used instead. The SR and +24V auxiliary supply wiring must remain within the luminaire. Failure to observe this may result in damage to the driver and/or controller as well as EMC non-compliance! See p.22 for more details.

### Luminaire control devices

- Most luminaire controllers intended to be used in an SR system will be powered from the driver SR bus or the auxiliary power supply.
- When communication is present on the SR bus, the bus gets pulled down by the data packages. This reduces the average current available for the power consuming control device. When communicating the average available current can drop with 50%. This should be taken into account when designing the control device.
- The extracted peak current (ISR\_EXTRACTED) should be limited by the control device.

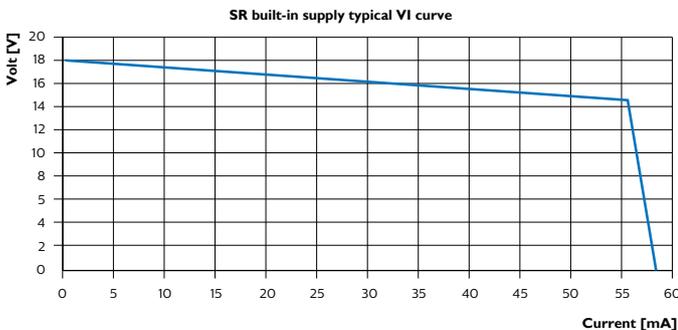


## Rules for building an SR system

- SR (DA+/DA-) bus polarity must be respected when more than one SR interface is connected in parallel.
- The total available SR bus current (ISR\_MAX\_TOTAL) must not exceed 250mA. This current can be determined by adding up ISR\_MAX of all connected SR PSUs. As a consequence a maximum of **four** enabled SR PSUs are allowed to be connected in parallel. The total current delivered to the SR bus (ISR\_DELIVERED) can be determined by adding up the ISR of all connected enabled SR PSUs.
- The total current extracted from the SR bus (ISR\_EXTRACTED) can be determined by adding up consuming devices like SR drivers with disabled SR PSU, other DALI gear and controllers (max. 2mA/device).
- To guarantee good communication, a margin of 8mA is needed to drive the SR bus itself (ISR\_MARGIN).
- The following rule should be respected:  $ISR\_EXTRACTED + ISR\_MARGIN \leq ISR\_DELIVERED$ .
- It is not allowed to connect multiple +24V auxiliary supplies in parallel.



## Warning:

When the above rules are not taken into account, communication cannot be guaranteed and damage to components may occur.

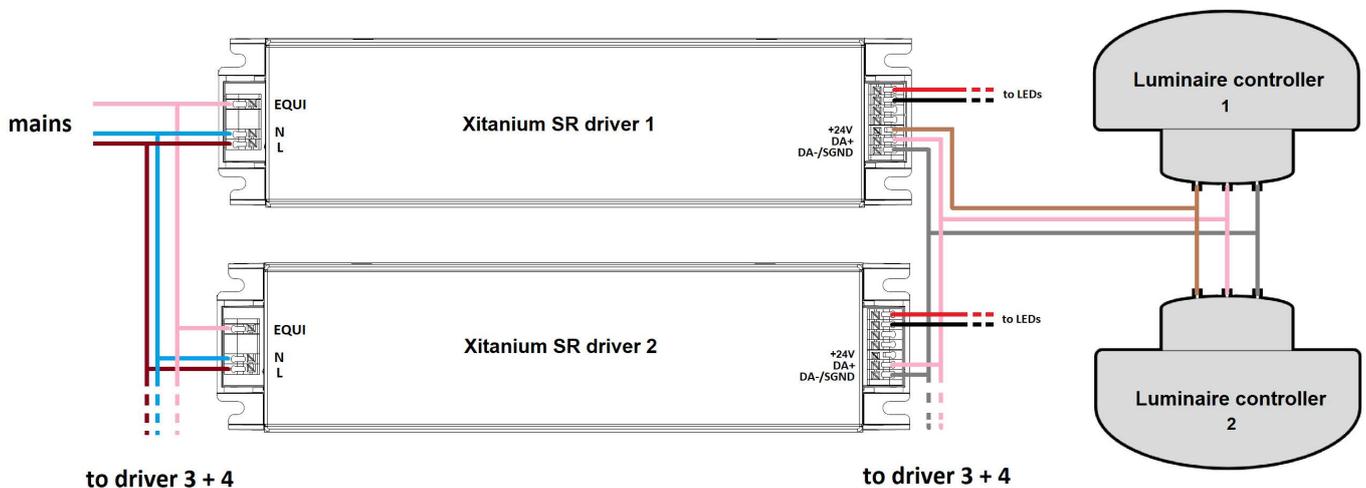

Suggested connection diagram for connecting up to four Xitanium SR Xtreme drivers to one or two luminaire controllers

## Typical examples

I. One SR driver is connected to a controller. The SR PSU of this driver is enabled. The specification of the controller states that the extracted peak current is 40mA. Will this SR system have good communication?

- One SR PSU is involved, so SR BUS polarity is irrelevant.
- $ISR\_MAX\_TOTAL = 60mA$ . This is  $\leq 250mA$
- $ISR\_DELIVERED = 52mA$
- $ISR\_EXTRACTED = 40mA$
- $ISR\_MARGIN = 8mA$
- $40 + 8mA \leq 52mA$

Conclusion: this system will function properly.

---

2. Is it allowed to add an SR driver with disabled SR supply PSU to this SR system?

Yes, an SR driver with disabled SR PSU extracts max. 2mA from the SR bus.

- $ISR\_EXTRACTED = 40 + 2 = 42mA$ .
- $42 + 8mA \leq 52mA$

Conclusion: this system will function properly.

3. It is allowed to enable the SR PSU of the second driver?

Yes, but the polarity of both SR PSUs must then be observed.

- $ISR\_TOTAL = 2 * 60mA = 120mA$ . This is  $\leq 250mA$ .

Conclusion: this system will function properly.

### Digital SR communication

Dimming via SR bus commands is possible through the standard digital interface based on DALI protocol.

Note that the output current at 100% level is determined by the driver. The minimum current that can be supplied by the driver is specified in the datasheet. The lowest dim level is defined by the higher of the two values: Minimum output current or 10% dim level.

**SR FlexTune:** see appendix for more dimming information.

The driver also supports many diagnostic features/parameters which can be accessed via the SR interface, as per SR Certified Specification.

### Standby power consumption

Xitanium LED Xtreme SR drivers consume less than 0.50W per driver when in standby mode. This standby power is excluding power consumed by a sensor connected to the SR bus and/or +24V auxiliary power supply. The SR PSU - if enabled- and +24V auxiliary power supply remain active when the driver is in standby mode.


### Auxiliary Power Supply (+24VDC)

A 24VDC auxiliary supply is incorporated in Xitanium SR Xtreme drivers to facilitate (transmission) power demands of nodes which the SR bus supply cannot provide due to its limited power capacity. This supply is compliant per Part 150 and shares its common with the SR PSU common DA-/SGND connector. The driver can withstand a short-circuit of this supply but the driver output will be pulled down during this short-circuit.



**Warning:** connecting the + terminals of multiple auxiliary power supplies of multiple drivers in parallel is not supported. These need to be kept separated from each other. The auxiliary power supply is intended for **intra-luminaire** use only and has limited surge immunity. Therefore, it is not allowed for the auxiliary supply lines to leave the luminaire. Failure to observe this may result in damage to the driver and/or controller!

# Driver configuration

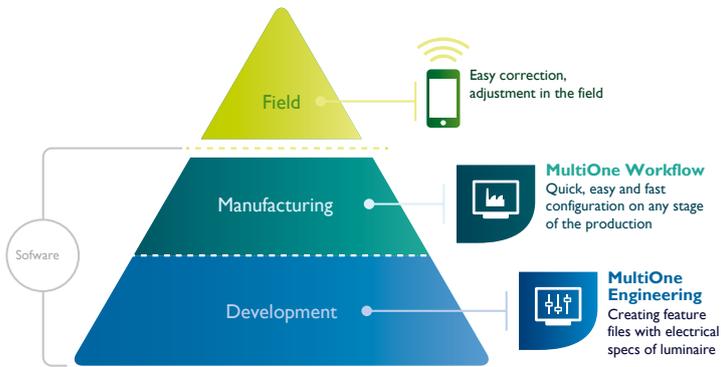

## Introduction

The Xitanium LED Xtreme SR drivers offer a tailored range of controls, enabling customizable luminaire design and performance. It is possible to control light output levels, preset dimming protocols and set system specifications in the factory and even in the complete installations. This can be done with the Philips MultiOne configurator. The MultiOne configurator is an intuitive tool that unlocks the full potential of all configurable drivers from Signify, ensuring that the driver performance matches the needs of the lighting solution. It offers unprecedented flexibility, before, during and after the product installation. Programming of new Xitanium LED Xtreme SR drivers can be done either by SimpleSet or via the SR interface with the USB2DALI interface.

For more information on MultiOne installation – software and programming: go to [www.philips.com/multione](http://www.philips.com/multione).

# Control features

How to program the features is explained in the User Manual guide of MultiOne; see the Help function of MultiOne or download it from [www.philips.com/multione](http://www.philips.com/multione). In this section the features will be explained in more detail.

## Adjustable output current (AOC)

AOC limits the driver output current to match the application requirement. The limited output current is then dimmable over the full user controllable dim range; the AOC level [mA] being the 100% light level.

**SR FlexTune:** a separate AOC value for each output channel can be configured when the driver is set as Device Type 6 per DALI Part 207. If the driver is set per Device Type 8 for CCT per DALI Part 209 then the actual AOC value follows from the configured CCT profile.

The default AOC value can be found in the driver datasheet.

## Adjustable Light Output (ALO)

ALO limits the light output of the driver to match the application requirement. The limited light output is then dimmable over the full user controllable dim range; the ALO level [%] being the 100% light level. Setting an ALO minimum level prevents the light from dropping below the set level during dimming conditions. This is a useful feature if a minimum light level needs to be maintained under all conditions.

ALO can also be used to permanently set the AOC value at a level below the minimum programmable AOC level. E.g. if the min. programmable AOC value of a driver is 200mA while the required AOC value is 160mA then the ALO feature must be enabled and set at 80%.

Depending on driver type, there are two ALO versions available: one version with and one without the option to set the ALO minimum level. Please check the driver datasheet to find out which ALO version is supported.

**SR FlexTune:** the ALO feature is not available.

## LED Module Temperature Protection (MTP)

MTP is the method in which a thermal sensor (NTC resistor) implemented on the LED module is sensed by the driver, which will reduce the output current when a predefined (temperature) limit is exceeded in order to protect the LED module from thermal overstress. The driver accommodates for three NTC resistor choices. See the section Thermal Design-In for more details on NTC type.

**SR FlexTune:** the configured MTP profile applies to both output channels simultaneously when the driver is set as Device Type 8. Two separate CLO profiles can be set in case the driver is set as Device Type 6.

## Driver Temperature Limit (DTL)

Applicable to: select Xi SR drivers

DTL supports thermal finetuning of a lighting system via configurable parameters. See section Thermal Design-in for more details. Please check the driver datasheet to check whether DTL is supported.

### Constant Light Output (CLO)

CLO will gradually increase the light level over time from an initial lower light level up to 100% light level in order to compensate for LED module depreciation over life. It can also serve as a means to reduce energy consumption.

CLO settings includes enabling disabling and redefining the CLO dimming curve. Changes are effective immediately. The allowed range for CLO is 0-100% with 1% increments (note that 0% results in the output being switched off. The 100% level corresponds with the configured AOC value or AOC + ALO values.

**SR FlexTune:** two individual CLO profiles for each output channel can be configured when the driver is set as Device Type 6. In case the driver is set as Device Type 8 only one CLO profile can be configured.

### End Of Life (EOL)

EOL is providing a visual notification to a customer that the LED module has reached the end of its manufacturer- specified life and that replacement is recommended.

Once active, a visual indication is given at each power-up of the driver, after which the LEDs will flash for 2.5 seconds before normal operation is continued. See the illustration on the left.

A time slider is provided to set back the operating hours to zero in case the CLO feature is used. This will prevent a too high initial lumen output from a new replacement LED module.

**SR FlexTune:** the EOL feature is not available.

### Adjustable Start-up Time (AST)

The AST feature enables a time-adjustable gradual increase of the light level after powering up the driver, ensuring a smooth and comfortable transition from a low light level to the full light level. This ramp-up time is configurable via MultiOne software.

The initial low light level is fixed and will be either 10% of the configured AOC value or the absolute minimum output current of the driver, depending on which lower limit is reached first.

**SR FlexTune:** the AST feature is not available.



**Note:** the AST feature does not in any way influence the driver inrush current at mains turn-on.


### DC emergency dimming operation (DCemDim)

Xitanium LED Xtreme SR drivers are equipped with an auto-detect DC voltage feature. As soon as a DC input voltage is detected, the driver will automatically set the output current to a predefined configurable emergency dimming level.



**Note:** during DC operation the output current cannot be set higher than 60% of the programmed AOC value applicable during AC operation.

The driver will ignore all SR dimming commands when operated at DC input voltage unless the optional checkbox “Allow dimming” in the DC Emergency tab is selected.

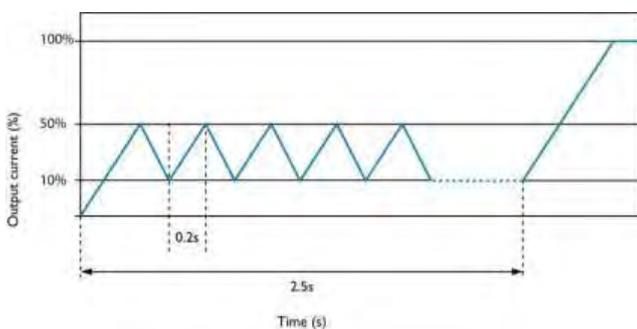

EOL flashing output current waveform

---

## Dynadimmer

The Integrated Dynadimmer is an autonomous dimming control developed by Signify that enables simple, pre-programmed customized multistep dimming without the need for external control infrastructure. Its main function is energy reduction by reducing light levels or switching off the light during the night when it is not required to have full light output.

Dynadimmer operation override is possible by SR commands at any time. Once in override mode, the driver will remain in SR mode until the next mains power cycle.

This override does not interfere with the Dynadimmer synchronization algorithm.

**SR FlexTune:** two separate Dynadimmer profile for each output channel can be configured when the driver is set as Device Type 6.

When set as Device Type 8, a total of ten Dynadimmer scenes including required CCT points can be configured.

## Dynadimmer working principle

Dynadimmer offers two options: time-based and location-based.

The time-based option does not compensate for seasonal changes and starts executing the Dynadimmer profile as soon as power is applied to the driver. This option is best suited for applications with fixed power-on/off timing.

However, in most outdoor applications the timing will vary per season and the dimming schedule should thus be adapted accordingly. For this Signify has introduced the programmable Dynadimmer feature which simply uses the driver power-on time duration as reference.

Based on the average power-on time of the previous periods, the driver is able to estimate the current time of day and uses this as a virtual clock time which serves as reference for the dimming schedule programmed by the user.

The Dynadimmer feature relies on a regular power-on time from one night to the next. Typically, the power-on time is based on sunset and sunrise and its duration will vary gradually throughout the seasons. The Dynadimmer therefore calculates the power-on time average of the five last preceding stable nights. A stable night is regarded as a night with a power-on time of at least four hours within a tolerance of one hour that equals the latest calculated average power-on time. This implies that after first installation the Dynadimmer will need three stable nights to be able to calculate the virtual clock time required for the programmed dimming schedule. During this synchronization phase the Dynadimmer will not dim the light output for the first three nights.

Depending on geographical location or on the application, the switch-on time is not always evenly distributed around midnight. To be able compensate for the difference in sunrise and sunset over a time zone, the user can set his geographical location in both western or eastern direction.

---

### **Dynadimmer working principle (cont'd)**

For example if the sunset in Berlin is at 19:00 this will be in Poland at 18:25 and in Portugal 19:35. To be able to synchronize the absolute clock time with a photocell controlled system in Poland the offset should be set at -25 minutes and for Portugal +35 minutes.

By default the mid position of a time zone (in above time-zone this will be close to Berlin) will be selected; in most cases this default value will be accurate enough.

The midnight shift option is of course not available when the Time based option has been selected.

Since the frequency of the power grid is used the accuracy of timing is very high and is typically far within 1%. Nearby luminaires connected on the same on/off cycle and programmed with the same Dynadimmer schedule will dim down and up simultaneously.

In normal operation mode (after the synchronization phase) the Dynadimmer will handle maintenance or short power interruption in correct ways, thus preventing dimming schedule disruptions.

### **Dynadimmer attention points**

If after synchronization the change in power-on time is more than one hour then the driver does not need three new power-on cycles for re-synchronization. Instead, the driver looks further back in the history of previous power-on cycles to calculate the virtual clock time. As long as there are three stable power-on cycles in the history of the last five power-on cycles, with all three having the same duration (i.e. less than one hour difference) the driver will still dim as scheduled. This mechanism will prevent disruption of the Dynadimmer dimming behavior due to occasional mains black- and brownouts.

If the difference in power-on time duration is less than one hour then this will represent normal operation in which the driver will average the last three power-on times as reference to calculate the virtual clock time. The dimming schedule will stay active while gradually adapting to the new power-on time. Below examples show the sequence of events as the on-time changes.

#### **Influence of mains interruption (blackout):**

If the mains voltage drops to zero for more than one second then the driver will record this as a power-off event and will try to re-calculate the virtual clock time again when power is restored. This only means that the driver will need to synchronize to the regular power-on time duration (see previous section). If the duration of a mains voltage drop to 0V is less than one second then the Dynadimmer operation will continue and the Dynadimmer dimming cycle remains unaffected.

#### **Influence of mains voltage dip (brownout):**

The driver is robust enough to handle a mains voltage dip down to 25VAC for one minute without disruption of the Dynadimmer timing. Light output will be less and may even drop to zero for the duration of the mains dip but the dimming schedule will not be affected.

---

### Dynadimmer attention points (cont'd)

#### Temporary mains power-off (maintenance at night, blackout):

If the power outage occurs within the first 4 hours of the night then a new night will be calculated on the remaining on-time. For the next night, the average on-time before the outage will be used as reference. Hence, it won't affect the dimming duration of the next night and regular dimming will result. If the power outage takes place after more than four hours and not closer than at least one hour before the expected end of the night then this deviating on-time will be taken into account to calculate the average power-on time of the five preceding nights. However, it won't affect the dimming duration of the next night. If the outage takes place within one hour before the expected end of the night then this deviating power-on time will be taken into account as a valid night to calculate the average power-on time of the three preceding nights. This will then temporarily affect the dimming behavior.

#### Temporary mains power-on (maintenance during the day):

If the power-on time is less than four hours then this deviating power-on time will be ignored and the average power-on time before the deviation will be used as reference. Hence, it won't affect the dimming duration of the next night. If the power-on time is more than four hours and at least one hour less than the average power-on time of the three preceding nights then this deviating power-on time will be taken into account to calculate the average on-time of the five preceding nights. However, it won't affect the dimming duration of the next night.



- **Notes:**

- The Dynadimmer does not compensate step-wise for the 1-hour shift in time due to daylight savings time changes in fall and spring.
- The Dynadimmer feature does **not** support 24h applications (e.g. tunnels, warehouses). A power off/on cycle is required every 24 hours.
- Dynadimmer operation is **not** supported when the driver is operated on a DC grid.

---

### SR Power Supply Unit (SR PSU)

Xitanium LED Xtreme SR drivers are equipped with an integrated Power Supply Unit (PSU) to power a luminaire controller via the SR communication bus. This PSU can be disabled if power is not needed. The PSU must be disabled if more than four SR PSUs are connected in parallel in order to prevent SR bus current exceeding 250mA.

### Last gap

Factory default setting: disabled

Select Xitanium SR drivers are equipped with this feature. This feature enables the connected controller to identify a power loss situation and enables “last second” operations before shutdown.

The last gap energy can be used by the connected controller to:

- Store data to non-volatile memory before shutdown
- Send out a last message for diagnostics

### Heartbeat

Factory default setting: disabled

Select Xitanium SR drivers are equipped with this feature. The heartbeat mechanism is intended to revive a controller supplied by the driver in the event of an internal lock-up of the controller. The SR driver monitors the activity of the connected controller and in case there is no activity observed for a specified period it will perform a power cycle of the SR PSU to reboot the controller.



**Note:** this feature will only be active when the SR PSU is enabled and at least one DALI forward frame is received after a power cycle.

The heartbeat feature is default disabled in drivers that comply to the SR2 specification. It can be enabled through the SR interface via MultiOne software.

# Appendix: FlexTune CCT control

Applicable to Xitanium SR FlexTune sXt drivers only

## CCT tuning

It is important to understand the CIE chromaticity diagram because the DALI standard adopted for color control uses the x, y coordinates representing each CCT. The DALI 209 standard, also known as DALI Type 8, defines a DALI compatible device (Device Type 8), which allows a user to change color temperature and intensity to their preference within the same luminaire to achieve tunable white color changing. The Xitanium SR FlexTune driver can be utilized as a DALI Type 8 device and uses x, y coordinates for color tuning to that end.

The Xitanium SR FlexTune driver meets the requirements of DALI 209 with the following two exceptions:

1) The DALI command, STORE\_COLOUR\_TEMPERATURE\_Tc\_LIMIT, used in conjunction with the DALI commands COLOUR\_TEMPERATURE\_PHYSICAL\_COOLEST\_Tc and COLOUR\_TEMPERATURE\_PHYSICAL\_WARMEST\_Tc, will have no effect for the Xitanium SR FlexTune driver. These parameters, Cool LED\* and Warm LED\* are configured, through the MultiOne configurator, by the use of the LED string configuration feature\* in order to achieve the most accurate color temperature performance.

2) The factory defaults for the DALI commands, POWER\_ON\_COLOR and SYSTEM\_FAILURE\_COLOR, will return predefined values for both the Power on Tc\* and System failure Tc\*. The values for these features can be modified by the OEM or end user to their preference.

\*See the "SimpleSet configurable features: FlexTune specific features" section for an explanation and configuration settings of these features.

The MultiOne configurator allows for both x, y coordinate entry and CCT entry but for CCT entry, the CCT entry is converted to an estimated x, y coordinate. This conversion results in some error in accuracy and the direct x,y coordinate entry method is recommended for this reason. All of the x, y coordinate calculations are done within the MultiOne tool and the resulting DALI values are transferred to the Xitanium SR FlexTune driver. The Xitanium SR FlexTune driver interprets these values and performs the correct CCT tuning.

Note: All x, y and CCT MultiOne configurator entries are values that have originated from the datasheets for the LED module being used with the Xitanium SR FlexTune driver.



**Notes:** When the driver is configured per DALI part 209 (Device Type 8), the minimum dimming level per either output channel is 1%. However, the dimming levels of the two output channels combined cannot be less than 10%. It is recommended to keep the dimming levels of both output channels above 10% in order to maintain sufficient CCT control accuracy.

In DALI 207 mode a short address will be assigned arbitrarily to each output channel. A visual check is required to verify which output channel is assigned to a given DALI short address.

## MultiOne implementation

The Xitanium SR FlexTune driver uses a subset of the DALI 209 variables to program the desired CCT behavior. These are shown below with the corresponding MultiOne GUI representations. These MultiOne GUI items are explained in more detail in the section: Features of Xitanium SR FlexTune LED drivers. More information concerning MultiOne and its implementation can be found at [www.philips.com/multione](http://www.philips.com/multione).

### DALI 209 variable

COLOUR TEMPERATURE Tc PHYSICAL COOLEST  
COLOUR TEMPERATURE Tc PHYSICAL WARMEST  
POWER ON COLOUR VALUE  
SYSTEM FAILURE COLOUR VALUE  
COLOUR TEMPERATURE Tc COOLEST  
COLOUR TEMPERATURE Tc WARMEST

### MultiOne GUI item

Cool LED  
Warm LED  
Power on Tc  
System failure Tc  
Tc coolest  
Tc warmest


## Features

### Driver wiring

Connector terminals with their corresponding functions as well proper connections are shown in the diagram to the left.

There are two dedicated positive LED+ as well as two negative LED- connector terminals provided for connection to the cool white positive (CW+) and warm white positive (WW+) LED modules.

The total output power of the two outputs combined cannot exceed the rated driver output power. The LED module forward voltages of the CW and WW outputs are allowed to be different.

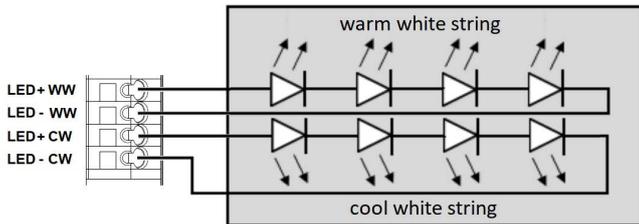

Output connection diagram




### Important wiring guidelines

- The CW and WW connections are **not** interchangeable.
- Parallel connection of the two driver outputs is **not** supported.
- A common + or - wire for both outputs cannot be combined.
- Keep wiring between the driver and the LED module as short as possible.
- Keep the sets (+/-) of CW and WW wires between the driver output and LED modules at the same length whenever possible for the best CCT correlation performance.
- Route the CW- and WW- wires closely together.
- Remote mounting of the Xitanium SR FlexTune Xtreme driver is not supported.

### Operating window

Drivers can deliver different levels of output power, depending on driver type, and a different output current/ output voltage window applies to each. The LED module current and voltage characteristics must be within the driver window (under steady state, full output and dimming conditions). The driver performance cannot be guaranteed outside the window. See the illustrated example of an operating window for a dimmable driver. Please consult the datasheet for the specified operating window for the driver you are using.

The LED module forward voltage  $V_f$  is typically influenced by a number of factors such as the LED temperature, binning (tolerance), drive current and aging. It is important to consider these factors when determining the required voltage range for a certain LED module to ensure that the  $V_f$  stays within the operating window of the driver. The driver will limit the voltage available for the LEDs based on its operating window.

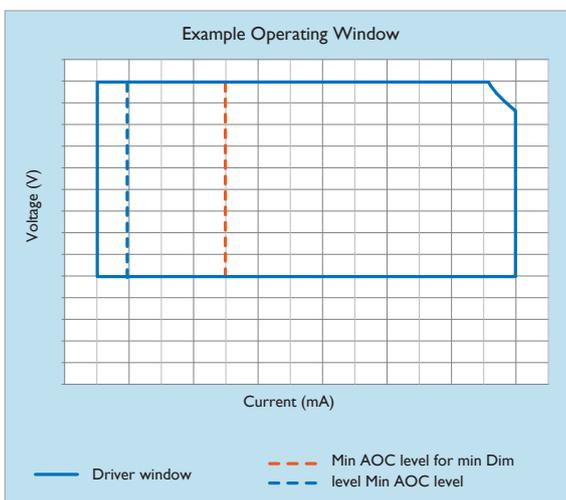

Example operating window (dimmable driver)

---

## SimpleSet configurable features: FlexTune specific features

**Note:** Please also refer to the Philips MultiOne configurator user manual for more information. More information concerning MultiOne and its implementation is located at [www.lighting.philips.co.uk/oem-emea/products/philips-multione-configurator](http://www.lighting.philips.co.uk/oem-emea/products/philips-multione-configurator).

---

The SimpleSet configurable features, as shown in the figure below, are specific to the FlexTune system. These features are:

- LED string configuration by x, y
- LED string configuration by Tc (CCT)
- Light level configuration - constant lumen output
- Light level configuration - flexible lumen output
- Additional color configuration - power on Tc
- Additional color configuration - system failure Tc
- Additional color configuration - Tc coolest
- Additional color configuration - Tc warmest
- Additional color configuration - Tc offset (+/-)

These features are explained in more detail in the following pages.

Feature	Description of the feature	Notes and examples
---------	----------------------------	--------------------

**LED string configuration by x, y**

**LED string configuration using x and y coordinates.** This feature allows the LED characteristics to be entered into the configurator by the OEM. Input is based on the x and y chromaticity coordinates of the warm and cool CCT of the module. These coordinates are the endpoints for the entire color range of the LED module. Using the LED modules x and y coordinates results in the most accurate CCT operating point. The rated lumens of the LED module at a rated current is entered as well for both the cool and warm temperature. The information for the x and y coordinates, lumen and current ratings can be found in the datasheet of the LED module.

The OEM enters the x and y coordinates for the cool and warm LED module characteristics as provided in the datasheet by the LED module manufacturer. The rated lumens for the LED module is also entered along with the rated current at that specific lumen level for both the cool and warm temperatures. This information is also entered from the LED module datasheet.

Note: To provide a proper estimate of the lumen output from the luminaire, the user needs to enter the luminaire rated lumens and the rated current value related to that specific lumen level into the configurator for both the cool and warm LED.

Note: This is an OEM write protected feature.

**LED string configuration**

Configuration by

	X	Y	Tc		Rated lumen		Rated current
Cool LED	<input type="text" value="0.31"/>	<input type="text" value="0.327"/>	<input type="text" value="6671"/> K		<input type="text" value="2200"/> Lm	@	<input type="text" value="308"/> mA
Warm LED	<input type="text" value="0.457"/>	<input type="text" value="0.408"/>	<input type="text" value="2717"/> K		<input type="text" value="2040"/> Lm	@	<input type="text" value="394"/> mA

Feature	Description of the feature	Notes and examples
<p><b>LED string configuration by Tc (CCT)</b></p>	<p><b>LED string configurations using Tc (CCT) values.</b> This feature allows the LED characteristics, based on the LED module cool and warm temperature CCT values, to be entered by the OEM into the configurator. These CCT values are the endpoints for the entire color range possible of the LED module. Using the LED modules CCT values is not as accurate as using the X and Y coordinate method for CCT accuracy. Using the CCT value method, the X and Y chromaticity coordinates are estimated using the CCT values supplied. This process of estimation results in a less accurate actual CCT operating point. The rated lumens for the LED module at a rated current is entered as well for both the cool and warm temperature. The information for the CCT values, lumen and current ratings are included in the datasheet of the LED module.</p>	<p>The OEM enters the CCT values for the cool and warm LED module characteristics as provided in the datasheet by the LED module manufacturer. The rated lumens for the LED module is also entered along with the rated current at that specific lumen level for both the cool and warm temperatures. This information is also entered from the LED module datasheet.</p> <p>Note: To provide a proper estimate of the lumen output from the luminaire, the user needs to enter the luminaire rated lumens and the rated current value related to that specific lumen level into the configurator for both the cool and warm LED. The lumen output from the luminaire must take into consideration the losses of the luminaire (lens, paint, etc.).</p> <p>Note: This is an OEM write protected feature.</p>

**LED string configuration**

Configuration by

	X	Y	Tc		Rated lumen		Rated current
Cool LED	<input type="text"/>	<input type="text"/>	<input type="text" value="6671"/> K		<input type="text" value="2200"/> Lm	@	<input type="text" value="308"/> mA
Warm LED	<input type="text"/>	<input type="text"/>	<input type="text" value="2717"/> K		<input type="text" value="2040"/> Lm	@	<input type="text" value="394"/> mA

Note: When "Configuration by Tc" is selected, the X and Y values are estimated. This may result in lower Tc accuracy.

Feature	Description of the feature	Notes and examples
<b>Light level configuration -constant lumen output</b>	<p>Light level configuration with constant lumen output. This feature allows the LED module lumen output level to be held constant at a specified lumen level. The lumen level is determined from the module datasheet and only the cool LED current information corresponding to specified lumen level is entered into the configurator by the OEM. The warm LED current level will be automatically filled into the configurator as a calculated value by MultiOne based on the LED module information entered in the LED string configuration . The lumen levels for both the cool and warm LEDs will be shown and can be confirmed against the current level that was input as data. The driver will maintain the lumen output over the entire CCT range from coolest to warmest.</p> <p>Note that the adjustable output current (AOC) feature is included as part of the Light Level Configuration feature. The AOC feature allows the maximum output current to be set within the stated range for the output current (Iout) as noted in the driver datasheet. For constant lumen output, the cool LED will always have a lower current value in comparison to the warm LED due to the higher efficiency of the cool LED. This means the maximum current provided by the driver will always be limited by the warm LED and minimum driver current will always be limited by the cool LED.</p>	<p>The OEM enters the current value for the cool LED as provided in the datasheet by the LED module manufacturer for a given lumen level. The lumen output information will be displayed by the configurator and can be verified for accuracy. The AOC level can then be set (slider or box entry) to whatever current is needed for the particular lumen output at the luminaire level.</p> <p>Note: This is an OEM write protected feature.</p>

**Light level configuration**

Light output over Tc range Constant v

---

Cool LED 4636 Lm @

AOC  649 mA

---

Warm LED 4636 Lm @

AOC  895 mA

Feature	Description of the feature	Notes and examples
<p><b>Light level configuration - flexible lumen output</b></p>	<p>Light level configuration - flexible lumen output. This feature allows the LED module lumen output level to be flexible across a wide CCT range. A reference lumen level can be determined from the module datasheet from both the cool and the warm LED current information corresponding to a specified lumen level and both of these current values are entered into the configurator by the OEM. The lumen levels for both the cool and warm LEDs will be shown and can be confirmed against the current levels that were input as data. The user has the ability to tailor the current levels, either cooler or warmer, at either end of the LED module CCT range, affecting the lumen output at every specific CCT. The driver will vary the lumen output over the entire CCT range from coolest to warmest.</p> <p>Note that the adjustable output current (AOC) feature is included as part of the Light Level Configuration feature. The AOC feature allows the maximum output current to be set within the stated range for the output current (I<sub>out</sub>) as noted in the driver datasheet. For flexible lumen output, either the cool or warm LED can have a higher or lower current level or possibly even the same current level. This means the maximum current provided by the driver will always be limited by the cool or warm LED with the most current and the minimum driver current will always be limited by the cool or warm LED with the least amount of current.</p>	<p>The OEM enters the current value for both the cool and warm LED as provided in the datasheet by the LED module manufacturer for a given lumen level. At this point the lumen output information will be displayed by the configurator and can be verified for accuracy. The AOC level can then be set (slider or box entry) to whatever current is needed for the particular lumen output at the luminaire level. The OEM has flexibility to tailor the lumen output at different CCT points as needed or required.</p> <p>Note: This is an OEM write protected feature.</p>

**Light level configuration**

Light output over T<sub>c</sub> range: Flexible v

---

Cool LED 4636 Lm @

AOC  649 mA

---

Warm LED 4634 Lm @

AOC  895 mA

Feature	Description of the feature	Notes and examples
<b>Additional color configuration - power on Tc output</b>	<p><b>Additional color configuration - power on Tc.</b> This feature allows the ability for the OEM to specify an initial CCT at power on of the system (driver plus LED module). Selection of the CCT is limited to the available range of the LED module as initially entered into the LED string configuration settings.</p>	<p>The OEM can set the initial CCT by slider or box entry to what is desired at system power on.</p> <p>Note: This is an OEM write protected feature.</p>
<b>Additional color configuration -system failure Tc</b>	<p><b>Additional color configuration -system failure Tc.</b> This feature allows the ability for the OEM to specify a CCT in the instance of failure of the system. System failure is defined here as a DALI bus communication failure. Selection of the CCT is limited to the available range of the LED module as initially entered into the LED string configuration settings.</p>	<p>The OEM can set an expected CCT by slider or box entry to what is desired in the event of a DALI bus communication failure.</p> <p>Note: This is an OEM write protected feature.</p>
<b>Additional color configuration -Tc coolest</b>	<p><b>Additional color configuration -Tc coolest.</b> This feature allows the ability for the OEM to specify a cool CCT lower limiting endpoint other than the CCT cool LED limit set by the LED module parameters. Selection of the cool CCT endpoint is limited to the available range of the LED module as initially entered into the LED string configuration settings.</p>	<p>The OEM can set a lower limiting endpoint for the coolest CCT by slider or box entry to what is desired. The limiting endpoint will not allow operating at a CCT below the chosen setting.</p> <p>Note: This is an OEM write protected feature.</p>
<b>Additional color configuration -Tc warmest</b>	<p><b>Additional color configuration -Tc warmest.</b> This feature allows the ability for the OEM to specify a warm CCT upper limiting endpoint other than the CCT warm LED limit set by the LED module parameters. Selection of the warm CCT endpoint is limited to the available range of the LED module as initially entered into the LED string configuration settings.</p>	<p>The OEM can set an upper limiting endpoint for the warmest CCT by slider or box entry to what is desired. The limiting endpoint will not allow operating at a CCT above the chosen setting.</p> <p>Note: This is an OEM write protected feature.</p>

Feature	Description of the feature	Notes and examples
<b>Additional color configuration - TC offset (+/-)</b>	<p>Additional color configuration-Tc offset (+/-). This feature allows the user to enter a positive or negative CCT offset in Kelvin. This may be used to offset for color shifts caused by secondary optics or light guides or even external influences such as non-white painted surfaces near the light source. This feature can also be used for field tuning of fixtures.</p>	<p>The OEM can use this feature by entering positive or negative value using the slider or box entry to create a CCT offset for color tuning.</p> <p>This feature can also be used for field tuning of fixtures where differences might be noted between luminaries in close proximity to one another.</p> <p>Note: This is <b>not</b> an OEM write protected feature.</p>

**Additional color configuration**

Power on Tc		<input type="text" value="4000"/> K
System failure Tc		<input type="text" value="3500"/> K
Tc coolest		<input type="text" value="6500"/> K
Tc warmest		<input type="text" value="2717"/> K
Tc offset (+/-)		<input type="text" value="0"/> K

---

### Output Current dependencies

The actual output current in the application depends on configuration of those driver features which influence output current and which are enabled or activated, like ALO, CLO, SR dim level, MTP, DTL, Dynadimmer and DCemDim.

The reference for output current is defined by the configured AOC value in mA. The actual output current then follows the values as configured for the several enabled features.

In formula, the actual output current is:

$AOC \times ALO \times CLO \times \text{Dynadimmer} \times (\text{MTP and/or DTL})$

$AOC \times ALO \times CLO \times \text{SR dim level} \times (\text{MTP and/or DTL})$

$AOC \times ALO \times CLO \times (\text{MTP and/or DTL})$

#### Example 1:

Driver AOC = 700mA, CLO = 70%, Dynadimmer level = 50% and ALO = 80% and driver Tc is such that DTL dictates 50% dimming. Actual output current is then 98mA or minimum specified driver output current, whichever value is reached first.

#### Example2:

Driver AOC = 500mA, CLO = 80%, SR dim command = 242 (70%). Actual output current is then 280mA.

The following applies for DCemDim-equipped drivers while running on DC input voltage:

Actual output current = rated AOC x 0.6 (max).

---

### **OEM Write Protection (OWP)**

By enabling the OWP feature the OEM can prevent unauthorized changes of crucial driver settings. The OWP feature is based on password protection that will be set in the driver so the preconfigured data of OEM write-protected driver features can only be modified by providing the correct password. Depending on the type of driver the OEM can protect the following:

- a set of features (fixed)
- a selection of individual features (free selection)

In order to indicate which features are locked, you will see a small lock symbol on each feature while trying to write the driver.

How to program this feature is described in the user manual of MultiOne Engineering at [www.philips.com/multione](http://www.philips.com/multione).

The password is needed to change the protected features of this driver. Without the password these features cannot be modified.

Encrypted in the feature file, the password can be easily programmed in production via the MultiOne workflow software. New drivers or replacement drivers can be programmed on this way. Already programmed drivers with password are protected and will give an error. They can only be changed using the correct password.

It is important for the OEM to set up a password management system, keeping feature file and password together in the BoM of the luminaire. The password management is under the responsibility of the OEM who sets it. In case of a lost password, the OEM is advised to contact the local Signify representative.

# WEEE Disposal Instructions

- EN** Please inform yourself about the local waste disposal, separation and collection system for electrical and electronic products and packaging. Please act according to your local rules and do not dispose your old product and packaging with your normal household waste. The correct disposal of the packaging, your product and/or batteries will help prevent potential negative consequences for the environment and human health. Batteries should be disposed separately from the municipal waste stream via designated collection facilities. When disposing a product that contains non-user replaceable batteries, the non-user replaceable batteries shall be removed by a professional.
- DE** Bitte erkundige Dich nach dem örtlichen Entsorgungs-, Trenn- und Sammelsystem für elektrische und elektronische Produkte und Verpackungen. Richte Dich bitte nach den geltenden Vorschriften in Deinem Land und entsorge Deine Altgeräte nicht über Deinen Haushaltsabfall. Durch die korrekte Entsorgung der Verpackung, Deines Produkts und/oder der Batterien/Akkus werden Umwelt und Menschen vor möglichen negativen Folgen geschützt. Batterien/Akkus müssen separat vom städtischen Abfallsystem über dafür vorgesehene Sammelstellen entsorgt werden. Bei der Entsorgung eines Produkts, das nicht vom Benutzer austauschbare Batterien/Akkus enthält, sollten die nicht vom Benutzer austauschbaren Batterien/Akkus von einer fachkundigen Person entfernt werden. Weitere Informationen über die Entsorgung Ihres Produktes und der Batterien finden Sie unter [www.signify.com/de-de/sustainability](http://www.signify.com/de-de/sustainability).
- FR** Veuillez vous informer sur le système de collecte local, et sur la procédure de tri et de collecte des produits électriques et électroniques, et des emballages. Veuillez vous conformer aux consignes locales, et ne jetez pas votre ancien produit et son emballage avec les ordures ménagères. En respectant ces consignes pour mettre au rebut l'emballage, le produit et/ou les piles, vous contribuez à respecter l'environnement et la santé des personnes. Les piles ne doivent pas être mêlées aux ordures ordinaires, mais jetées sur des sites séparés prévus à cet effet. Lorsque vous mettez au rebut un produit contenant des piles non remplaçables, celles-ci doivent être retirées par un professionnel.
- NL** Houd rekening met het lokale systeem voor afvalscheiding en -inzameling wanneer u elektrische en elektronische producten of verpakkingen weggooit. Neem de lokale regelgeving in acht en gooi je oude producten en verpakkingen niet weg met het normale huishoudelijke afval. Het correct wegwerpen van de verpakking, het product en/of batterijen helpt mogelijke negatieve gevolgen voor het milieu en de menselijke gezondheid te voorkomen. Batterijen moeten gescheiden van huishoudelijke afvalstromen worden ingeleverd bij speciale inzamelpunten. Wanneer je een product weggooit met batterijen die niet door de gebruiker kunnen worden vervangen, moeten die batterijen door een professional worden verwijderd.
- ES** Infórmese sobre el sistema local de eliminación, separación y recogida de residuos de productos y envases eléctricos y electrónicos. Actúe de acuerdo con las normas locales y no tire el producto antiguo y su embalaje a la basura doméstica normal. La eliminación correcta del embalaje, de su producto y/o de las pilas contribuirá a evitar posibles consecuencias negativas para el medio ambiente y la salud humana. Las pilas deben eliminarse por separado del flujo de residuos municipales en las instalaciones de recogida designadas. Cuando deseches un producto que contenga pilas no sustituibles por el usuario, un profesional deberá retirar las pilas no sustituibles por el usuario.
- PT** Informe-se sobre o sistema local de eliminação, separação e recolha de resíduos de embalagens e produtos elétricos e eletrônicos. Proceda em conformidade com as regras locais e não elimine a produto antigo e a respetiva embalagem juntamente com os resíduos domésticos normais. A eliminação correta da embalagem, do seu produto e/ou das pilhas ajudará a prevenir potenciais consequências negativas para o ambiente e para a saúde humana. As pilhas devem ser eliminadas em separado do fluxo de resíduos urbanos através das instalações de recolha designadas. Quando se elimina um produto que contém pilhas não substituíveis pelo utilizador, estas devem ser removidas por um profissional.
- IT** Si prega di informarsi sul sistema locale di smaltimento, separazione e raccolta dei rifiuti per prodotti elettrici ed elettronici e imballaggi. Si prega di agire secondo le regole locali e di non smaltire il vecchio prodotto e l'imballaggio con i normali rifiuti domestici. Il corretto smaltimento dell'imballaggio, del prodotto e/o delle batterie aiuterà a prevenire potenziali conseguenze negative per l'ambiente e la salute umana. Le batterie dovrebbero essere smaltite separatamente dal flusso di rifiuti urbani tramite strutture di raccolta designate. Quando si smaltisce un prodotto che contiene batterie non sostituibili dall'utente, le batterie non sostituibili dall'utente devono essere rimosse da un professionista.
- DA** Hold dig orienteret om den lokale affaldsordning, -sortering og -indsamling for elektriske og elektroniske produkter og emballage. Følg de lokale regler, og bortskaft ikke dine udtjente produkter og emballage sammen med almindeligt husholdningsaffald. Korrekt bortskaftelse af emballagen, produktet og/eller batterier er med til at forhindre negative konsekvenser for miljøet og menneskers sundhed. Batterier skal bortskaftes separat fra den kommunale affaldsstrøm via særskilte indsamlingsordninger. Ved bortskaftelse af et produkt, der indeholder batterier, der ikke kan udskiftes af brugeren, skal batterierne fjernes af en fagperson.
- FI** Ota selvää paikallisesta sähkö- ja elektroniikkatuotteiden sekä pakkausten hävitys-, erottelu- ja keräysjärjestelmästä. Noudata paikallisia määräyksiä, äläkä hävitä vanhoja tuotteita ja pakkauksia tavallisen kotitalousjätteen mukana. Pakkauksen, tuotteen ja/tai paristojen asianmukainen hävittäminen auttaa ehkäisemään mahdollisia haittoja ympäristölle ja ihmisten terveydelle. Paristot on hävitettävä yhdyskuntajätteestä erillään määrätettyjen keräyspisteiden kautta. Muita kuin käyttäjän vaihdettavissa olevia paristoja sisältäviä tuotteita hävitettäessä muiden kuin käyttäjän vaihdettavissa olevien paristojen poistaminen on jätettävä ammattilaisen tehtäväksi.
- SV** Se till att skaffa dig kunskap om de lokala systemen för bortskaftande, sortering och insamling av avfall gällande elektriska och elektroniska produkter och förpackningar. Agera i enlighet med lokala regler och släng inte bort din gamla produkt och förpackning tillsammans med vanligt hushållsavfall. Korrekt bortskaftande av förpackningen, din produkt och/eller batterier hjälper till att förebygga potentiella negativa konsekvenser för miljön och för människors hälsa. Batterier ska slängas separat från det kommunala avfallsflödet via särskilda insamlingsanläggningar. När du slänger en produkt som innehåller batterier som inte kan bytas ut av användaren ska de batterier som inte kan bytas ut av användaren avlägsnas av en yrkesperson.
- NO** Vennligst informer deg selv om det lokale avfallshåndterings-, separerings- og innsamlingsssystemet for elektriske og elektroniske produkter og emballasje. Opptre i henhold til lokale regler og ikke kast det gamle produktet og emballasjen sammen med vanlig husholdningsavfall. Riktig avhending av emballasjen, produktet og/eller batteriene vil bidra til å forhindre potensielle skadelige følger for miljøet og personers helse. Batterier bør avhendes separat fra kommunalt avfall via anviste innsamlingssteder. Ved kassering av et produkt som inneholder batterier som ikke kan skiftes ut av brukeren, skal batteriene som ikke kan byttes av bruker fjernes av en fagperson.
- EL** Ενημερωθείτε για το τοπικό σύστημα διάθεσης, διαχωρισμού και συλλογής αποβλήτων για ηλεκτρικά και ηλεκτρονικά προϊόντα και συσκευασίες. Ενεργείτε σύμφωνα με τους τοπικούς σας κανόνες και μην απορρίπτετε το παλιό σας προϊόν και τη συσκευασία του μαζί με τα συνήθη οικιακά απορρίμματα. Η σωστή απόρριψη της συσκευασίας, του προϊόντος σας ή/και των μπαταριών θα συμβάλει στην αποφυγή πιθανών αρνητικών συνεπειών για το περιβάλλον και την ανθρώπινη υγεία. Οι μπαταρίες θα πρέπει να απορρίπτονται χωριστά από το ρεύμα των αστικών απορριμμάτων μέσω των καθορισμένων εγκαταστάσεων συλλογής. Κατά την απόρριψη ενός προϊόντος που περιέχει μπαταρίες που δεν αντικαθίστανται από τον χρήστη, αυτές πρέπει να αφαιρούνται από επαγγελματία.
- TR** Lütfen elektrikli ve elektronik ürünler ve ambalajları için yerel atık atma, ayırma ve toplama sistemleri hakkında bilgi edinin. Lütfen bulunduğunuz bölgedeki yerel kurallara uygun hareket edin ve eski ürün ve ambalajınızı normal ev atıklarınızla birlikte atmayın. Ambalajın, ürününüzün ve/veya pillerin doğru şekilde atılması çevre ve insan sağlığı için olası olumsuz sonuçların önlenmesine yardımcı olur. Pillerin özel toplama tesisleri aracılığıyla ayrı bir şekilde atılması gerekir. Kullanıcı tarafından değiştirilemeyen pil bulunan bir ürünü atarken pilin bir profesyonel tarafından çıkarılması gerekir.
- BG** Моля, запознайте се с местната система за изхвърляне, разделяне и събиране на отпадъци от електрически и електронни продукти и опаковки. Моля, действайте в съответствие с местните правила и не изхвърляйте стария продукт и опаковката заедно с обикновените битови отпадъци. Правилното изхвърляне на опаковката, на Вашия продукт и/или батерии ще помогне да се предотвратят потенциални негативни последици за околната среда и човешкото здраве. Батериите трябва да се изхвърлят отделно от потока на битовите отпадъци чрез определените за целта събирателни пунктове. При изхвърляне на продукт, който съдържа батерии, които не могат да се заменят от потребителя, същите трябва да бъдат отстранени от специалист.
- HU** Érdeklődjön az elhasznált elektromos és elektronikus termékek és csomagolásuk helyi szelektív gyűjtéséről és ártalmatlanításáról. Kövesse a helyi szabályozást, és ne helyezze az elhasználadott terméket háztartási hulladék-gyűjtőbe. A csomagolás, valamint az elhasználadott termék és/vagy akkumulátorok megfelelő ártalmatlanítása segít megelőzni a környezet és emberi egészség károsodását. Az akkumulátorokat külön, a helyi önkormányzat által megjelölt helyen kell gyűjteni, és nem szabad a háztartási hulladék közé keverni őket. A nem cserélhető akkumulátorokat tartalmazó termékek ártalmatlanításakor a nem cserélhető akkumulátorokat szakembernek kell eltávolítania.
- SL** Seznanite se z lokalnim sistemom odstranjanja, ločevanja in zbiranja električne in elektronske opreme ter embalaže. Upoštevajte lokalno zakonodajo ter starega izdelka in embalaže ne odložite med običajne gospodinjinske odpadke. S pravilnim odlaganjem embalaže, izdelka in/ali baterij med odpadke boste preprečili morebitne negativne posledice na okolje in zdravje ljudi. Baterij ne smete odložiti med gospodinjinske odpadke, temveč na namenskih zbirnih mestih. Če odlagate izdelke, ki vsebuje baterije, ki jih uporabnik ne more zamenjati sam, bo takšne baterije odstranila strokovna oseba.

- HR** Informirajte se o lokalnom sustavu za odlaganje, odvajanje i prikupljanje električnih i elektroničkih proizvoda i ambalaža. Postupajte u skladu s lokalnim propisima i ne odlažite stare proizvode i ambalaže s uobičajenim kućanskim otpadom. Ispravno odlaganje ambalaže, proizvoda i/ili baterija pomoći će u sprječavanju mogućih negativnih posljedica za okoliš i zdravlje ljudi. Baterije je potrebno odlagati odvojeno od komunalnog otpada na za to predviđenim odlagalištima. Kada odlažete proizvod koji sadrži baterije koje korisnik ne može samostalno zamijeniti, te će baterije ukloniti stručnjak.
- MK** Информирајте се за локалниот систем за фрлање, одделување и собирање отпад од електрични и електронски производи и пакувања. Постапувајте во согласност со вашите локални прописи и немојте да ги фрлате стариот производ и пакувањето во обичниот отпад од домаќинството. Правилното фрлање на пакувањето, производот и/ли батериите ќе помогне да се спречат потенцијалните негативни последици за животната средина и човечкото здравје. Батериите треба да се фрлаат одделно од општинскиот систем за отпад преку назначени собирни објекти. Кога фрлате некој производ што содржи батерии што не може да се заменат, тие ќе се отстрануваат од страна на стручно лице.
- SR** Informišete se o lokalnom sistemu za odlaganje, odvajanje i sakupljanje otpada za električne i elektronske proizvode i ambalažu. Postupajte u skladu sa lokalnim pravilima i ne odlažite svoj stari proizvod i ambalažu sa uobičajenim kućnim otpadom. Pravilno odlaganje ambalaže, proizvoda i/ili baterija će pomoći u sprečavanju potencijalnih negativnih posledica po životnu sredinu i zdravlje ljudi. Baterije treba odlagati odvojeno od toka komunalnog otpada putem određenih objekata za prikupljanje. Kada odlažete proizvod koji sadrži baterije koje ne može zameniti korisnik, te baterije će ukloniti profesionalac.
- CZ** Informujte se o místním systému likvidace a tříděného sběru elektrických a elektronických výrobků a balení. Postupujte v souladu s místními předpisy a nevyhazujte staré výrobky do běžného komunálního odpadu. Správná likvidace produktů a baterií přispívá k ochraně případných nežádoucích vlivů na životní prostředí a zdraví osob. Baterie je třeba zlikvidovat samostatně mimo veřejné skládky prostřednictvím specializovaných sběrných míst. Při likvidaci výrobku obsahujícího baterie, které nejsou uživatelsky vyměnitelné, musí uživatelsky nevyměnitelné baterie vyjmout odborník.
- SK** Zistite si informácie o miestnej likvidácii odpadu, systéme separovaného zberu elektrických a elektronických výrobkov a obalov. Postupujte v súlade s miestnymi predpismi a nevyhadzujte staré výrobky do bežného komunálneho odpadu. Správna likvidácia produktov a batérií prispieva k zabráneniu prípadným nežiaducim vplyvom na životné prostredie a zdravie osôb. Batérie treba zlikvidovať samostatne mimo verejnej skládky prostredníctvom špecializovaných zberných miest. Pri likvidácii výrobku obsahujúceho batérie, ktoré nemôže vyberať používateľ, musí výber nevymeniteľných batérií vykonať odborný technik.
- PL** Należy we własnym zakresie sprawdzić informacje o lokalnych placówkach odbierających zużyte produkty elektryczne i elektroniczne oraz opakowania po nich. Należy bezwzględnie przestrzegać lokalnych przepisów zakazujących wyrzucania urządzeń i opakowań razem z odpadami komunalnymi. Właściwe usunięcie zużytego opakowania, produktu i/lub baterii pomoże uniknąć potencjalnych szkodliwych skutków dla środowiska naturalnego i zdrowia ludzi. Baterie nie wolno wyrzucać wraz z odpadami komunalnymi. Należy je zanościć do wyznaczonych punktów zbiórki. W przypadku utylizacji produktu zawierającego baterie niepodlegające wymianie przez użytkownika, powinny one zostać usunięte przez specjalistę.
- RO** Informați-vă cu privire la sistemul local de colectare, separare și eliminare a deșeurilor pentru produsele electrice și electronice și ambalajele acestora. Acționați în conformitate cu regulile locale și nu eliminați produsele vechi și ambalajele împreună cu deșeurile menajere obișnuite. Eliminarea corespunzătoare a ambalajelor, a produsului și/sau a bateriilor va ajuta la prevenirea consecințelor potențiale negative pentru mediu și sănătatea umană. Bateriile trebuie eliminate separat de sistemul municipal de gestionare a deșeurilor prin intermediul unităților de colectare desemnate. Atunci când eliminați un produs care conține baterii ce nu pot fi înlocuite de utilizator, aceste baterii trebuie îndepărtate de către un specialist.
- SQ** Informohuni për sistemin lokal të hedhjes së mbeturinave, ndarjes dhe grumbullimit për produktet elektrike dhe elektronike dhe paketimin. Veproni në përputhje me rregullat lokale dhe mos e hidhni produktin e vjetër dhe paketimin me mbeturinat e zakonshme të shëpisë. Hedhja e duhur e paketimit, produktit dhe/ose baterive do të ndihmojë në parandalimin e pasojave të mundshme negative për mjedisin dhe shëndetin njerëzor. Bateritë duhet të hidhen veçmas nga rryma e mbeturinave urbane nëpërmjet pikave të autorizuar të grumbullimit. Kur hidhni një produkt që përmban bateri që nuk ndërrohen nga përdoruesi, këto bateri duhet të hiqen nga një profesionist.
- LV** Lūdz, iepazīstieties ar informāciju par vietējo atkritumu likvidēšanu, nošķiršanu un savākšanu sistēmu elektriskām un elektroniskām precēm un iepakojumiem. Rīkojieties atbilstoši vietējiem noteikumiem un nelikvidējiet nolietotos izstrādājumus un iepakojumus kopā ar parastajiem sadzīves atkritumiem. Izstrādājuma un/vai bateriju pareiza likvidēšana palīdzēs novērst iespējamu nelabvēlīgu ietekmi uz vidi un cilvēku veselību. Baterijas jālikvidē atsevišķi no pašvaldību atkritumu plūsmas ar šim nolūkam īpaši paredzētu savākšanas uzņēmumu starpniecību. Likvidējot produktu, kas satur baterijas, kuras lietotājs nevar nomainīt, profesionālim ir jāizņem šīs baterijas.
- LT** Susipažinkite su vietine elektros ir elektroninių gaminių bei pakuočių atliekų šalinimo, rūšiavimo ir surinkimo sistema. Laikykites vietinių taisyklių ir neišmeskite seno gaminio bei pakuotės kartu su įprastomis buitinėmis atliekomis. Tinkamas pakuotės, gaminio ir (arba) baterijų išmetimas padės išvengti galimų neigiamų pasekmių aplinkai ir žmonių sveikatai. Baterijos turi būti išmestos atskirai nuo komunalinių atliekų srauto tam skirtais surinkimo įrenginiais. Išmetant gaminį, kuriame yra naudotojo nekeičiamų baterijų, naudotojų nekeičiamas baterijas turi išimti profesionalas.
- ET** Viige ennast kurssi kohaliku elektri- ja elektroonikatoode te ning pakendite kasutusest kõrvaldamise, sorteerimise ja kogumise süsteemiga. Järgige kohalikke eeskirju järgi ning ärge visake vana toodet ega pakendeid olmejäätmete hulka. Pakendi ja vana toote ja/või akude nõuetekohane kasutusest kõrvaldamine aitab vältida võimalikke negatiivset mõju keskkonnale ja inimeste tervisele. Akud tuleb kasutusest kõrvaldada olmejäätmetest eraldi ning viia selleks ette nähtud kogumiskohta. Kui kõrvaldate kasutusest toote, mis sisaldab akusid, mida kasutaja ei saa vahetada, peab need akud tootest eemaldama kvalifitseeritud spetsialist.
- RU** С информацией о местных системах раздельного сбора и утилизации таких отходов, как электрическое и электронное оборудование, а также упаковка, рекомендуется ознакомиться самостоятельно. Соблюдайте региональные нормативные требования и не выбрасывайте отслужившее изделие вместе с обычным бытовым мусором. Правильная утилизация отслужившего изделия и/или батарей поможет уменьшить негативные последствия для окружающей среды и здоровья людей. Батареи следует утилизировать отдельно от бытовых отходов через специальные пункты сбора. Если изделие оснащено батареями, не предназначенными для самостоятельной замены, их должен извлечь специалист.
- UA** Рекомендуємо самостійно ознайомитися з інформацією про місцеві системи сортування й утилізації відходів електричного та електронного обладнання і їхнього пакування. Дійте відповідно до місцевих правил і не викидайте старий виріб і його упаковку разом зі звичайними побутовими відходами. Правильна утилізація упаковки, виробу та/або акумуляторів допоможе запобігти потенційним негативним наслідкам для довкілля та здоров'я людей. Акумулятори слід утилізувати окремо від потоку комунальних відходів через спеціальні місця для збору. Під час утилізації виробу, що містить акумулятор, який не може замінювати користувач, такий акумулятор має вилучати професіонал. УВАГА: Нижче ви знайдете все пояснення з числовими посиланнями на значки, відповідно, перед цими інструкціями з безпеки:

---

# Compliance and approval

Driver compliances and approvals can be found in the published driver Declarations of Conformity (DoC) and ENEC/CB certificates as published on [www.philips.com/oem](http://www.philips.com/oem). For further questions please contact your local Signify sales representative.

---

# Disclaimer

Note that the information provided in this document is subject to change at any time without prior notice.

This document is not an official testing certificate and cannot be used or construed as a document authorizing or otherwise supporting an official release of a luminaire. The user of this document remains at all times liable and responsible for any and all required testing and approbation prior to the manufacture and sale of any luminaire. The recommendations and other advice contained in this document, are provided solely for informational purposes for internal evaluation by the user of this document. Signify does not make and hereby expressly disclaims any warranties or assurances whatsoever as to the accuracy, completeness, reliability, content and/or quality of any recommendations and other advice contained in this document, whether express or implied including, without limitation, any warranties of satisfactory quality, fitness for a particular purpose or non-infringement. Signify has not investigated, and is under no obligation or duty to investigate, whether the recommendations and other advice contained in this document are, or may be, in conflict with existing patents or any other intellectual property rights. The recommendations and other advice contained herein are provided by Signify on an “as is” basis, at the user’s sole risk and expense. Specifically mentioned products, materials and/or tools from third parties are only indicative and reference to these products, materials and/or tools does not necessarily mean they are endorsed by Signify. Signify gives no warranties regarding these and assumes no legal liability or responsibility for any loss or damage resulting from the use of the information thereto given here.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. All other trademarks are owned by Signify Holding or their respective owners.



©2023 Signify Holding B.V. All rights reserved.  
Note that the information provided in this document is subject to change.

Date of release: October 10, 2023  
[www.philips.com/oem](http://www.philips.com/oem)