
PHILIPS


Installation Instruction

LED HIGHBAY

Industrial Luminaire

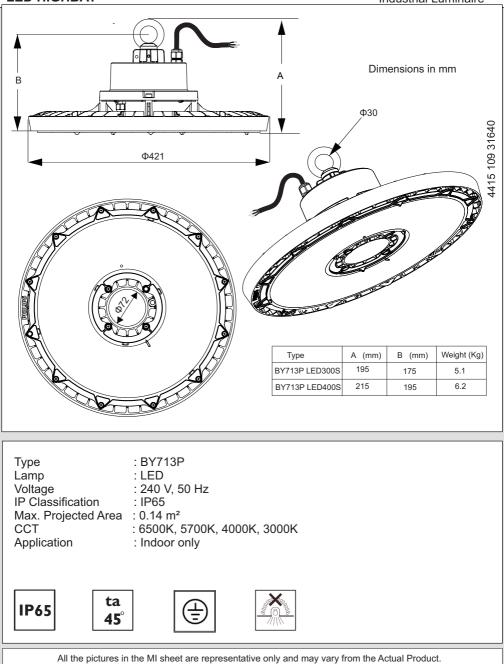

PHILIPS

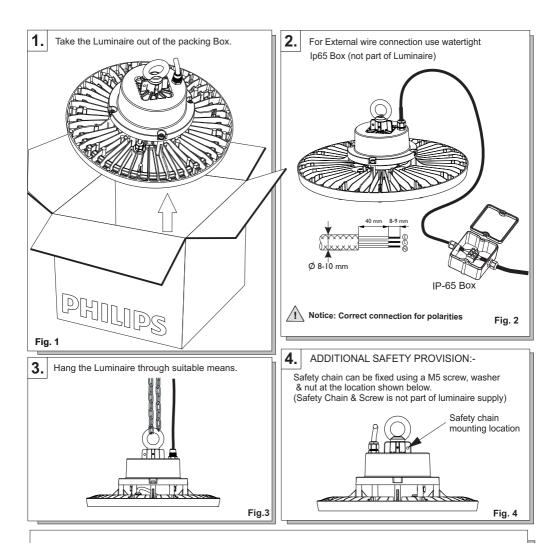

CAUTION

- 1. Ensure L-N-E is connected in right manner.
- 2. 3 Core cable should be properly connected with ground.
- 3. Product should be operated between 120-270V A.C.
- 4. Luminaire must be brought down from the mounting position for maintenance.
- 5. In case the Lensplate is found broken/damaged luminaire should not be powered on and it has to be replaced before using the luminaire.
- 6. The light source of this luminaire is not replaceable, when the light source reaches its end of life the whole luminaire shall be replaced.
- 7. The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the Driver shall be replaced.

FAILURE OF PRODUCT DUE TO NON COMPLIANCE TO ANY OF THE ABOVE, VOIDS WARRANTY OF PRODUCT.

All the pictures in the MI sheet are representative only and may vary from the Actual Product.

PHILIPS