

GreenVision Xceed Gen2

Mounting instruction

444170264731



IEC
60598



RoHS



IP66
IK08





GB
7000

Technical Description	LEDs	Power/W (max.)	Weight/kg	Wind force area (m ²)
BRP381 54LED448	54	140	≈ 5.3	0.14
BRP382 72LED420	72	173	≈ 6	0.16
BRP382L 108LED290	108	174	≈ 6.4	0.19
BRP383 144LED220	144	174	≈ 10	0.23
BRP384 180LED178	180	174	≈ 15.5	0.33



Product Size

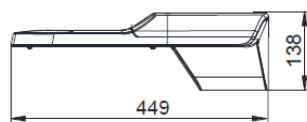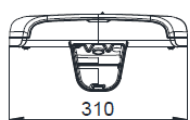



BRP381 ≈ 5.3KG

  



BRP382 ≈ 6KG

  

BRP382L ≈ 6.4KG

  

BRP383 ≈ 10KG

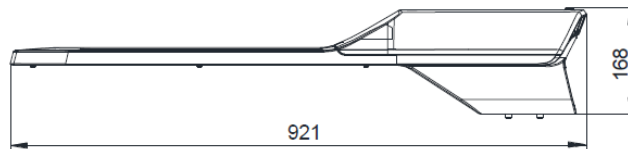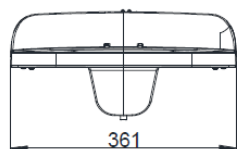

BRP384 ≈ 15.5KG

Unit: mm




Caution

1. Switch off power before operation.
操作前请务必关闭电源。
2. It's not appropriate to install luminaires on interface with normal combustibile material.
灯具不适宜直接安装在普通可燃材料表面。
3. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements .
灯具应由有资格的电工安装，接线要符合IEE 电气标准或国家标准。
4. The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.
灯具内光源不可以更换，当光源达到寿命时需要进行整个灯具的更换。
5. Controlgear shall be SELV (Uout:60Vdc).
控制装置应为SELV (Uout:60Vdc)。



Data subject to change without notice

PHILIPS

Philips and the Philips shield emblem are registered trademarks of Koninklijke Philips N.V.

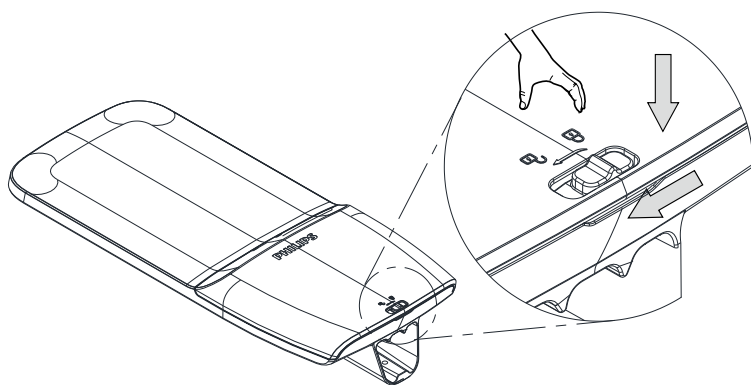

1. 用手向下按压盖子。
Press the cover by hand
2. 按箭头方向拨动按钮，然后打开腔盖。
Push the button to open the cover.

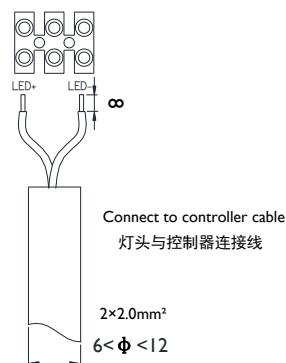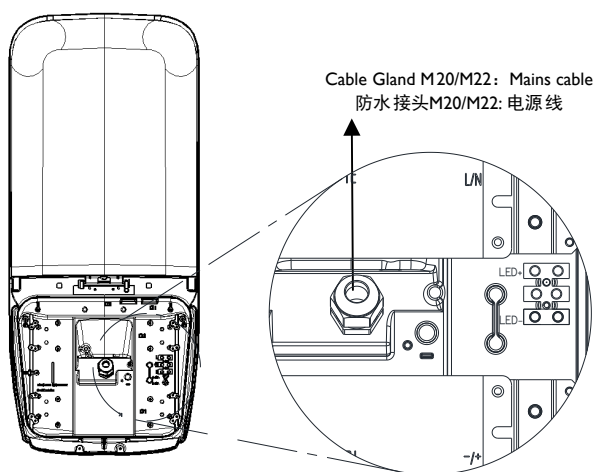

Notice: Correct connection for polarities
注意: 正确的极性连接

1. 将电源线防水接头旋开螺帽, 去掉前端密封堵头, 保留橡胶衬套。插入线缆, 确保橡胶衬套不掉落, 然后旋紧螺帽。
Loosen the cap of cable gland, then remove the front plug, should keep the rubber lining in. Insert the cable in and ensure the inner sealing tube not fall off, then fasten the cap.
2. 将3路接头与外部电缆连接
Connect power cable.

 
 

 
扭矩: 3.5Nm
Torque : 3.5Nm



3

Pole mounting

将灯具安装到灯杆上
Install the luminaire on the pole.

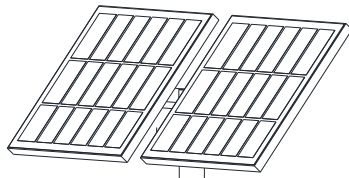

381~383 25N.m
384 36N.m

灯杆的角度: 0-15度
灯具安装杆径: 42-60mm The
angle of pole: 0-15 degree Pole
diameter: 42-60mm

Installation:
灯杆安装

Type 1




Type 2



Mark: There is only one installation method for each luminaire.
注意: 每个灯具只有一种灯杆安装方式

4

Solar Combo CC 太阳能充放电控制器一体机

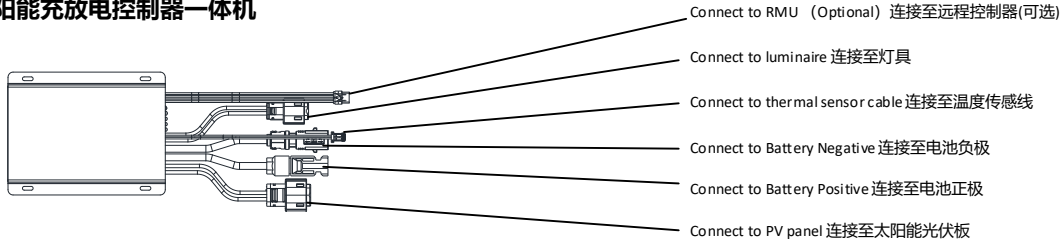

5

System connection 系统连接



1. Connect the luminaire to the combo CC Firstly.
先将灯具连接至控制器
2. Connect the Battery to the Combo CC, Please note the positive and negative.
再将电池连接至控制器, 请注意正负极, 严禁接反。
3. Connect the PV panel to the Combo CC, Please note the positive and negative.
将太阳能光伏板连接至控制器, 请注意正负极, 严禁接反。
4. Adhesive the thermal sensor end to the battery surface
将控制器附带的温度传感线粘贴在电池表面
5. Connect the RMU to the Combo CC. (Optional)
将远程监控系统连到控制器。(可选)

