

LYTESPAN CONVENIENCE OUTLET IS RATED AT 15 AMPS, 125 VOLTS. DO NOT EXCEED RATING.

INSTRUCTIONS FOR ATTACHING CONVENIENCE OUTLET FITTING TO BASIC TRACK (Single Circuit)

1. Align BEAD on LYTESPAN TRACK and GROOVE in FITTING before inserting into LYTESPAN TRACK. See Fig. 1.
2. Unscrew the TURN KNOB partially and position LEVER. See Fig 1.
3. To attach FITTING, squeeze BUTTON and KNOB, insert into LYTESPAN TRACK and release. Tighten TURN KNOB. This holds FITTING to LYTESPAN TRACK mechanically. Turn LEVER to make electrical connection. See Fig. 2.
4. To shift FITTING location on the LYTESPAN TRACK, loosen TURN KNOB slightly, release LEVER and slide to new position.
5. To remove FITTING reverse the procedure in (3), push TURN KNOB in and allow FITTING to disengage.
6. FITTING can be left on LYTESPAN TRACK when not in use by turning LEVER to disconnect electrically.

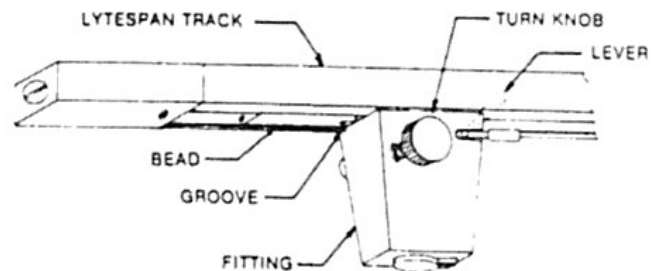
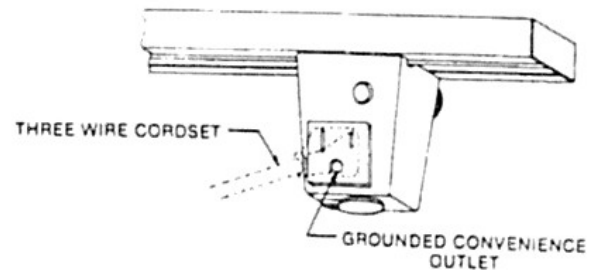


FIG 1

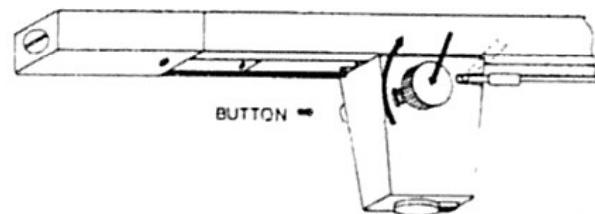


FIG 2

INSTRUCTIONS FOR CONVERTING CONVENIENCE OUTLET FITTING TO OPERATE ON ADVENT TRACK (2 Circuit)

NOTE: To insure proper operation of FITTING on Two Circuit Lytespan Track, the BLACK SPACER (supplied) must be used at all times on the plug assembly.

The BLACK SPACER is not used when operating FITTING on Single Circuit Track.

LOWER CIRCUIT, FIG. 3:

Illustrates contacts in low position with spacer in place for lower circuit.

UPPER CIRCUIT, FIG. 4 and 5:

To convert FITTING for upper circuit, raise BRASS CONTACT to high position (as indicated by dotted line) by pulling CONTACT as high as stop permits and slipping on BLACK SPACER as shown in Fig. 4 and 5.

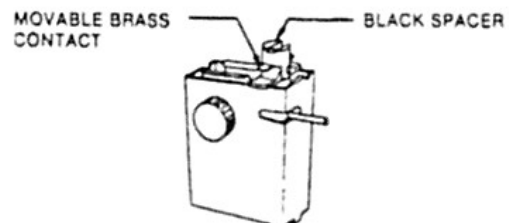


FIG. 3

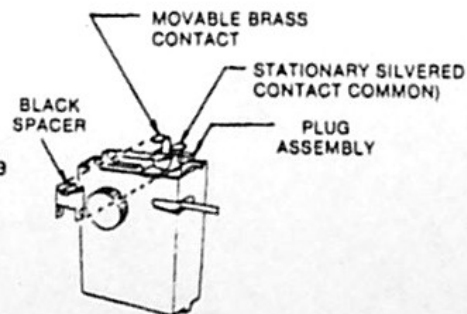


FIG. 4

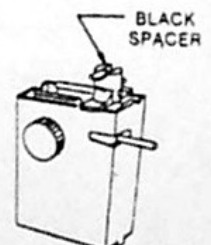


FIG. 5