

PHILIPS

LLC7813/00



LLC7813/00




Installation Instructions

Instructions d'installation
Instrucciones de instalación


Istruzioni per l'installazione
Installatie-instructies

Installationsanweisungen
インストール手順


安装指示书
إرشادات التركيب

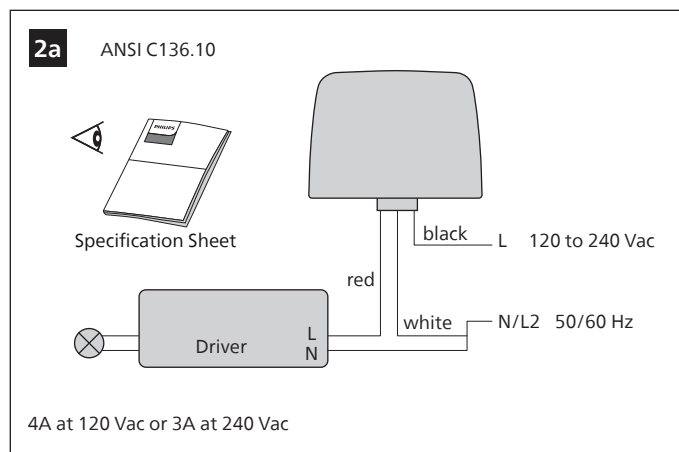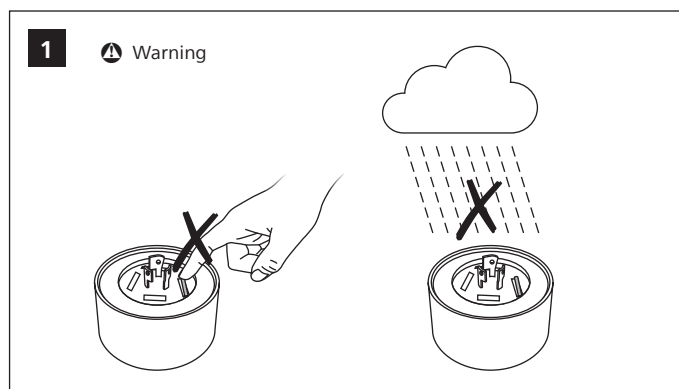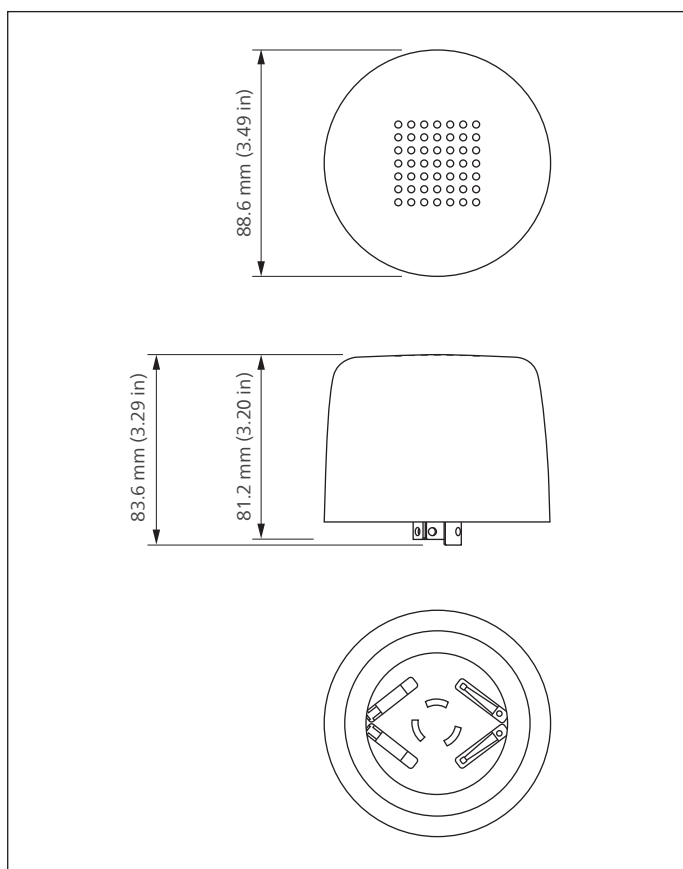



2b ANSI C136.41

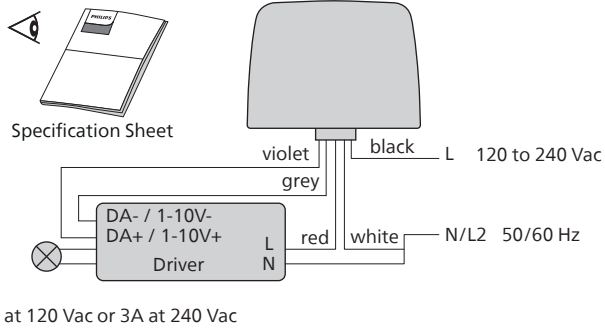


3

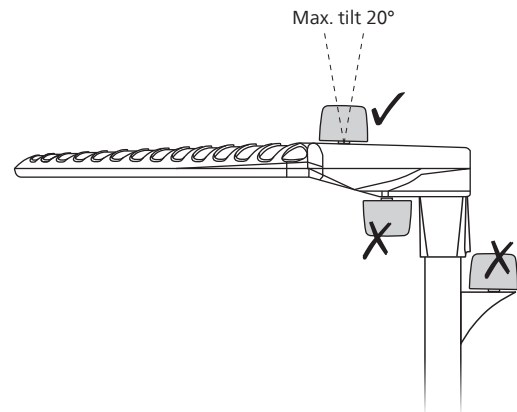

4

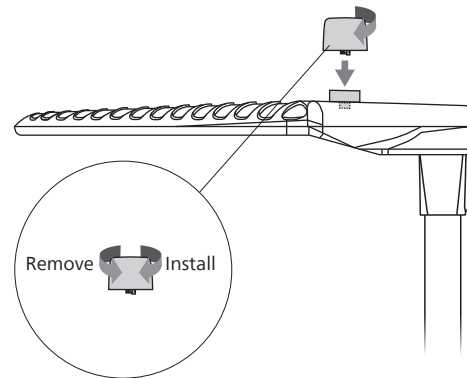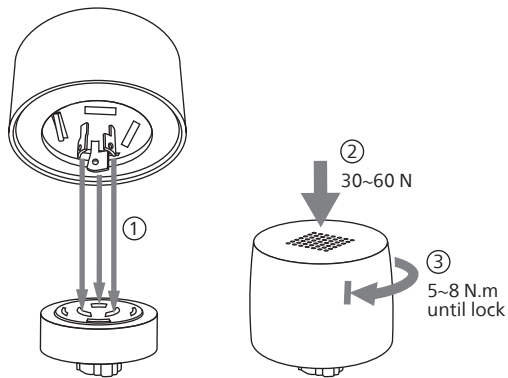

5

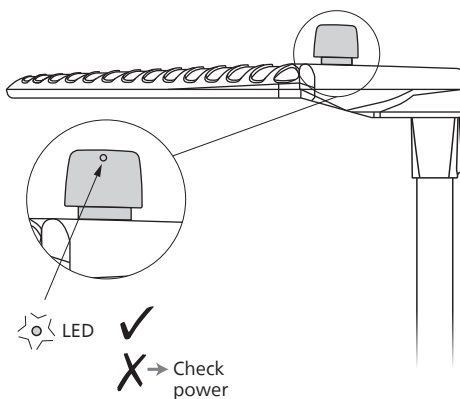

Note

There shall be an external fuse or MCB in the Line connection with a current rating of 16A or less.



Note

LLC7813/00 can only be used in overvoltage category II environment classified as IT equipment.

