



CT NODE NEMA

LLC7821/xx, LLC7822/xx,
LLC7824/xx, LLC7826/xx,
LLC7827/xx



LLC7821/xx, LLC7826/xx



LLC7822/xx, LLC7824/xx, LLC7827/xx





Installation instructions




Instructions d'installation
Instrucciones de instalación

Istruzioni per l'installazione
Installatie-instructies

Installationsanweisungen
インストール手順

安装指示书
إرشادات التركيب

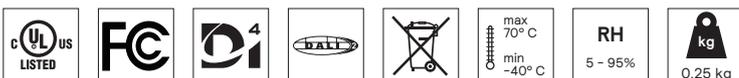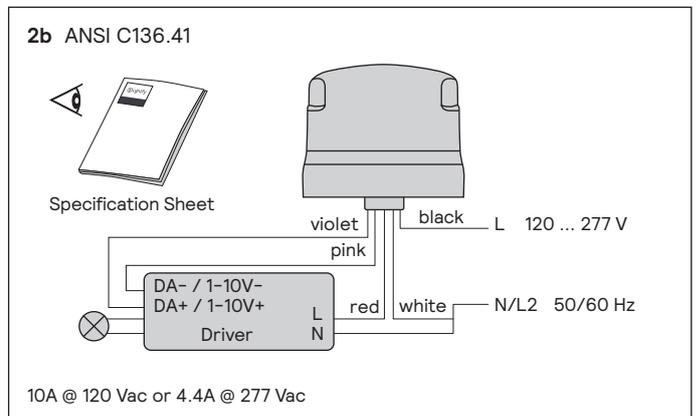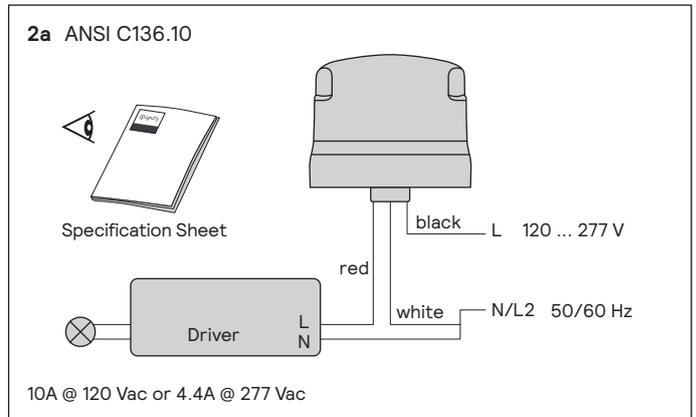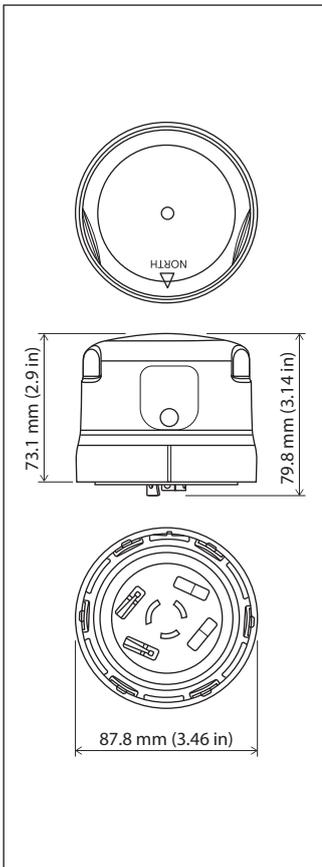

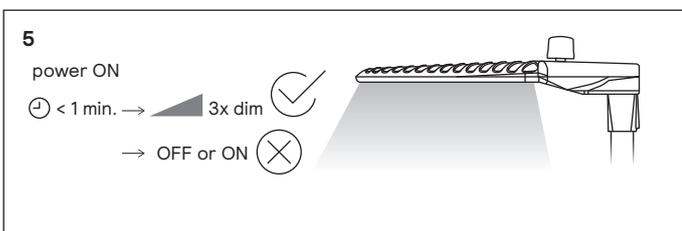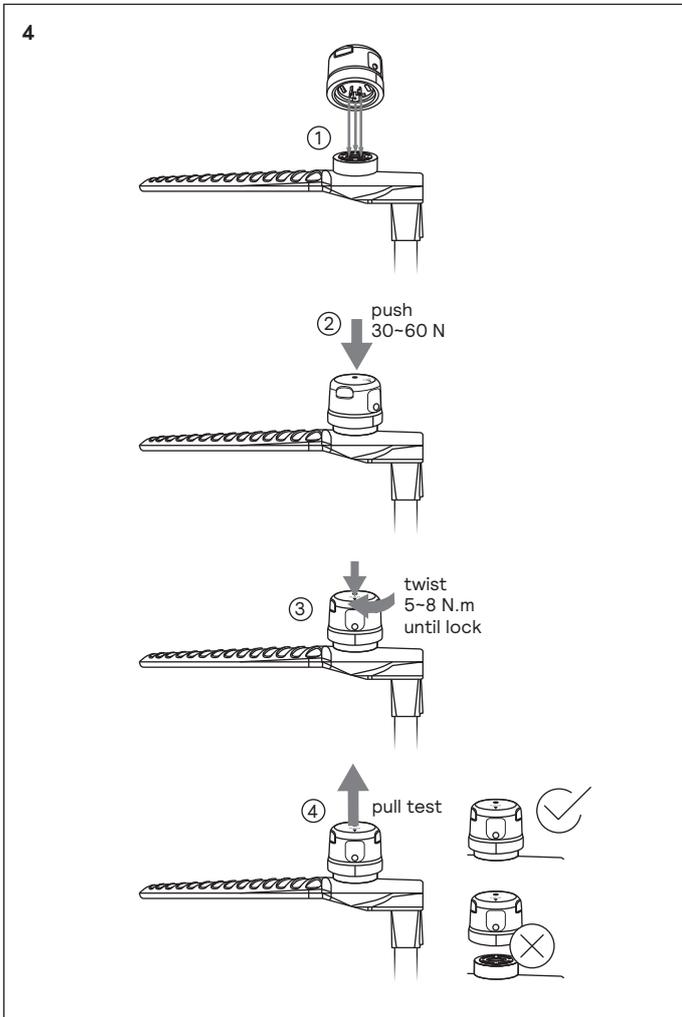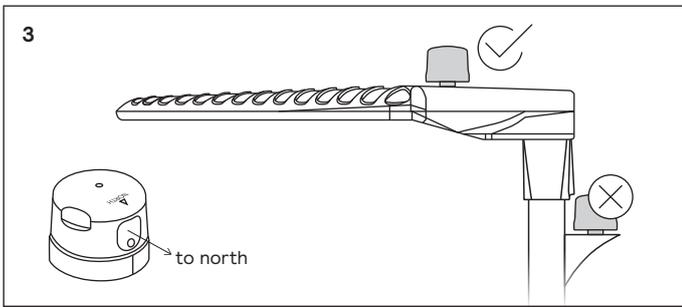

(EN) FCC/IC compliance statement
 This device complies with part 15 of the FCC rules for the United States and Industry Canada (IC) license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Signify could void the user's authority to operate this equipment. This product is intended for commercial use only.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment must be installed and operated with a minimum distance 200 mm between the radiator and your body.

IC Radiation Exposure Statement

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment must be installed and operated with a minimum distance 20 cm between the radiator and your body.

FCC statement: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

(FR) DÉCLARATION DE CONFORMITÉ À LA FCC/IC

Ce dispositif est conforme à la partie 15 des règles de la Federal Communications Commission (FCC) des États-Unis et d'Industrie Canada (IC) exempts de licence RSS norme(s). Son fonctionnement est assujéti aux deux conditions suivantes: (1) Ce dispositif ne doit pas provoquer de brouillage préjudiciable, et (2) il doit accepter tout brouillage reçu, y compris le brouillage pouvant entraîner un mauvais fonctionnement. Tous les changements ou modifications non expressément approuvés par Signify, sont susceptibles d'annuler le droit de l'utilisateur à se servir de cet équipement. Ce produit est exclusivement destiné à un usage commercial.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

(E) Notes

- Do not use any chemical cleaning agents on the LLC7821/xx, LLC7822/xx, LLC7824/xx, LLC7826/xx, LLC7827/xx.
- Avoid touching live parts.
- Do not use drivers with damaged housing and/or connectors.
- Do not use drivers with damaged wiring.
- Class 1 luminaires must be connected to protective earth.
- Switchable function to make the open load on the driver output is abnormal condition, and it is not an intended application that will be allowed.
- FELV terminals marked "Risk of electric shock" are not safe to touch.
- Circuits connected to any FELV control terminal shall be insulated for the LV supply voltage of the controlgear and any terminals connected to the FELV circuit shall be protected against accidental contact.
- There shall be an external fuse or MCB in the Line connection with a current rating of 16A or less.
- Recommend using the Luminaire with surge protection. Refer to design-in guides.
- Load type: Electronic Fluorescent Ballast / Standard Ballast.

Safety warnings and installation instructions to be taken into account during design-in and manufacturing:

- Do not use damaged or defective contacts or housings.
- Do not use damaged products.
- Do not service the driver when the mains voltage is connected and this includes connecting or disconnecting the LED load.



© 2025–2026 Signify Holding. All rights reserved. The information provided herein is subject to change, without notice. Signify does not give any representation or warranty as to the accuracy or completeness of the information included herein and shall not be liable for any action in reliance thereon. The information presented in this document is not intended as any commercial offer and does not form part of any quotation or contract, unless otherwise agreed by Signify. All trademarks are owned by Signify Holding or their respective owners.

