

GreenSpace surface mounted high lumen/LED明装筒灯

Mounting instruction/ 安装说明

44410008021

IEC 60598	CE	IP65			$t_a 35^{\circ}\text{C}$						
Type Number 产品型号	LEDs 颗粒数	Lum.Power 功率	Lamp Power 功率	Voltage 电压	Frequency 频率	Class 灯具类别	 kg	Ipeak (A)	Duration (μs)	MCB Type B 16A	 Ipeak Twidht
DN397C LED12 PSU	105	102W	93W	220-240 V	50/60 Hz	I	4.7	46	440	11	
DN397C LED12 PSD	105	102W	93W	220-240 V	50/60 Hz	I	6.2	53	300	8	

Dimension 灯具尺寸	D (mm)	H (mm)
DN397C PSU	$\Phi 220$	236
DN397C PSD	$\Phi 220$	361

1 在天花板上按图示尺寸，先开一个40mm的出线孔，再安装4个M6膨胀锚栓（锚栓另购，承重 > 50Kg）。
On the ceiling, make one hole for the Input wire (Min $\Phi 40\text{mm}$). Then install four M6 expansion anchors (not included, weight capacity > 50Kg).

2 用螺钉将安装盘固定在天花板上（螺钉另购）
Fix the **Installation plate** on the ceiling with four M6 Screws (not included)
把灯具挂在安全绳上
Hang the luminaire with the **safety chain**

3 Connect entry cable 连接电源线
Please connect the cable to the terminal box (IP65 or above), then place the terminal box into the ceiling.(not included)
请使用IP65以上的接线盒,接线完成后将接线盒放置到天花内,飞利浦不提供接线盒。

PSU_Version

PSD_Version

Insulation between control conducts and live part is basic insulation at least

WARNING: FELV terminals marked "Risk of electric shock" are not safe to touch.
WARNING: Circuits connected to any FELV control terminal shall be insulated for the LV supply voltage of the controlgear and any terminals connected to the FELV circuit shall be protected against accidental contact.

The cable of the luminaire should use "Y" type connection, if the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

4

Make the luminaire into **Installation plate**, and rotate anti-clockwise.
将灯具装到安装盘上，并逆时针旋转。

5

≡ Click ≡

To make sure the Luminaire can rotated in right place
请确保灯具旋转到位

