Installation Instructions

PURE LINE SLIM RECESSED

240V~

50/60 Hz















TYPE	Α	В	Voltage	Frequency
RC780B LEDxxS L7W60	75	89	220-240V~	50/60Hz
RC780X LEDxxS L7W60				
RC780B LEDxxS L7W120	75	89	220-240V~	50/60Hz
RC780X LEDxxS L7W120				
RC780B LEDxxS L7W240	75	89	220-240V~	50/60Hz
RC780X LEDxxS L7W240				
RC780B LEDxxS L6W60	60	74	220-240V~	50/60Hz
RC780X LEDxxS L6W60				
RC780B LEDxxS L6W120	60	74	220-240V~	50/60Hz
RC780X LEDxxS L6W120				
RC780B LEDxxS L6W240	60	74	220-240V~	50/60Hz
RC780X LEDxxS L6W240				

Note: The type name is only for the reference purpose, actual type name may vary depending on requirements. Product Dimensions 4 Feet

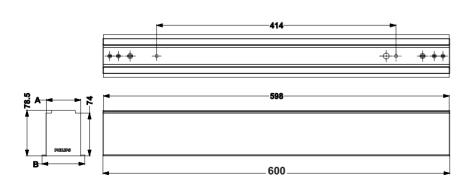


Product Dimensions 2 Feet

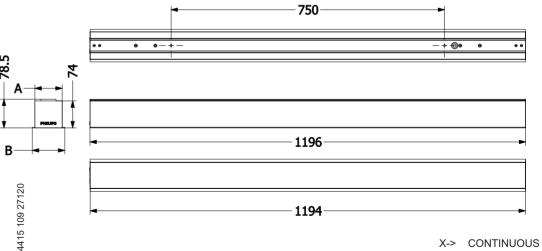



B -> STANDALONE


All dimensions in mm

ATTENTION: Install by a qualified electrician and wired in accordance with latest IEE electrical regulations or the national requirements.

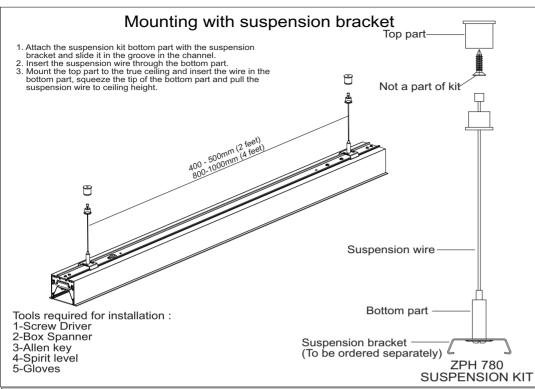

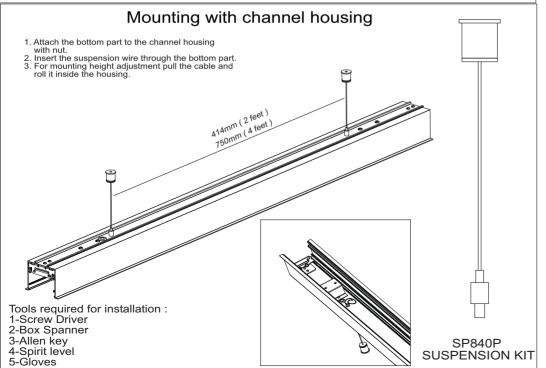

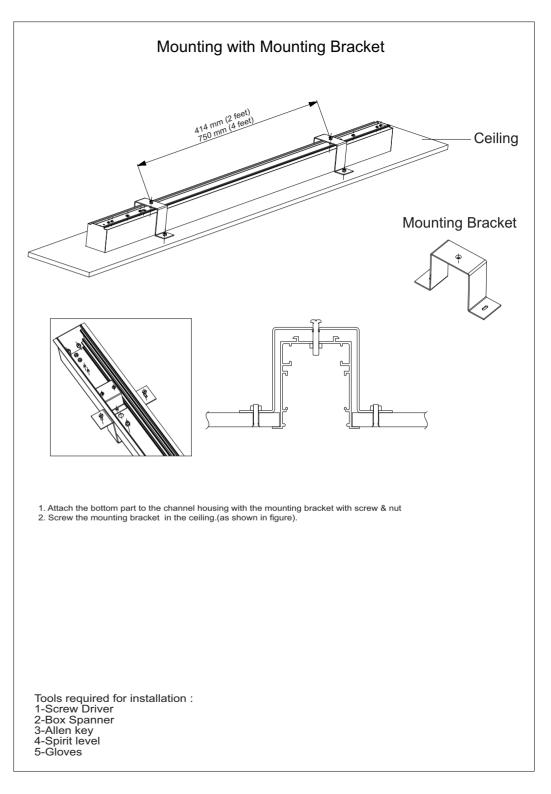

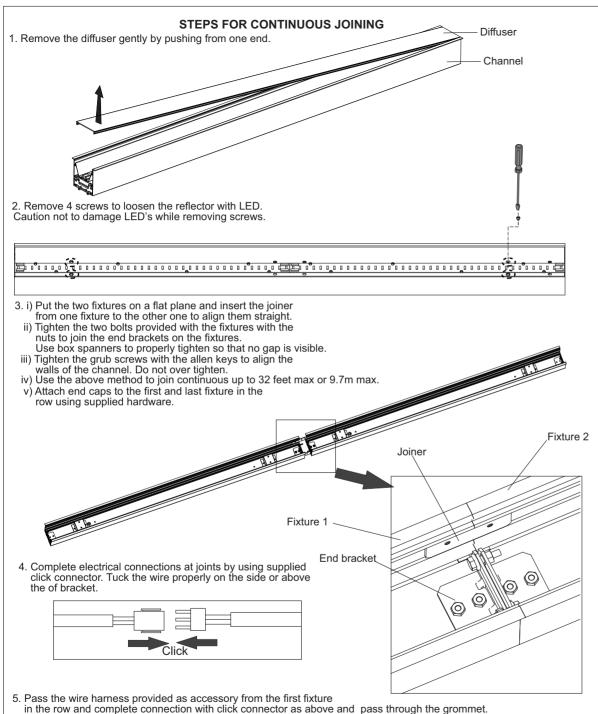

- 6. Reconnect all the reflectors with 4 screws each and fix all the diffuser gently back to the fixture.
- 7.Raise the complete row of fixtures to ceiling with adequate support and at each end of the module.

Caution

 "The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced";



- 2 Do not stare at the operating light source.
- 3. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

Warning

- I. The luminaire shall be installed by a qualified electrican and wired in accordance with the latest IEEE electrical regulations or the national requirements
- 2. Turn power off before inspection, installation or removal.
- 3. Refer to technical datasheet for additional electrical properties to ensure safe installation.
- 4. Luminaire installed must not be in contact with combustible materials.
- 5. Ensure power supply cables (L-N-E) are connected correctly before switching on.
- 6. Terminal block not included, installation must be performed by a qualified person

Maintenance

I.Ensure power supply is switched off before attempting any maintenance work.

Caution

The Luminaire must be used within the applicable product specifications, installation instructions and environmental conditions for storage & operations according to application guidelines provided by Signify for product Warranty to be valid.