
### SUSPENSION BKT DIFFUSER UPPER (UP & DOWN) DIFFUSER LOWER

# With End Caps on both sides

**CHANNEL** 

STANDALONE	No. of Suspensions	Α	В	С
2' Version	2	450	-	566
4' Version	2	1000	-	1126
8' Version	3	1000	1122	2248

B ± 2

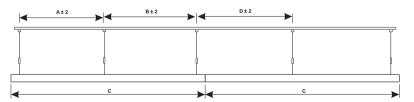

CONTINUOUS	No. of Suspensions	А	В	С	D
2' Version	2	450	-	566	562
4' Version	2	1000	-	1126	1122
8' Version	3	1000	1122	2248	1122

All dimensions in mm

4415 109 27110

**END CAP** (STANDALONE)

#### **Installation Instructions**

#### PURE LINE SLIM SUSPENDED

220 240V~

50/60 Hz



**IP20** 











22	Ť


TYPE	Α	В	С	D	Е	Voltage	Frequency
SP780P LEDxxS W7L56	566			NA			
SP781P LEDxxS W7L56	300		5 75	98	IVA	220-240V~	50/60Hz
SP780X LEDxxS W7L56	NIA	NA 95			562		
SP781X LEDxxS W7L56	IVA						
SP780P LEDxxS W7L112	1126	95	75	98	NA	-220-240V~	50/60Hz
SP781P LEDxxS W7L112	1120						
SP780X LEDxxS W7L112	NA				1122		
SP781X LEDxxS W7L112	IVA				1122		
SP780P LEDxxS W7L224	2248						
SP781P LEDxxS W7L224	2240		75	98	IWA	-220-240V~	50/60Hz
SP780X LEDxxS W7L224	NA				2244		
SP781X LEDxxS W7L224	IVA				2244		
SP780P LEDxxS W6L56	566	566 95	60	98	NA	220-240V~	50/60Hz
SP781P LEDxxS W6L56	300				IVA		
SP780X LEDxxS W6L56	NA				562		
SP781X LEDxxS W6L56	IVA				302		
SP780P LEDxxS W6L112	1126	95 60		60 98	NA	-220-240V~	50/60Hz
SP781P LEDxxS W6L112	1120		60				
SP780X LEDxxS W6L112	NA		5 60		1122		
SP781X LEDxxS W6L112	IVA						
SP780P LEDxxS W6L224	2248		60	00	NA	220, 240\/~	50/60H <del>-</del>
SP781P LEDxxS W6L224	2240						
SP780X LEDxxS W6L224	NIA	95	60	98	2244	220-240V~	50/60Hz
SP781X LEDxxS W6L224	NA				2244		

Note: The type name is only for the reference purpose, actual type name may vary depending on requirements.

#### **Product Dimensions**

P-> STANDALONE X-> CONTINUOUS 780-> DOWN ONLY 781-> UP AND DOWN

ATTENTION: Install by a qualified electrician and wired in accordance with latest IEE electrical regulations or the national requirements.

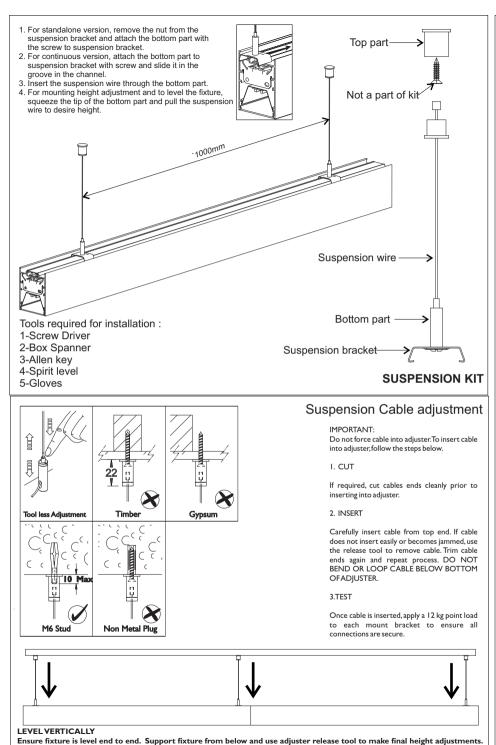

Check level by spirit level.

Caution: Use PHILIPS authorized suspension kit only.

STEPS FOR CONTINUOUS JOINING Diffuser 1. Remove the diffuser gently by pushing from one end. Channel 2. Remove 4 screws to loosen the reflector with LED. Caution not to damage LED's while removing screws. 3. i) Put the two fixtures on a flat plane and insert the joiner from one fixture to the other one to align them straight. ii) Tighten the two bolts provided with the fixtures with the nuts to join the end brackets on the fixtures. Use box spanners to properly tighten so that no gap is visible. iii) Tighten the grub screws with the allen keys to align the walls of the channel. Do not over tighten. iv) Use the above method to join continuous up to 32 feet max or 9.7m max. v) Peel off the liner of the Gasket and paste the same in the location as shown in picture at every joint to prevent light leakage if any. vi) Attach end caps to the first and last fixture in the Fixture 2 row using supplied hardware. Gasket Joiner Fixture 1 End bracket 4. Complete electrical connections at joints by using supplied click connector. Tuck the wire properly on the side or above the of bracket. 5. Pass the wire harness provided as accessory from the first fixture in the row and complete connection with click connector as above and pass through the grommet. 6. Reconnect all the reflectors with 4 screws each and fix all the diffuser gently back to the fixture.

7.Raise the complete row of fixtures to ceiling with adequate support and at each end of the module, insert suspension cables into fixture and ensure fixtures are vertically and horizontally as per the installation instructions for suspension cable supplied.

#### Caution

1. "The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced";



- 2 Do not stare at the operating light source.
- 3. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

#### **Warning**

- I. The luminaire shall be installed by a qualified electrican and wired in accordance with the latest IEEE electrical regulations or the national requirements
- 2. Turn power off before inspection, installation or removal.
- 3. Refer to technical datasheet for additional electrical properties to ensure safe installation.
- 4. Luminaire installed must not be in contact with combustible materials.
- 5. Ensure power supply cables (L-N-E) are connected correctly before switching on.
- 6. Terminal block not included, installation must be performed by a qualified person

#### Maintenance

I.Ensure power supply is switched off before attempting any maintenance work.

#### **Caution**

The Luminaire must be used within the applicable product specifications, installation instructions and environmental conditions for storage & operations according to application guidelines provided by Signify for product Warranty to be valid.

## PHILIPS