 


# Urban Linea


BY500B LED88S

## Mounting Instruction

441510929250



Type	Dimensions L x W x H (mm)	Ceiling Cut Out (mm)	IP	Kg
BY500B LED88S S2	2437 x 75 x 126	2425 x 65	IP66	4.5

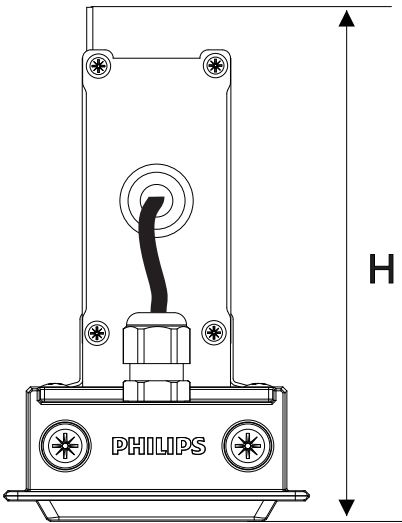


S2

Note : Actual product may differ from pictorial view.

## Mounting Details

a) Cut Out the ceiling as per specified dimensions

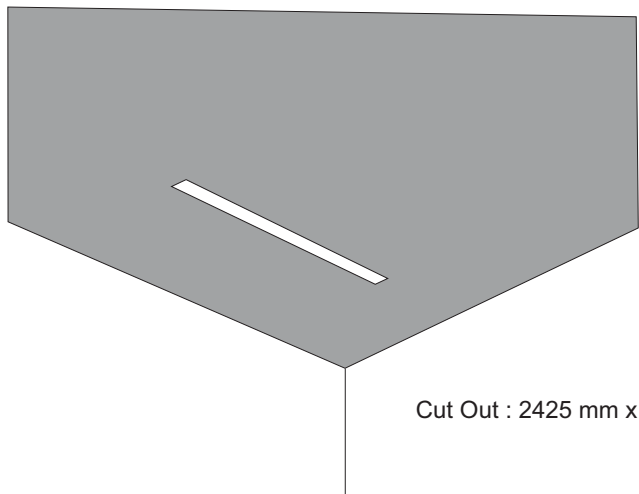


Cut Out : 2425 mm x 65 mm



Signify Innovations India Limited  
(formerly known as Philips Lighting India Limited)  
c/o PS ARCADIA CENTRAL; 3A, 3rd floor, 4A, Abanindranath Thakur Sarani  
Camac Street, Kolkata- 700017; West Bengal, India

**PHILIPS**


b) Slide the Mounting Brackets to high tension rod (suitable upto M8).

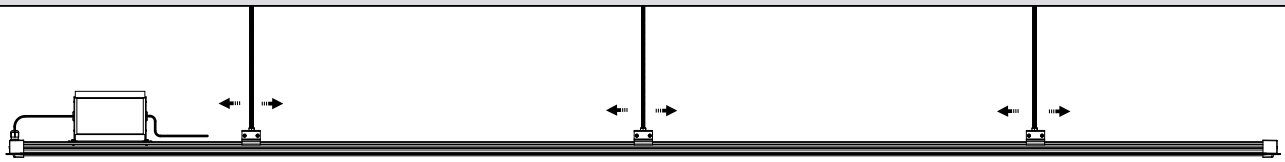


c) Tight the nut & check nut (not included) until the luminaries gets properly seated in ceiling.  
Tight the safety cross screws by screw driver.

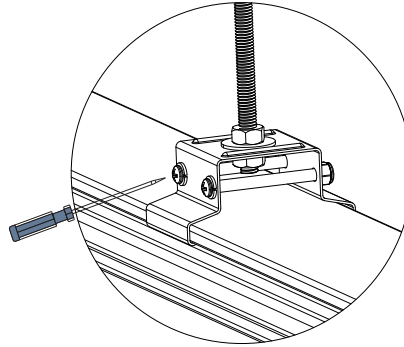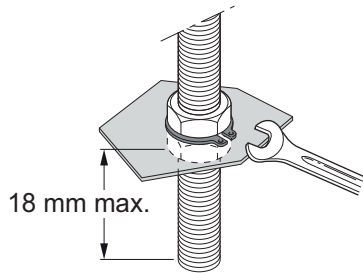


d) For External wire connection use watertight/waterproof Box (not a part of Luminaire)

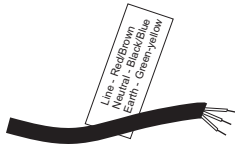

3C x 1 sqmm. Ø8~9mm approx.

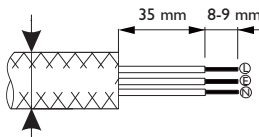

 Notice: Correct connection for polarities

## Caution

1. The light source of this luminaire is not replaceable. when the light source reaches its end of life the whole luminaire shall be replaced.
2. Mounting surface should be flat.
3. Do not stare into LED beam.
4. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replace by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
5. Luminaire has IP66 protection after installation.
6. Luminaire must not be covered with any insulating or similar kind of material.



## Warning

1. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
2. The luminaire should be earthened properly for Safety and Performance.
3. Do not switch on before complete installation.

## Maintenance

1. Ensure power supply is switched off before attempting any maintenance work.
2. Side access is required for maintenance work in luminaire.
3. The luminaire must be used within the applicable product specifications, installation instruction and environmental conditions for storage & operations according to application guidelines provided by Signify for product warranty to be valid.