

by signify

### Linear Suspended

TruGroove


ID-290x TruGroove Shapes

### **System Overview**

These instructions review cover the installation of TruGroove suspended shapes. Refer to graphics below for available configurations and important mounting dimensions. Each suspended shape requires 4 mounting points. Refer to applicable ceiling mount installation instructions and follow in conjunction with these instructions.



IMPORTANT: Read all instructions including fixture wiring AND mechanical details before beginning installation.

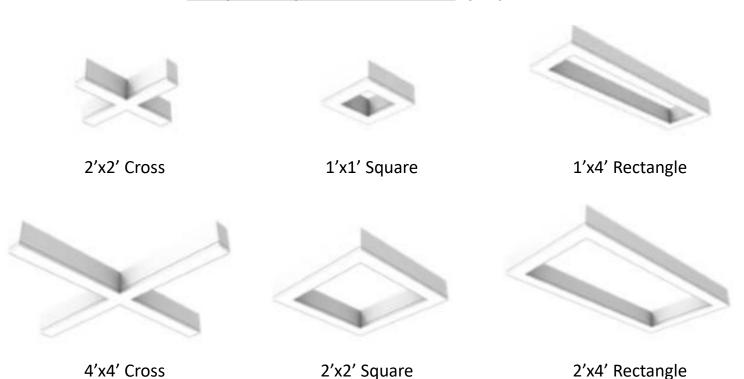

Configuration	Mounting Length	Mounting Width
2'x2' Cross	24.00" (610mm)	24.00" (610mm)
4'x4' Cross	48.00" (610mm)	48.00" (610mm)
1'x1' Square	12.25" (311mm)	12.25" (311mm)
2'x2' Square	24.00" (610mm)	24.00" (610mm)
1'x4' Rectangle	48.00" (610mm)	12.25" (311mm)
1'x4' Rectangle	48.00" (610mm)	24.00" (610mm)

TOOLS REQUIRED: Phillips screwdriver, #2 square drive screwdriver (optional), cable cutters, pliers.

ATTENTION: Install in accordance with local and national building and electric codes.

### 1 CEILING MOUNT INSTALLATION


Follow supplied ceiling mount installation instructions.

Refer to applicable ceiling mount instructions. Follow instructions and required mounting dimensions provided in this document for required TruGroove shape configuration. Install ceiling mounts, suspension cables, and power cord as shown in ceiling mounting instructions.

## 2 HOUSING INSTALLATION


Determine required fixture installation height above finished floor. For easier housing installation, <u>trim suspension cables flush</u> with bottom of housing. **IMPORTANT:** Use appropriate cable cutters and make sure cable ends are clean and burr free before installing housing. (Recommended cutters: K.K. Porter cable cutter cat. No. 0690TN or Klein all purpose shears cat. No. 1104).

### 3 HOUSING INSTALLATION

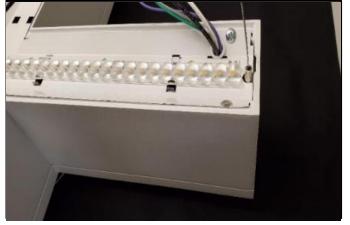


Insert suspension cable into cable gripper inside housing. **IMPORANT:** Ensure cable is fully inserted and secured inside gripper. Repeat process at other 3 locations to fully suspend housing.

### HOUSING INSTALLATION

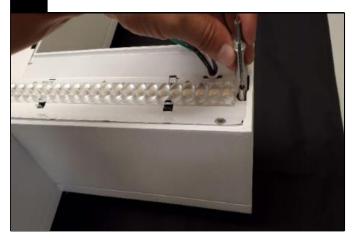


To make small leveling adjustments, support bottom of housing at mount location, slide supplied release key onto cable as shown, and gently push down to release gripper. **IMPORTANT**: Support bottom of housing throughout leveling process detailed in this step. Once adjustment is made, remove release key. Repeat process as required to completely level housing.

### 5 POWER CORD INSTALLATION

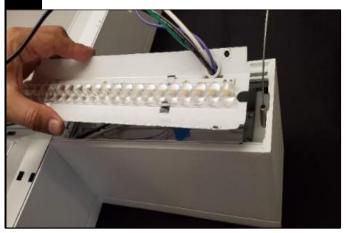

Remove LED pan (or cover for down light only versions) at required power location. Save screws for re-installation later.


### 6 POWER CORD INSTALLATION

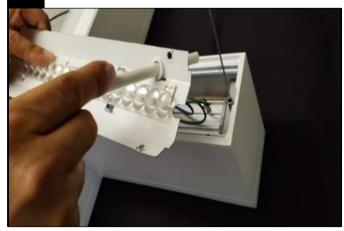


Pull out factory installed wires through hole in LED pan (or cover for down light only versions). Feed supplied power cord through hole in LED pan (or cover for down light only versions).

# 7 POWER CORD INSTALLATION


Install supplied strain relied as shown using pliers.

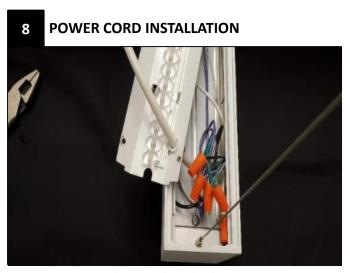

Cut excess power cord, strip ends, and make power connections inside housing using wire nuts (supplied by others).

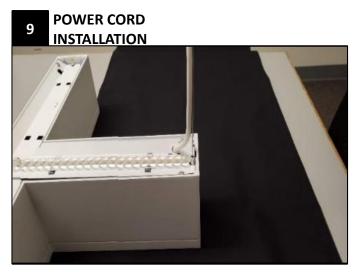

Re-install LED pan (or cover for down light only versions) and screws removed in step 5.

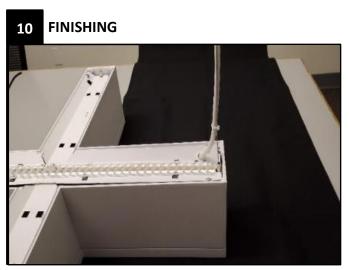

Optional: Use cable ties to secure power cord to aircraft cable as required.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interreference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

ATTENTION: Install in accordance with local and national building and electric codes.

## (s)ignify

© 2021 Signify Holding. All rights reserved. The information provided herein is subject to change, without notice. Signify does not give any representation or warranty as to the accuracy or completeness of the information included herein and shall not be liable for any action in reliance thereon. The informatior presented in this document is not intended as any commercial offer and does not form part of any quotation or contract, unless otherwise agreed by Signify.

Signify North America Corporation 400 Crossing Blvd, Suite 600 Bridgewater, NJ 08807 Telephone: 855-486-2216 Signify Canada Ltd. 281 Hillmount Road, Markham, ON, Canada L6C 2S3 Telephone: 800-668-9008

All trademarks are owned by Signify Holding or their respective owners