

Read and understand these instructions before installing luminaire (fixture).

This luminaire is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding. Allow fixture to cool before handling.

Retain these instructions for maintenance reference.

**INSTRUCTIONS FOR INSTALLING AND OPERATING LLA01 AND LLA11 SERIES TRACK LED LUMINAIRES.
FOR USE WITH LIGHTOLIER LYTESPAN TRACK SYSTEMS ONLY.**

- Compatible with ceiling, wall and suspended mounted track. Compatible with multipoint.
- Compatible with monopoint 6173 for the LLA01 and LLA11 series fixtures. Sold separately.
- Compatible with hex cell louver AL25HC for the LLA01 and hex cell louver LHCA11 for the LLA11. Sold separately.
- Compatible with snoot series LLAN01SN for the LLA01 and snoot series LLAN11SN for the LLA11. Sold separately.
- Compatible with LLA01 reflector series for the LLA01 and LLA11 reflector series for the LLA11. Sold separately.
- Compatible with certain types of dimmers. See specification sheet LED-DIM for compatible dimmers.
- Not compatible with 6170, 6172, 6190 monopoints, extension wands, clamp-on monopoint, weighted base, sloped ceiling adapter, Atom, pro-spec track.
- CAUTION: HOT SURFACE. Keep away from curtains and any other combustible materials.
- CAUTION: Turn power off and allow fixture to cool before handling.
- CAUTION: No consumer serviceable parts. Contact factory if service is required.
- CAUTION: For use in dry locations only.

INSTRUCTIONS FOR ATTACHING LUMINAIRE TO TRACK.

1. Turn off power to TRACK.
2. Insert luminaire into TRACK as shown in FIG. 1. The STEM must be on the same side as the BEAD.
3. Rotate DRIVER HOUSING clockwise 90°, pull DRIVER HOUSING away from TRACK enough for LEVER to clear TRACK.
4. Turn LEVER to position shown in FIG 2. to mechanically secure DRIVER HOUSING.
5. TO REMOVE: Turn LEVER, lightly pull down DRIVER HOUSING, and rotate counterclockwise.

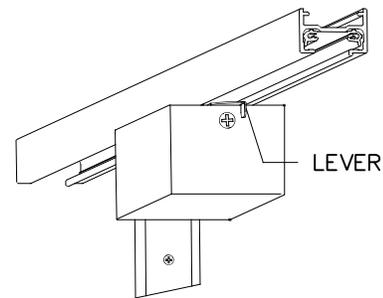


FIG. 2

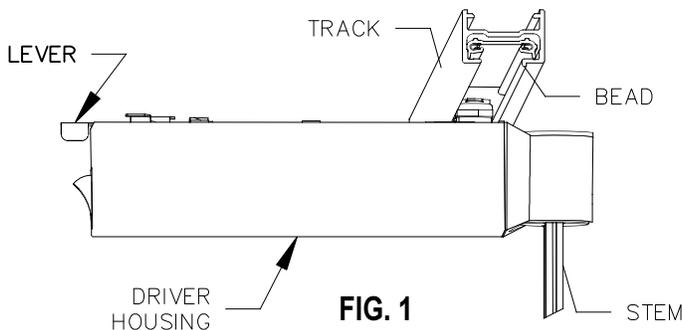


FIG. 1

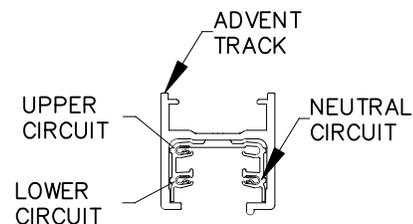


FIG. 3

INSTRUCTIONS FOR CONVERTING LUMINAIRE TO OPERATE ON 2 CIRCUIT ADVENT TRACK. FIG.3

TO POWER ON UPPER CIRCUIT

1. Raise BRASS CONTACT to high position by pulling CONTACT as high as stop permits (See FIG. 4).
2. Follow instructions above for installing into track.

TO POWER ON LOWER CIRCUIT :

1. Ensure CONTACTS are at the same level. Push down BRASS contact if needed.
2. Follow instructions above for installing into track.

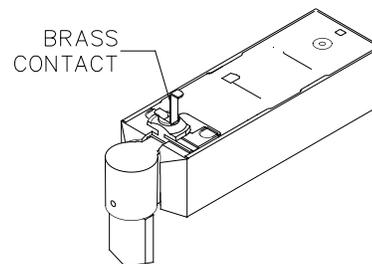


FIG. 4

Philips Lighting North America Corporation

200 Franklin Square Drive
Somerset, NJ 08873, USA
Phone: 855-486-2216 • D0216

Philips Lighting Canada Ltd.

281 Hillmount Road
Markham ON, Canada L6C 2S3
Phone: 800-668-9008 • D0216

PHILIPS

INSTRUCTIONS FOR OPERATING LUMINAIRE.

1. Adjust VERTICAL and HORIZONTAL aim (FIG. 5).

Note: vertical and horizontal rotation have mechanical stops and locking feature. Do not force past stop. If aim is locked loosen SET SCREWS.

Note: Horizontal and Vertical aiming can be locked.
To lock, tighten SET SCREWS with hex key (by others).
Do not overtighten screws. to unlock loosen SET SCREWS.

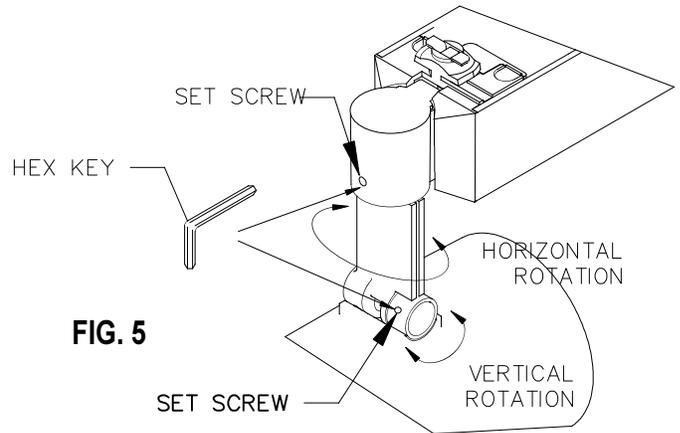


FIG. 5

2. Turn power on to track circuit.

INSTRUCTIONS FOR INSTALLING REFLECTOR (FIG. 6,7,8).

1. Confirm that REFLECTOR is held securely in HOLDER. If REFLECTOR is loose then push (FIG. 6) into HOLDER until REFLECTOR rests flat against LENS and is held by all three snaps.
2. Orient the REFLECTOR HOLDER as shown in (FIG. 7), so that the SNAP FEATURES are aligned with the slots located on either side of the front of the HEAT SINK.
3. Push REFLECTOR HOLDER into the front face of the HEAT SINK until SNAP FEATURES are secure within the designated slots. (FIG. 8)
4. Replace FRONT HOUSING by aligning bayonet tabs with the open slots on the HEAT SINK, pushing it firmly into the HEAT SINK and twisting it clockwise until the spring clips are fully engaged.

Note: Ensure both clips are fully engaged and that there is no interference with the two spring clips located on the front face of the heat sink. If there is interference loosen the clips and orient them correctly, so that they may catch the front housing upon assembly.

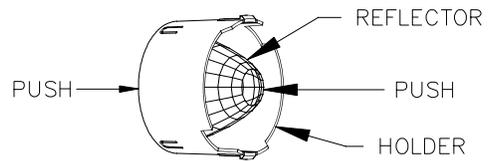


FIG. 6

INSTRUCTIONS FOR INSTALLING OPTIONAL ACCESSORIES (FIG. 9&10).

1. Remove FRONT HOUSING by twisting counterclockwise to unlock from HEAT SINK. (FIG. 9)
2. Place accessories into the FRONT HOUSING through the back as shown in (FIG. 10).
3. Replace FRONT HOUSING by aligning bayonet tabs with the open slots on the HEAT SINK, pushing it firmly into the HEAT SINK and twisting it clockwise until the spring clips are fully engaged.
4. Accessories will be secured between the REFLECTOR HOLDER and the ACCESSORY HOLDER, which will be pushed upwards, and with accessories installed, may remain above the top edge of the FRONT HOUSING when fully assembled.

Note: Luminaire accepts one accessory and a snoot, max. The use of two glass lenses and a snoot or one louver, one glass lens and a snoot requires the use of a double accessory holder (Sold Separately).
If a louver is used position the louver furthest from the LED board.

5. If double accessory holder is required, remove the single accessory holder by loosening the three engaged snap clips, discard, and push the double accessory holder straight into the FRONT HOUSING until holder is fully secure.

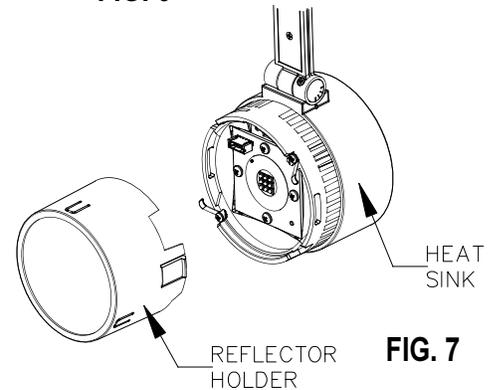


FIG. 7

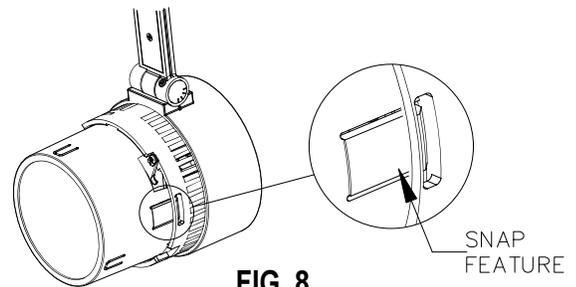


FIG. 8

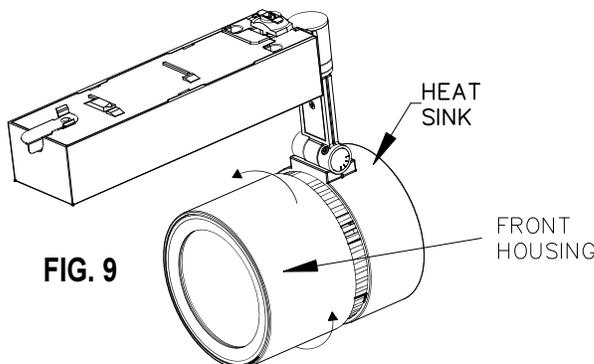


FIG. 9

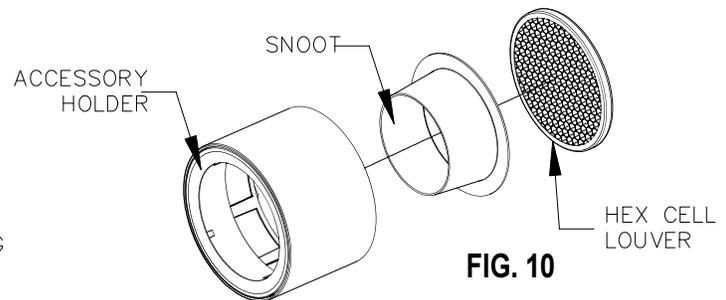


FIG. 10

Philips Lighting North America Corporation

200 Franklin Square Drive
Somerset, NJ 08873, USA
Phone: 855-486-2216 • D0216

Philips Lighting Canada Ltd.

281 Hillmount Road
Markham ON, Canada L6C 2S3
Phone: 800-668-9008 • D0216

PHILIPS