



# INSTALLATION INSTRUCTIONS

## 443560817310 – ECOFORM GEN. 2 BIRD DETERRENT (BD)

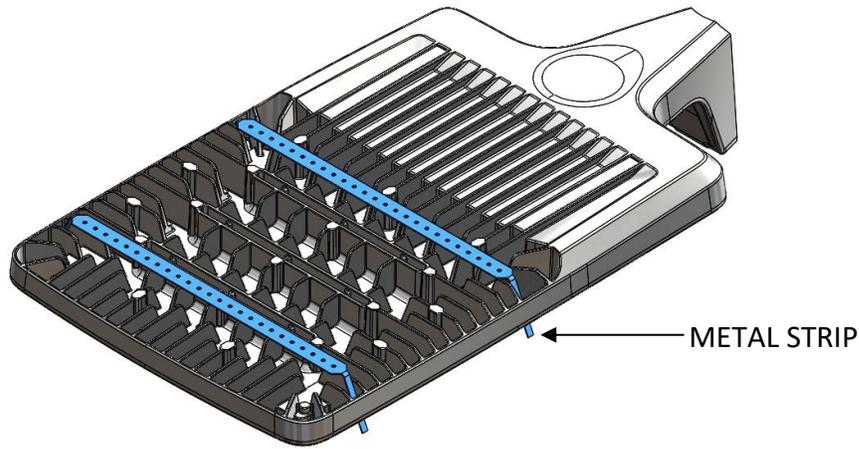

**FIGURE 1**

1. AS HOLE LOCATIONS ON SPIKES MAY VARY, ALIGN HOLES ON SPIKES WITH HOLES ON METAL STRIPS BEFORE SECURING METAL STRIPS TO LUMINAIRE.
2. BEND ALL FOUR TABS OF THE METAL STRIPS AROUND LUMINAIRE'S OUTER EDGE TO SECURE.
3. ATTACH BIRD DETERRENT SPIKES TO METAL STRIPS USING THE PROVIDED HARDWARE.
4. IF NECESSARY, TRIM ANY ADDITIONAL LENGTH OF SPIKES THAT OVERHANG THE LUMINAIRE.

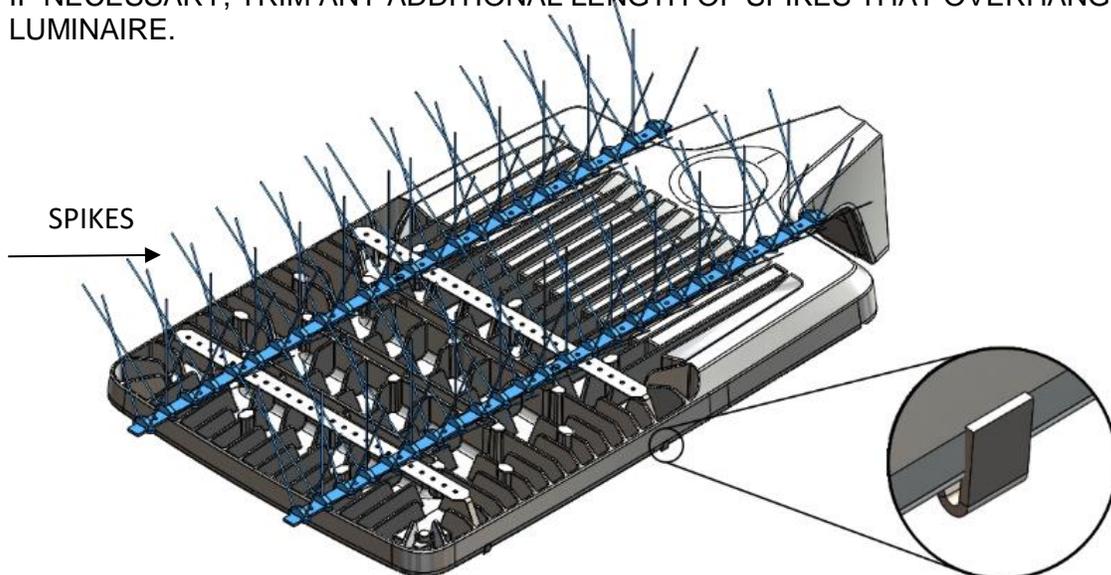


**FIGURE 2**

(RESULTS MAY VARY)


# DIRECTIVES D'INSTALLATION

## 443560817310 – DISPOSITIF DE DISSUASION DES OISEAUX (BD) ECOFORM GEN.2

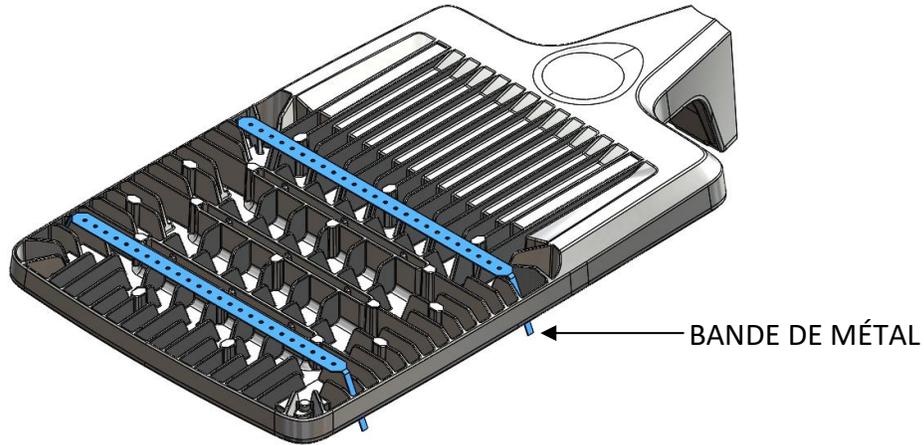

**FIGURE 1**

1. COMME LES EMPLACEMENTS DES TROUS SUR LES POINTES PEUVENT VARIER, ALIGNEZ LES TROUS SUR LES POINTES AVEC LES TROUS DANS LES BANDES DE MÉTAL AVANT DE FIXER LES BANDES DE MÉTAL AU LUMINAIRE.
2. POUR LA FIXATION, PLIEZ CHACUNE DES QUATRE LANGUETTES DES BANDES DE MÉTAL AUTOUR DU BORD EXTÉRIEUR DU LUMINAIRE.
3. FIXEZ LES POINTES DE DISSUASION DES OISEAUX AUX BANDES DE MÉTAL EN UTILISANT LA QUINCAILLERIE FOURNIE.
4. AU BESOIN, DÉCOUPEZ LA LONGUEUR EXCÉDENTAIRE DES POINTES QUI DÉPASSE DU LUMINAIRE.

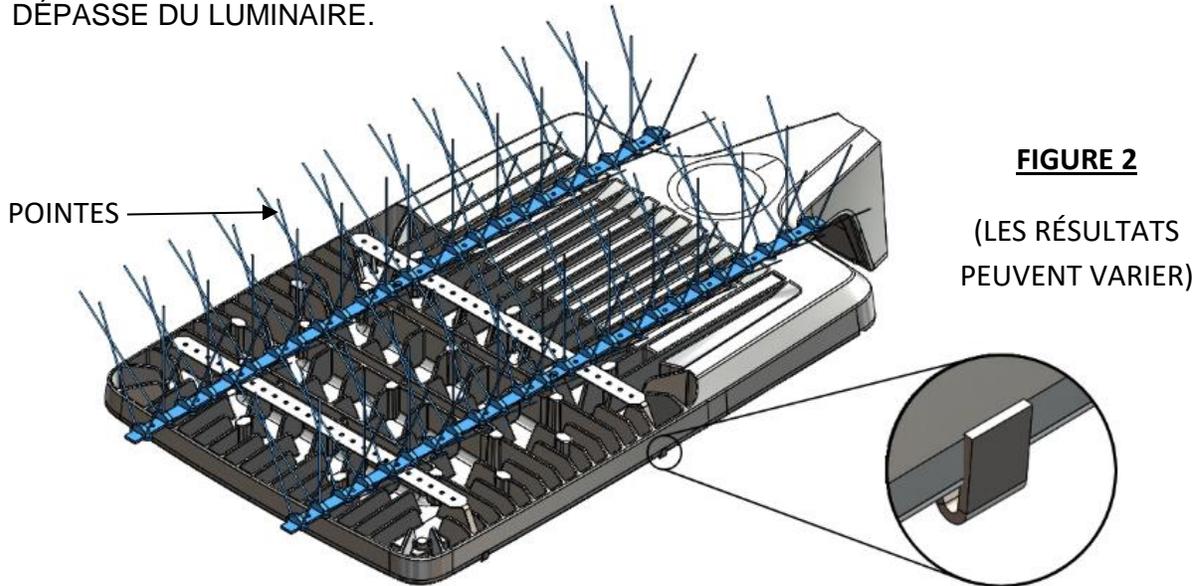

**FIGURE 2**

(LES RÉSULTATS  
PEUVENT VARIER)