

# LED PATRON™


## DIE CAST ALUMINUM UNIT

### OPTIONAL FORWARD THROW REFLECTOR (FTR) INSTALLATION INSTRUCTIONS


#### ALL MOUNTING OPTIONS

- 1. Remove top cover from back plate with screwdriver (see Fig.1).
- 2. Unscrew two screws inside the front cover securing metalized reflector, remove reflector assembly (see Fig.2).
- 3. Take separate (FTR) Forward Throw Reflector from carton and snap into the hole inside of reflector assembly (see Fig.3).
- 4. Attach reflector assembly back to inside of front cover using the two screws removed in step 1 to secure reflector assembly to front cover housing.
- 5. Snap front cover onto the back housing.

#### OPENING TOP COVER

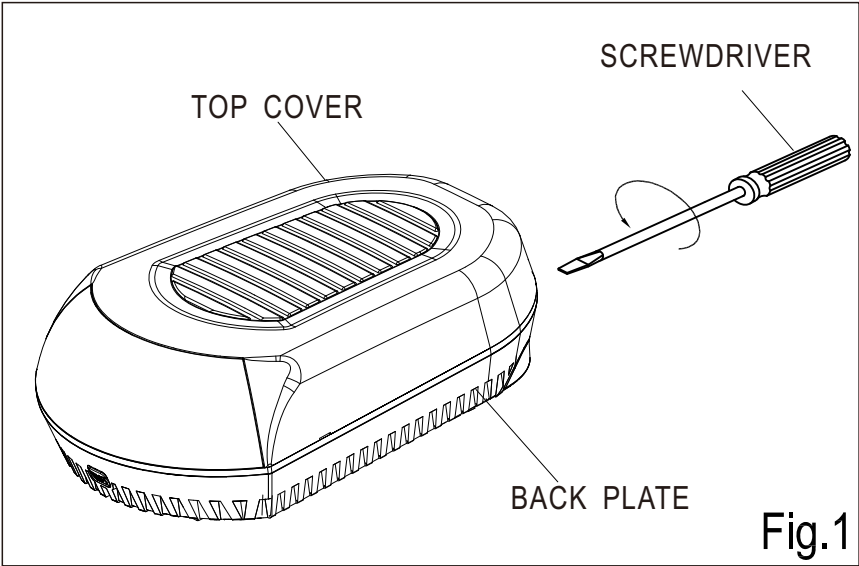

#### REMOVE REFLECTOR ASSEMBLY

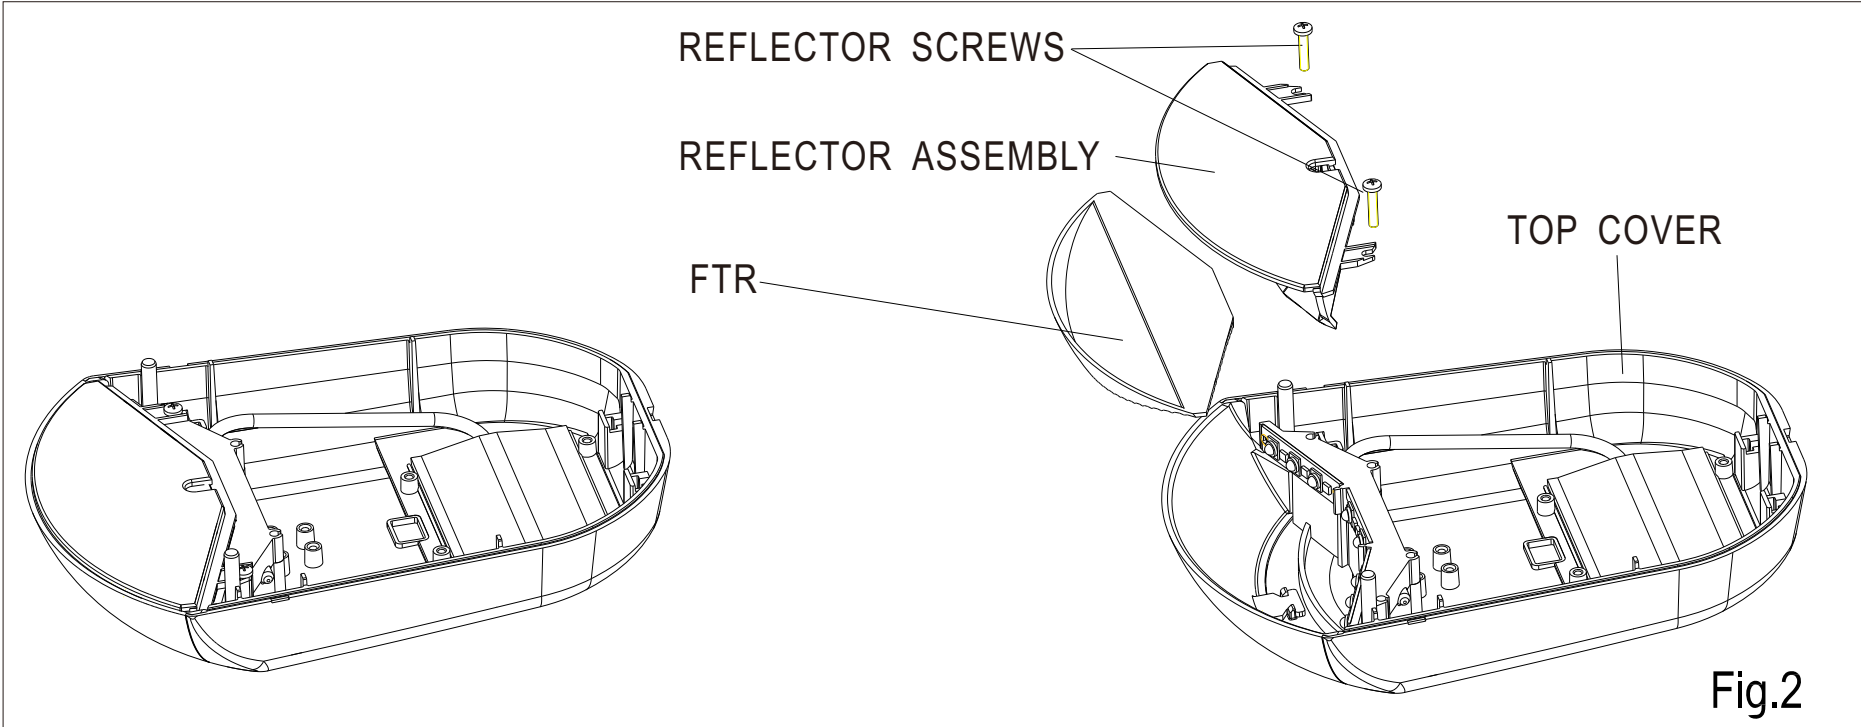

#### FORWARD THROW REFLECTOR

