


INSTALLATION INSTRUCTIONS

CLEARSCAPE BARN DOORS

TOOLS REQUIRED:


- SMALL FLATHEAD SCREWDRIVER
- PHILIPS HEAD SCREWDRIVER

REMOVE (QTY 4) SET SCREWS LOCATED AT THE CORNERS OF FRONT HOUSING FACE. GLASS LENS IS TO REMAIN IN PLACE DURING ASSEMBLY. TAKE CARE NOT TO DAMAGE GLASS.

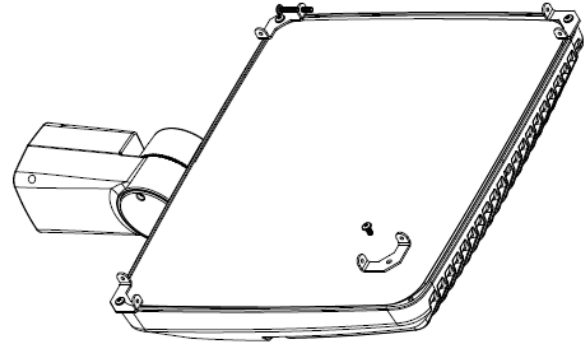


ATTACH (QTY 4) MOUNTING BRACKETS USING 3/8" SCREWS PROVIDED.

ATTACH BARN DOORS USING (QTY 8 – 2 PER DOOR) 1.5" SCREWS PROVIDED. SCREW WILL ENTER FROM THE OUTSIDE OF THE BARN DOOR AND ENGAGE MOUNTING BRACKET. SIDE DOORS ARE IDENTICAL, TOP AND BOTTOM DOORS ARE DIFFERENT. TOP DOOR CLEARANCE SLOTS FOR MOUNTING BRACKET WILL BE CLOSER TOGETHER THAN THOSE OF BOTTOM DOOR.

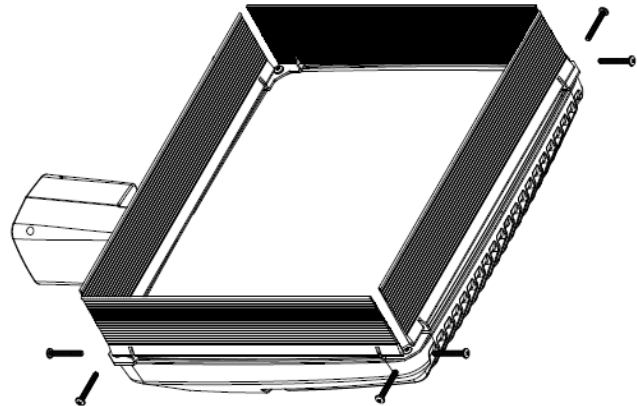

ONCE DOORS HAVE BEEN ATTACHED TIGHTEN 3/8" BRACKET SCREWS TO SECURE MOUNTING BRACKETS TO HOUSING.

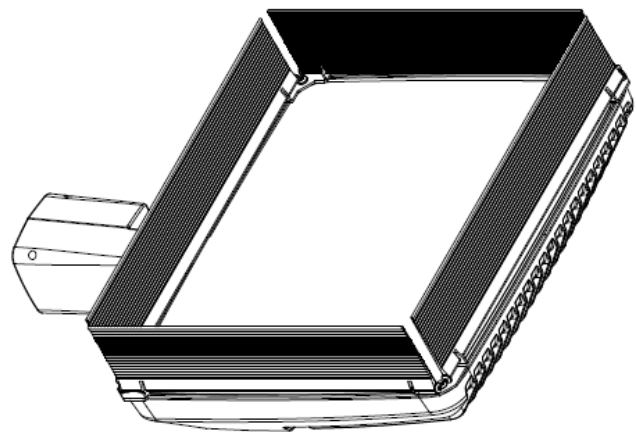

AIM BARN DOORS AS DESIRED AND SET INTO PLACE BY TIGHTENING 1.5" DOOR SCREWS.