

## Read and understand these instructions before installing luminaire (fixture) .

This luminaire is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding. Allow fixture to cool before handling.

Retain these instructions for maintenance reference.

### INSTRUCTIONS FOR INSTALLING AND OPERATING LLAV01, LLAV11, AND LLAV12 SERIES TRACK LED LUMINAIRES. FOR USE WITH LIGHTOLIER LYTESPAN TRACK SYSTEMS ONLY.

- Compatible with ceiling, wall and suspended mounted track.
- Compatible with Monopoint, Multipoint, and Extension Wands. Sold separately.
- Compatible with certain types of dimmers. See specification sheets LLAV01, LLAV11, AND LLAV12 for compatible dimmers.
- Accessories: LLAV01 and LLAV11 series compatible with LLAHCA11 Hex cell louver, LLA11SN snoot, LLAV11 series films; when used with Accessory Holder LLAV01AH. Sold separately. For LLAV12 series: compatible with AL4HC Hex Cell Louver, 23SNT6 Snoot, LLAV12 series films, when used with Accessory Holder LLAV12AH.
- Not compatible with Pro-Spec track.
- CAUTION: HOT SURFACE. Keep away from curtains and any other combustible materials.
- CAUTION: Turn power off and allow fixture to cool before handling.
- CAUTION: No consumer serviceable parts. Contact factory if service is required.
- CAUTION: For use in dry locations only.

## IS-LLAV0130 ALCYON LED VERTICAL CYLINDER TRACK LIGHTING LIGHTOLIER ADAPTER

### INSTRUCTIONS FOR ATTACHING LUMINAIRE TO TRACK.

1. Turn off power to TRACK.

#### A. ADAPTER: (BASIC TRACK), FIG.4

1. Insert the ADAPTER into the TRACK. LOCKING LEVER must be on the same side of track as Bead (FIG.1)
2. Rotate fixture ADAPTER 90° clockwise with the help of the DRIVER HOUSING until LOCKING LEVER snaps and locks in place (FIG.2)
3. To remove, depress LOCKING LEVER, then rotate ADAPTER 90° counterclockwise with the help of the DRIVER HOUSING (FIG.2)





#### B. ADAPTER: (ADVENT TRACK), FIG.5

##### TO POWER ON UPPER CIRCUIT:


1. Raise BRASS CONTACT to high position by pulling CONTACT as high as stop permits (See FIG.3).
2. Follow instructions above for installing into track.

##### TO POWER ON LOWER CIRCUIT:

1. Ensure CONTACTS are at the same level. Push down BRASS contact if needed.
2. Follow instructions above for installing into track.

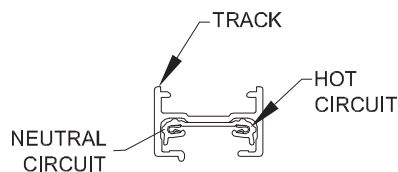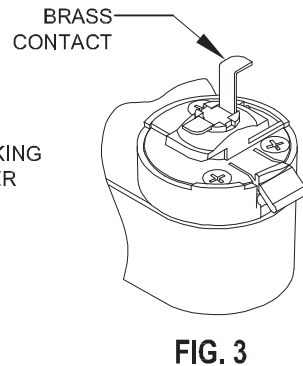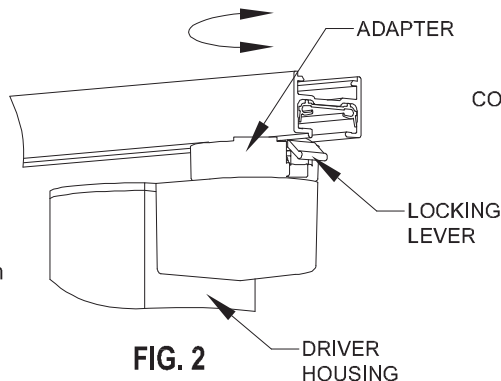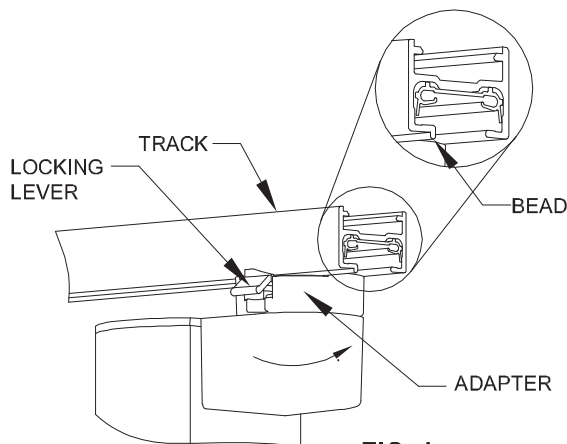


**FIG. 4  
BASIC TRACK**

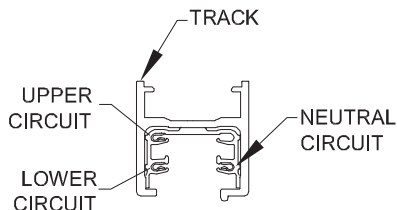


**FIG. 5  
ADVENT TRACK**

ROTATE IN DIRECTIONS SHOWN.  
HORIZONTAL AND VERTICAL  
ROTATION HAVE MECHANICAL  
STOPS. DO NOT FORCE PAST  
STOPS. (FIG.6)

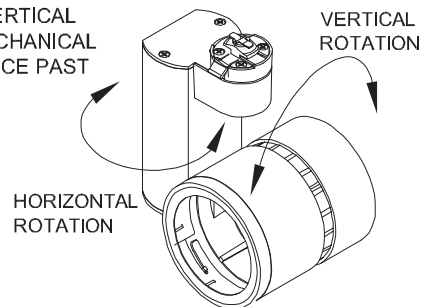

# IS-LLAV0130 ALCYON LED VERTICAL CYLINDER TRACK LIGHTING LIGHTOLIER ADAPTER

**FIG. 7  
FIXTURE WITHOUT ACCESSORIES**

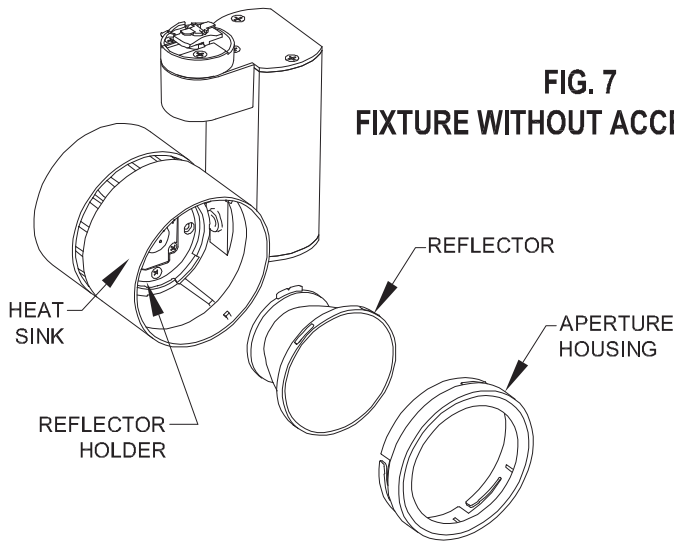


## INSTALLING REFLECTOR

(REFLECTOR SOLD SEPARATELY)

REMOVE APERTURE HOUSING FROM HEAT SINK BY ROTATING APERTURE HOUSING COUNTER CLOCKWISE. PLACE REFLECTOR AGAINST REFLECTOR HOLDER, ROTATE REFLECTOR CLOCKWISE UNTIL IT LOCKS INTO HOLDER. PLACE APERTURE HOUSING AGAINST HEAT SINK, ROTATE CLOCKWISE TO LOCK INTO HEAT SINK. (FIG. 7)

## INSTALLING ACCESSORIES INTO FIXTURE



REMOVE APERTURE HOUSING FROM HEAT SINK BY ROTATING COUNTER CLOCKWISE. PLACE ACCESSORY HOLDER AGAINST HEAT SINK AND LOCK INTO POSITION BY ROTATING CLOCKWISE. DO NOT FORCE PAST STOP. PLACE ACCESSORIES INSIDE OF APERTURE HOUSING. SECURE ACCESSORIES WITH SPRING RING. ATTACH APERTURE HOUSING WITH ACCESSORIES TO ACCESSORY HOLDER BY PLACING AGAINST ACCESSORY HOLDER AND ROTATING CLOCKWISE. DO NOT FORCE PAST STOP. (FIG. 8)

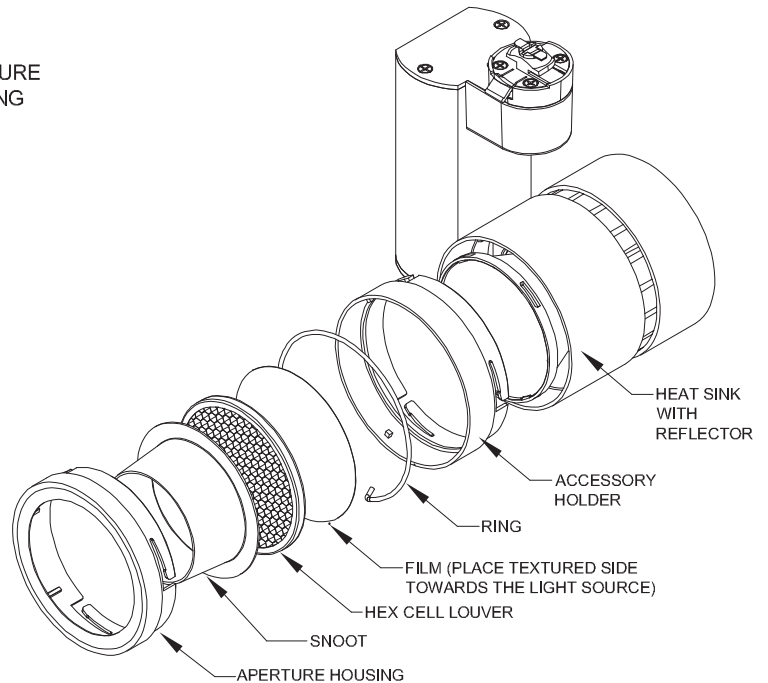

**FIG. 8  
FIXTURE WITH ACCESSORIES**

## ACCESSORY HOLDERS COMPATIBILITY

**MAX. # OF ACCESSORIES: (1) SNOOT + (1) HEX CELL + (2) FILMS**

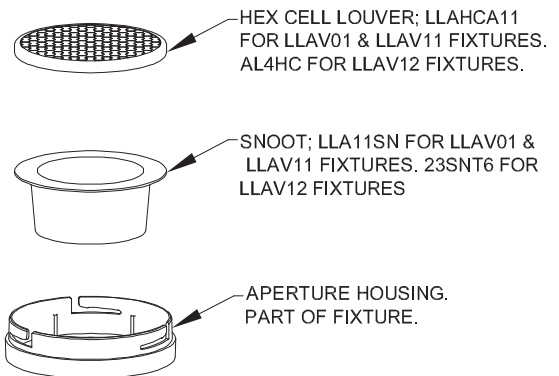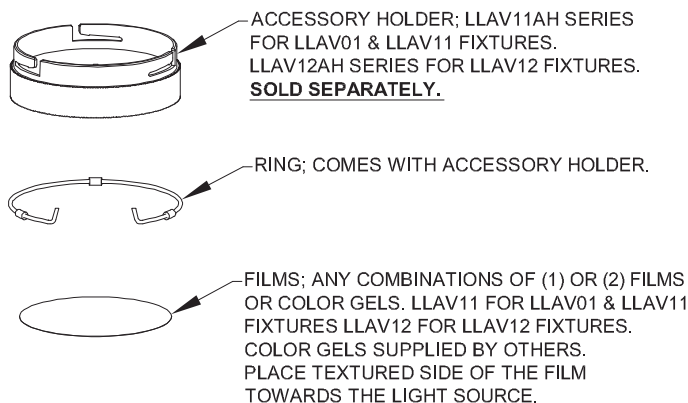

© 2014 Koninklijke Philips N.V. All rights reserved.  
Specifications are subject to change without notice.  
[www.philips.com/luminaires](http://www.philips.com/luminaires)

IS-LLAV0130 02/14 page 2 of 2

Philips Lighting  
North America Corporation  
200 Franklin Square Drive  
Somerset, NJ 08873  
Phone: 855-486-2216

Philips Lighting Company  
281 Hillmount Road  
Markham ON, Canada L6C 2S3  
Phone: 800-668-9008