

LIGHTOLIER

by  Signify

IS-C3CAH

ACCENT

ACCESSORY HOLDER


Read and understand these instructions before installing luminaire.

Retain these instructions for maintenance reference



Caution (RISK OF FIRE)

Use only with reflectors and accessories compatible with this series and provided by Signify. Use of other manufacturers products may void the Underwriters Laboratories listing and could constitute a fire hazard.

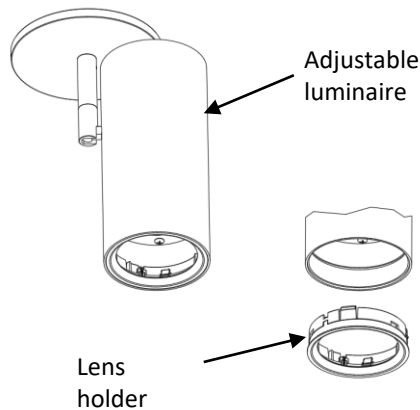


Cylinder SKU Series	Use with Accessory Holder
C3CSA, C3CPSA	C3CAH_-SERIES

Step 1

-Remove the **Lens Holder** from the **Adjustable Luminaire**.

Note:

Keep Lens Holder for further usage.

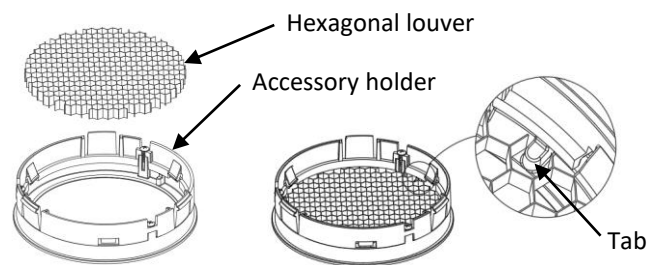

Step 2


-Insert the **Hexagonal Louver** or the **Snoot** inside the **Accessory Holder**.

Hexagonal Louver:

Position the **Tab** inside open cell of the **Hexagonal Louver**.


Snoot:

Position the **Snoot** flange on the **Tab**.

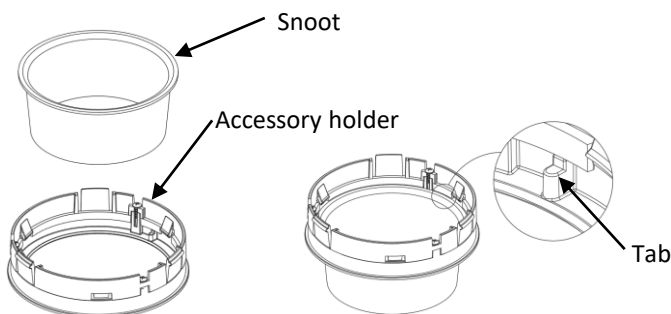

IS-C3CAH


Accessory Holder

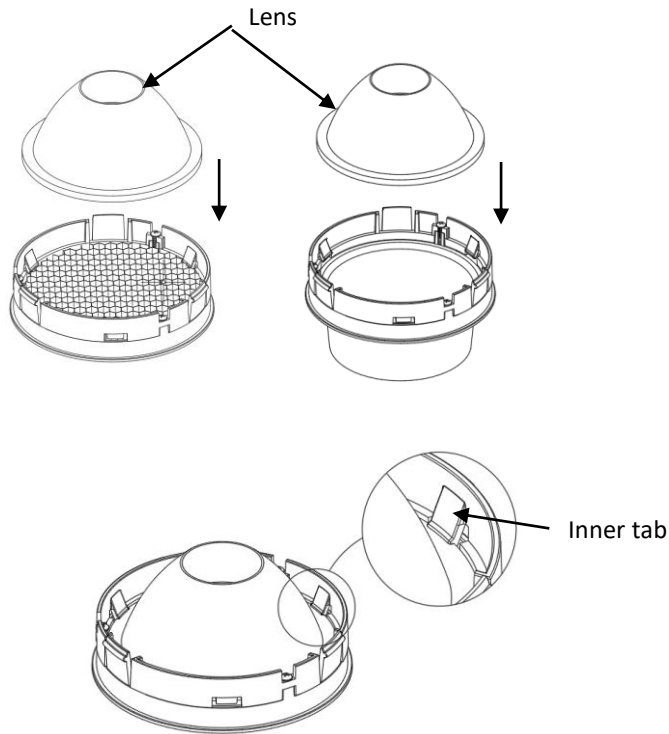

Step 3

-Insert the **Lens** over the **Hexagonal Louver** or **Snoot**.

Make sure that the **Lens** is properly insert under the **Tab**.

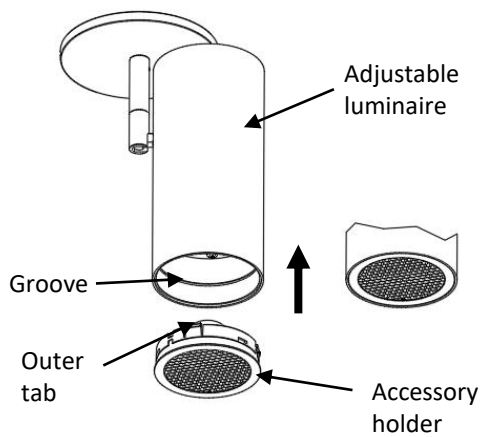

Step 4

-Insert the **Accessory Holder** inside **Adjustable Luminaire**.

Engage the 3 **Outer Tab** inside the **Groove**.



LIGHTOLIER

by  Signify

IS-C3CAH

ACCENT

Support d'accessoire


Veillez prendre connaissance de ces directives avant de procéder à l'installation du luminaire.

Conserver ces directives à titre de références.



ATTENTION : RISQUE D'INCENDIE.

UTILISER SEULEMENT AVEC DES RÉFLECTEURS DE SIGNIFY LIGHTOLIER. L'UTILISATION DE RÉFLECTEURS D'AUTRES MANUFACTURIER PEUT ANNULER LA CERTIFICATION.

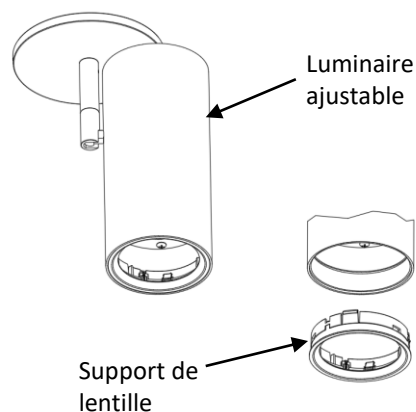


Cylindre code Séries	Utiliser avec les supports d'accessoires:
C3CSA, C3CPSA	C3CO_-SERIES

Étape 1

-Retirer le **support de lentille** du luminaire ajustable.

Note:

Garder le **support de lentille** pour un usage ultérieur.

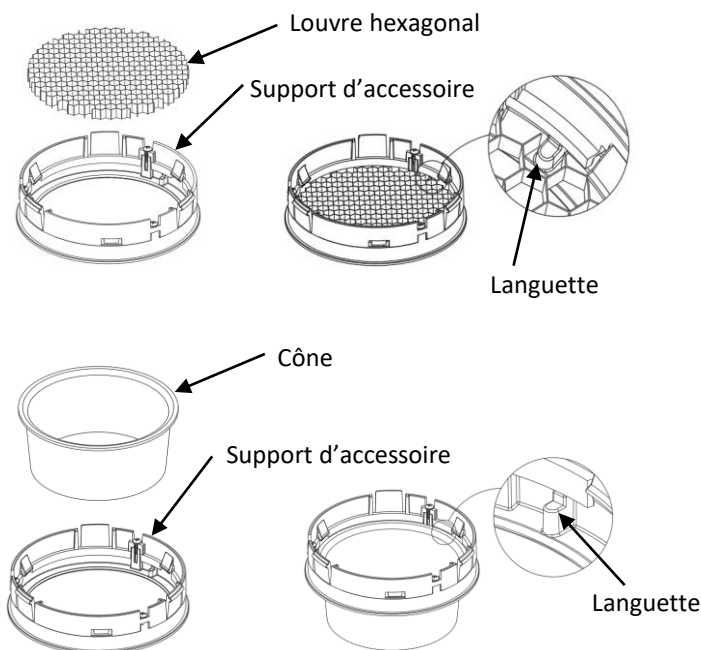

Étape 2


-Insérer le **louvre hexagonal** ou le **cône** à l'intérieur du **support d'accessoire**.

Louvre hexagonal:

Positionner les **languettes** dans les cellules ouverte du **louvre hexagonal**.

Cône:


Positionner la bordure du **cône** au dessus des **languettes**.

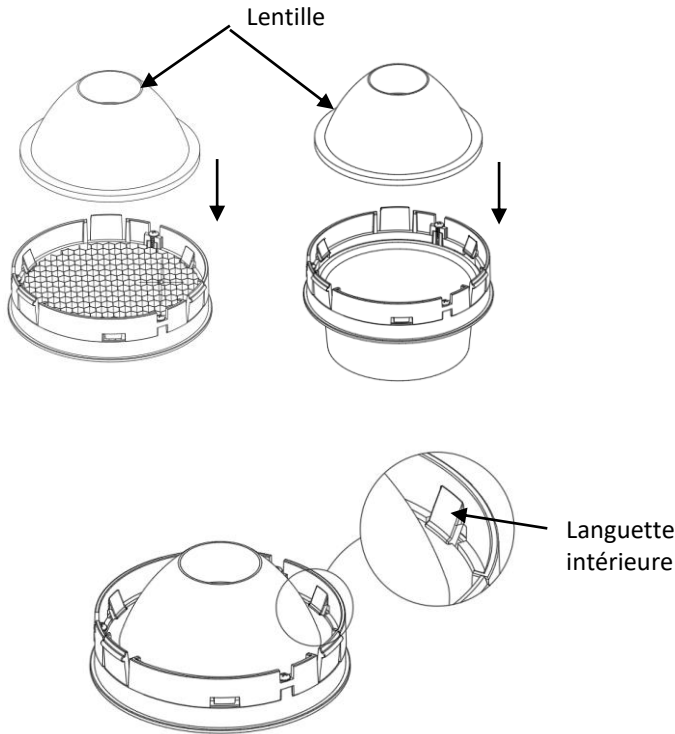

Étape 3

-Insérer la **lentille** sur le **louvre hexagonal** ou le **cône**.

S'assurer que la lentille soit correctement insérer sous la languette intérieure .

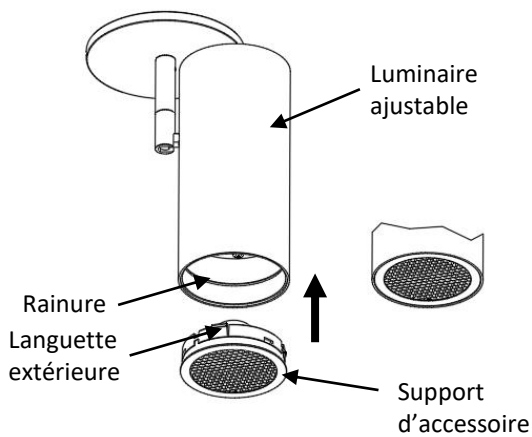

Étape 4

-Insérer le support d'accessoire dans le luminaire ajustable, jusqu'au dé clic des 3 languettes extérieure dans la rainure.

