


**PHILIPS**

Wireless Connected  
Systems

MasterConnect

Switches

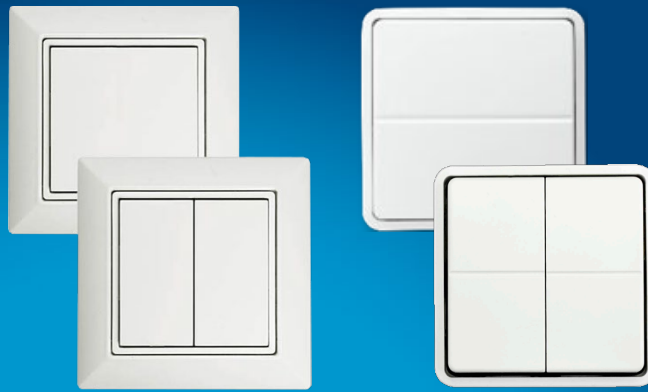

## Switch commissioning procedures

# Switch commissioning procedures for switches from Philips and partners

For adding a switch to a group or zone, a specific procedure must be followed to bind it correctly to the luminaires. For any switch, you must first open the group in the MasterConnect app, choose “+” and “Switches” to add it. Select the chosen Philips or partner switch from the list and decide whether to add the switch to a zone or a group.

This commissioning procedure differs depending on the switch that is used. Please refer to the segment of the document that describes the procedure for your switch.

## Philips EasyAir 2B / 4B switch and partner switches from X Light, LUMITECH, Vimar (03905) & Jaeger direct

For commissioning a switch into a group, the cover does not need to be removed, and you may choose to work with any one of the four buttons.

Please follow the steps given below, once the app asks you to:

1. Long press – Press and hold the chosen button\* for 10 seconds
2. Short press – Press and hold the button\* for 1 second
3. Long press – Press and hold the button\* for 10 seconds
4. Now, perform a series of short presses at an interval of 2s with the button\* until the MasterConnect app feeds back a beep and a message that the switch has been detected. This should be done up to a maximum of 16 times and in one of the 16 presses, the channel will coincide with the luminaires and feedback will be received. When the feedback is received stop immediately.
5. After getting the app feedback, wait as indicated by the app and then make a short press with any of the other buttons to finalize the switch linking.

\* Irrespective of whether it is dual button or a four-button switch, choose to work with any of the buttons.

## Partner switches from ABB, Busch-Jaeger, Feller, Jumitech, Jung, Niko, Senic, Voltus, & Vimar (03906)

For commissioning a switch into a group, the cover does not need to be removed.

Please follow the steps given below, once the app asks you to:

1. Long press – Press and hold the button on the top right for 10 seconds
  - If the MasterConnect App feeds back a beep and a message that the switch has been detected, you must directly proceed to step 2.
  - Otherwise, repeat step 1 for the other buttons until the MasterConnect App feeds back a beep and a message. After that proceed to step 2.
2. Short press – Press and hold the button on the top right and bottom left for 1 second to finalize the switch linking.

## Philips UID8450/10

For commissioning a switch into a group, the cover needs to be removed.

Please follow the steps given below, once the app asks you to:

1. Long press – Press and hold control key A0 + energy bow for 10 seconds.  
- If the MasterConnect App feeds back a beep and a message that the switch has been detected, you may proceed to step 5.
2. Long press – Press and hold control key A1 + energy bow for 10 seconds.  
- If the MasterConnect App feeds back a beep and a message that the switch has been detected, you may proceed to step 5.
3. Long press – Press and hold control key B0 + energy bow for 10 seconds.  
- If the MasterConnect App feeds back a beep and a message that the switch has been detected, you may proceed to step 5.
4. Long press – Press and hold control key B1 + energy bow for 10 seconds.  
- If the MasterConnect App feeds back a beep and a message that the switch has been detected, you may proceed to step 5.
5. Test if the lights respond to the switch after adding the cover.

## Philips UID8460/10

For commissioning a switch into a group, the cover does not need to be removed.

Please follow the steps given below, once the app asks you to:

1. Long press – Press and hold any button for 10 seconds  
- If the MasterConnect App feeds back a beep and a message that the switch has been detected, you may proceed to step 2.  
- Otherwise, repeat step 1 with another button on the switch.
2. Test if the lights respond to the switch.



© 2024 Signify Holding. All rights reserved. The information provided herein is subject to change, without notice. Signify does not give any representation or warranty as to the accuracy or completeness of the information included herein and shall not be liable for any action in reliance thereon. The information presented in this document is not intended as any commercial offer and does not form part of any quotation or contract.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V.  
All other trademarks are owned by Signify Holding or their respective owners.