

CLC INSTRUCTIONS SHEET

CHLORIDE

by 

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- Maximum mounting height is 10 feet. For installations greater than 10 feet, consult factory to ensure that adequate illumination will be available on the path of egress.
- All servicing should be performed by qualified personnel only.
- Do not use this equipment outdoors.
- Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Do not let power supply cords touch hot surfaces.
- Do not mount near gas or electric heaters.
- CAUTION: To avoid electrical overload, total connected lamp load (factory and field installed) should not exceed output rating.
- Do not use this equipment for other than intended use.

SAVE THESE INSTRUCTIONS

Shut off AC power to branch circuits to which units will be connected. All wiring should be per National Electrical Code and local regulations.

GENERAL INSTRUCTIONS

MAINTENANCE

None required. Replace the batteries as needed. However, we recommend that the equipment be tested regularly in accordance with local codes.

OPERATION


Press and release the test button. The LED heads will turn on and the LED indicator will flash. After 30 seconds, the LED heads will turn off and the LED indicator will stay on.

TROUBLE SHOOTING GUIDE

If LED heads or LED indicator does not illuminate, check the following:

1. Check AC supply. Ensure that AC branch circuit is energized.
2. Battery is shorted or battery is not connected.
3. Battery is discharged. Permit unit to charge for 24 hours then re-test.
4. If above trouble shooting hints do not solve any problem, contact factory for assistance.

WIRING DIAGRAM - Fig 1

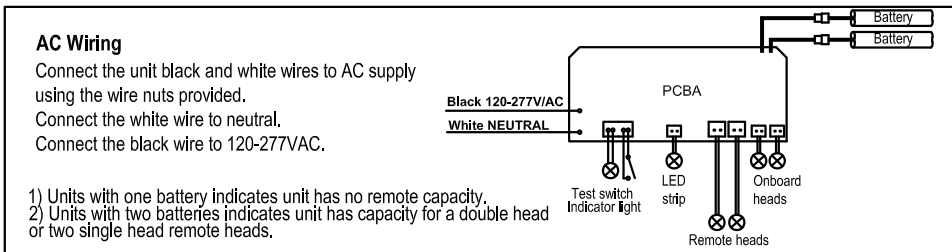

Mounting Instructions

Wall Mounting (see Fig 3)

1. Insert a flat blade screwdriver into the slots and pry off front cover from fixture (see Fig 2).
2. Knock out center hole of back plate and appropriate mounting screw knockouts on the back plate.
3. Feed AC supply leads through center hole of back plate and mount fixture to the J-Box using provided screws.
4. Make proper electrical connections according to the wiring diagram.
5. Push excess wire into J-Box.
6. Plug battery connector into PCBA and connect remote wires if this unit has remote capability. Refer to below instructions for remote head wiring connections.
7. Reinstall front cover onto fixture and remove chevron(s) from EXIT panel as required by pressing on them from behind.
8. Restore power. Press and release the test button. The LED lamp heads will turn on.
9. Adjust the lamp heads as required.

Side or Ceiling Mounting (see Fig 4, Fig 5)

1. Attach crossbar to junction box and set the crossbar so that the longer blade is touching the J-Box.
2. Insert a flat blade screwdriver into the slots and pry off front cover from fixture (see Fig 2).
3. If double face is desired, replace back plate with additional face plate provided.
4. Remove mounting hole plug on the top or side of the fixture and assemble the canopy (see Figs 4 & 6).
5. Feed AC supply leads through mounting hole on housing.
6. Make proper electrical connections according to the wiring diagram.
7. Push excess wire into J-Box. Use screws to tighten the canopy to the crossbar so that the canopy is securely fastened and tight against the wall.
8. Plug battery connector into PCBA and connect remote wires if the unit has remote capability. Refer to instructions below for remote head connections.
9. Reinstall front cover onto unit and remove chevron(s) from front cover as required by pressing on them from behind.
10. Restore power. Press and release the test button. The LED lamp heads will turn on.
11. Adjust the lamp heads as required.

Connecting Remote head(option) (see Fig 8)

Connect extended remote lamp head wires to remote wires using wire nuts, yellow is positive(+), purple is negative(-).

Model	Remote Capability
CLCN2R	2pcs CLR1 or 1pc CLR2

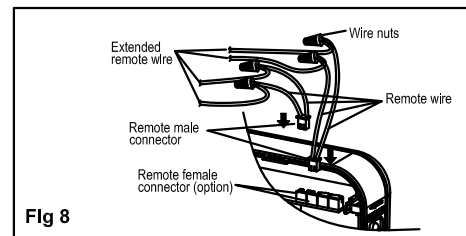


Fig 8

Open fixture

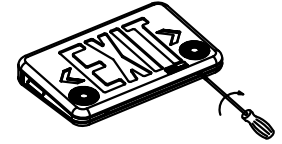


Fig 2

Wall mount

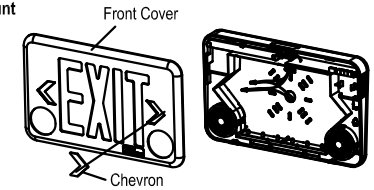


Fig 3

Side mount

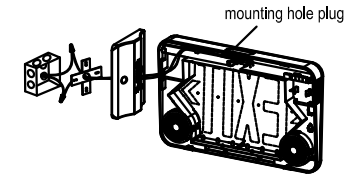


Fig 4

Ceiling mount

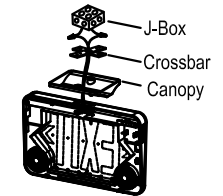


Fig 5

Canopy assembly




Fig 6

Insert canopy into housing at 10 degree angle and twist.
 CAUTION: Trying to remove canopy after it is locked in place may cause damage.

Lamp head adjust

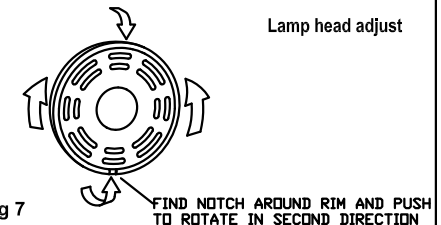


Fig 7

CLC INSTRUCTIONS SHEET

INSTALLATION INSTRUCTION

SELF-DIAGNOSTICS/SELF-TESTING OPTION

SAVE THESE INSTRUCTIONS

When AC power is supplied to fixture, the unit will automatically initiate a self-test and self-diagnostic test as follows:

1. Self-testing

- (1) One-minute self-testing every month
- (2) 30 minutes self-testing every six months

2. Self-diagnostics, dual color LED lamp indicator shows the following status

- (1) Green color: ON: Normal
Blinking: Testing

- (2) Red color (Service Alert)

- (3) Service Alert LED Code (Red color LED lamp indicator)

●	One blink ON/pause (4 seconds)	Battery is not connected
●●	Two blink ON/pause (4 seconds)	Battery is shorted or battery voltage has dropped below acceptable level
●●●	Three blink ON/pause (4 seconds)	Charger board circuit fault
●●●●	Four blink ON/pause (4 seconds)	transfer fault (transfer circuit fault)
●●●●●	Five blink ON/pause (4 seconds)	Emergency lamp fault
●●●●●●	Six blink ON/pause (4 seconds)	Remote head's emergency lamp fault(if installed)
●●●●●●●	Seven blink ON/pause (4 seconds)	EXIT LED strip fault

CAUTION:

After resolving any fault, press and hold the test switch for 2 seconds. The LED indicator will either be continuously glowing or blinking green indicating that the equipment is in charging mode.

3. For manual test, press test button as follows:

Press test button once	(within 2 seconds)	30 second test
Press test button twice	(within 2 seconds)	3 minutes test
Press test button 3 times	(within 2 seconds)	30 minutes test
Press test button 4 times	(within 2 seconds)	90 minutes test

4. Fire Alarm function:

EXIT sign will blink when it is receiving a 6-24VDC signal from the buildings fire alarm equipment.

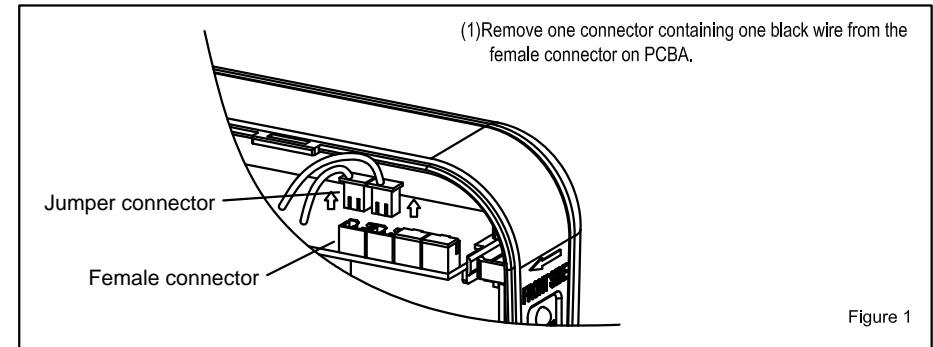


Figure 1

- (2) Plug the male connector of the yellow/purple remote harness supplied into the empty female connector from step 1.
- (3) Connect extended remote head wires to the remote wires using wire nuts provided.

Yellow is positive(+) and the purple is negative(-).

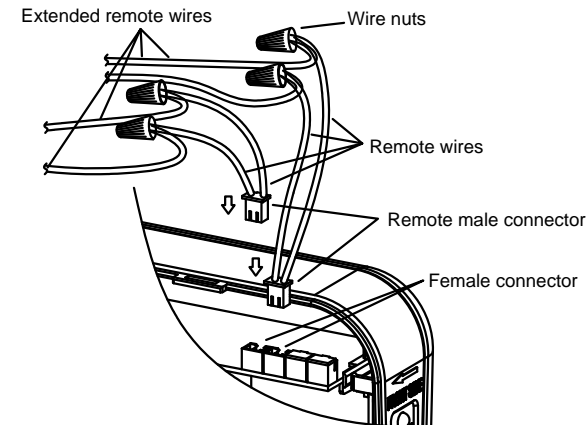


Figure 2

© 2018 Signify Holding. All rights reserved. This document contains information relating to the product portfolio of Signify which information may be subject to change. No representation or warranty as to the accuracy or completeness of the information included herein is given and any liability for any action in reliance thereon is disclaimed. The information presented in this document is not intended as any commercial offer and does not form part of any quotation or contract. All trademarks are owned by Signify Holding or their respective owners.

Signify North America Corporation
200 Franklin Square Drive
Somerset, NJ 08873, USA
Tel. 855-486-2216
www.chloride-lighting.com